




MODEL: 21SC5

CONVECTION MICROWAVE OVEN

USER MANUAL

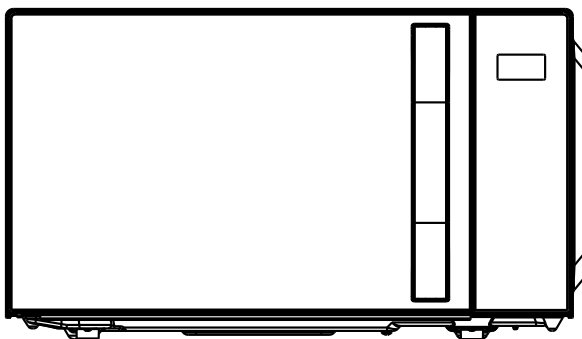

PLEASE READ THESE OWNERS'S MANUAL INSTRUCTIONS CAREFULLY
BEFORE OPERATION AND KEEP IT FOR FUTURE REFERENCE.

Please record the details of your Microwave Oven below for future reference:

Serial no. _____

Purchase Date _____

Warranty _____

Customer Copy _____

CONTENT	1
SPECIFICATIONS.....	1
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.....	2
IMPORTANT SAFETY INSTRUCTIONS	2
INSTALLATION GUIDE	4
GROUNDING INSTRUCTIONS	4
RADIO INTERFERENCE	5
BEFORE CALLING FOR SERVICE.....	5
COOKING TECHNIQUES	5
COOKING UTENSILS GUIDE	6
PRODUCT DIAGRAM.....	6
CONTROL PANEL	7
OPERATION INSTRUCTIONS	8
SETTING THE CLOCK.....	8
TIMER FUNCTION.....	8
MICROWAVE COOKING	8
EXPRESS COOKING	9
GRILL	9
CONVECTION	9
MICROWAVE+CONVECTION	9
OfC-H1/H2	10
AUTO DEFROST	10
SMART CHOICE.....	10
BATTER FERMENT	11
MULTI-STAGE COOKING.....	11
CHILD LOCK	11
PROTECTION	11
AUTO COOK.....	12
CLEANING AND CARE	13

SPECIFICATIONS

Power Supply	230V/50Hz
Power Consumption (Microwave)	1200W
Power Consumption (Grill)	1250W
Power Consumption (Convection)	1250W
Rated Microwave Power Output	800W
Operation Frequency	2450MHz
Outside Dimensions	262mm(H)×452mm(W)×401mm(D)
Oven Cavity Dimensions	210mm(H)×315mm(W)×329mm(D)
Oven Capacity	21Litres
Net Weight	Approx. 13.6kg

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
 - a) Door (including any bent),
 - b) Hinges and latches (broken or loosened),
 - c) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except qualified service personnel.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

WARNING!--To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance and keep for future reference.
2. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. **WARNING!**--Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
6. **WARNING!**--When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated
7. To reduce the risk of fire in the oven cavity:
 - When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition.
 - Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
 - The microwave oven is intended for heating food and beverages. Drying of clothing and heating of

warming buttons, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

8. **WARNING!**--Liquid or other food must not be heated in sealed containers since they are liable to explode.
9. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
10. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
12. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Utensils should be checked to ensure that they are suitable for use in microwave oven.
16. **WARNING!**--It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
17. This Microwave complies with EN 55011/CISPR 11, in this standard it belong to Class B Group 2 classification. Group 2 equipment: group 2 contains all ISM RF equipment in which radio-frequency energy in the frequency range 9 kHz to 400 GHz is intentionally generated and used or only used locally, in the form of electromagnetic radiation, inductive and/or capacitive coupling, for the treatment of material, for inspection/analysis purposes, or for transfer of electromagnetic energy. Class B equipment is equipment suitable for use in locations in residential environments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. The microwave oven is only used in freestanding.
21. **WARNING!**--Do not install oven over a range cook top or other heat-producing appliance. if installed could be damaged and the warranty would be void .
22. The microwave oven shall not be placed in a cabinet.
23. The door or the outer surface may get hot when the appliance is operating.
24. **WARNING!**--Accessible parts may become hot during use. Young children should be kept away.
25. During use the appliances becomes hot. Care should be taken to avoid pressing heating elements inside the oven, for cooking ranged and ovens.
26. The temperature of accessible surfaces may be high when the appliance is operating.
27. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
28. **WARNING!**--If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

29. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
30. The microwave oven is for household use only and not for commercial use.
31. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
32. Please secure the turntable before you move the appliance to avoid damages.
33. **CAUTION!**--It is dangerous to repair or maintain the appliance by no other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing the power cord or the lighting as well. Send the appliance in these cases to our service centre.
34. The microwave oven is intended for defrosting and cooking of food only.
35. Use gloves if you remove any heated food.
36. **CAUTION!** Steam will escape, when opening lids or wrapping foil.
37. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
38. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

INSTALLATION GUIDE

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING!**--Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow minimum 20cm of free space necessary above the top surface of the oven and 5cm at both sides. The microwave oven rear plate must be placed close to the wall. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a

grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING!—Improper use of the grounding plug can result in a risk of electric shock.

Note:

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

BEFORE CALLING FOR SERVICE

Before asking for service, please check each item below:

- Check to ensure the oven is plugged in securely. If not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- Check to ensure the control panel is programmed correctly and the timer is set.
- Check to ensure the door is securely closed, engaging the door lock system. If the door is not properly closed, the microwave energy will not flow inside.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

COOKING TECHNIQUES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.

3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

COOKING UTENSILS GUIDE

1. Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic rim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.


The list below is a general guide to help you select the correct utensils.

Cookware	Microwave	Grill	Convection	Combination
Heat-Resistant Glass	Yes	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes	Yes
Microwave-Safe Plastic Dish	Yes	No	No	No
Kitchen Paper	Yes	No	No	No
Metal Tray	No	Yes	Yes	No
Metal Rack	No	Yes	Yes	No
Aluminum Foil & Foil Container	No	Yes	Yes	No


* Combination: applicable for both " microwave +grill", and "microwave+ convection" cooking.

PRODUCT DIAGRAM

1. Door Safety Lock System
2. Oven Window
3. Shaft
4. Roller Ring
5. Control Panel
6. Wave Guide
(Please do not remove the mica plate covering the wave guide)
7. Glass Tray
8. Grill Heater
9. Metal Racks
10. Bake Tray

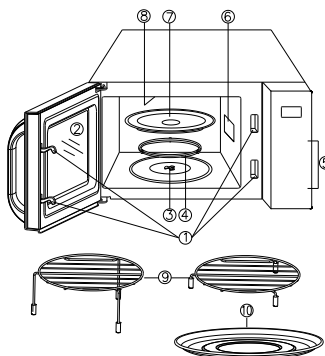

CONTROL PANEL

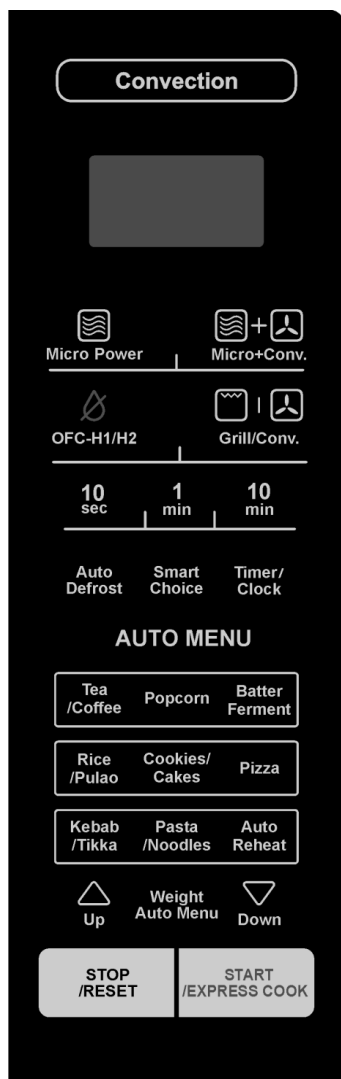

- **DISPLAY**

Cooking time, power, indicators are displayed.

- **MICRO POWER**

Press to select microwave power level.

- **MICRO+CONV.**

Press to set microwave and convection combination cooking program.

- **OFC-H1/H2**

Press to set OFC-H1/H2 function.

- **GRILL/CONV.**

Press once to set grill cooking program.

Press twice to set convection cooking program.

- **NUMBER BUTTONS**

Press to set time.

- **AUTO DEFROST**

Press to defrost food based on weight.

- **SMART CHOICE**

Press to select keep warm, deodorization, clean, fermentation and power saving function.

- **TIMER/CLOCK**

Press to set clock time or timer function.

- **AUTO COOK MENUS**

Instant settings to cook popular foods.

- **UP/DOWN**

Press to set food weight or servings.

- **STOP/RESET**

Press once to temporarily stop cooking, or twice to cancel cooking altogether.

It is also used to set child lock.

- **START/EXPRESS COOK**

Press to start cooking programs.

Simply press it repeatedly to set cooking time and cook immediately at full power level.

OPERATION INSTRUCTIONS

- When the oven plugged in, a beep will sound and the display will show "1:01" and "CLOCK".
- In the process of setting, wait for about 30 seconds the oven will return to standby mode.
- During cooking, press STOP/RESET button once to pause the program, then press START/EXPRESS COOK button once to resume. But if press STOP/RESET button twice, the program will be cancelled.
- After cooking ends, the display will show End and beep will sound every two minutes until user press any button or open the door.
- In standby mode, if there is 5 minutes without any operation, the display will show ":". And the oven will return to standby mode by pressing any button or opening and closing oven door once.
- In child lock mode, if there is 5 minutes without any operation, the display will show ":". And the display will show clock time and child lock interface by pressing any button or opening and closing oven door once.

SETTING THE CLOCK

This is a 12- or 24- hour clock. You can choose to set the clock time in 12- or 24- hour by pressing the TIMER/CLOCK button.

1. In standby mode, press and hold TIMER/CLOCK button for 3 seconds to select 12- hour clock, press it again to select 24- hour clock.
2. Use number buttons to set correct time.
3. Press TIMER/CLOCK or START/EXPRESS COOK button to confirm.

TIMER FUNCTION

1. In standby mode or during cooking, press TIMER/CLOCK button once.
2. Use number buttons to set desired time. The longest time is 99 minutes and 50 seconds.
3. Press TIMER/CLOCK or START/EXPRESS COOK button to confirm.

NOTE: When the countdown ends, the buzzer will beep to remind you. You can check the countdown time by pressing TIMER/CLOCK button, if STOP/RESET button is pressed when the display shows the time, the function can be cancelled.

MICROWAVE COOKING

1. In standby mode, press MICRO POWER button repeatedly to select power level.
2. Use number buttons to set cooking time. The longest time is 99 minutes and 50 seconds.
3. Press START/EXPRESS COOK button to confirm.

Select power level by pressing MICRO POWER button:

Press MICRO POWER	Power (Display)	Press MICRO POWER	Power (Display)
Once	100% (P100)	7 times	40% (P-40)
Twice	90% (P-90)	8 times	30% (P-30)
3 times	80% (P-80)	9 times	20% (P-20)
4 times	70% (P-70)	10 times	10% (P-10)
5 times	60% (P-60)	11 times	0% (P-00)
6 times	50% (P-50)		

NOTE: During microwave cooking, you can check the power level by pressing MICRO POWER button. If you want to set 100% power level, omit the first step.

EXPRESS COOKING

Use this feature to program the oven to start at 100% power conveniently. In standby mode, press START/EXPRESS COOK button repeatedly to set cooking time. The oven will start working automatically. The longest cooking time is 10 minutes.

GRILL

Grill cooking is particularly useful for thin slices of meat, steaks, chops, kebabs, sausages and pieces of chicken. It is also suitable for hot sandwiches and au gratin dishes.

1. In standby mode, press GRILL/CONV. button once.
2. Use number buttons to set cooking time. The longest time is 99 minutes and 50 seconds.
3. Press START/EXPRESS COOK button to confirm.

CONVECTION

To cook with convection, press GRILL/CONV. button repeatedly to set the desired convection temperature. This oven has ten different cooking temperatures: 110°C→120°C→130°C→140°C→150°C→160°C→170°C→180°C→190°C→200°C.

To preheat and cook with convection:

Your oven can be programmed to combine preheating and convection cooking operations.

1. In standby mode, press GRILL/CONV. button twice, then press it repeatedly to select temperature.
2. Press START/EXPRESS COOK button to confirm. Beeps will sound when the designated temperature is reached.
3. Open the door and place container of food at the center of the turntable.
4. Use number buttons to set cooking time. The longest time is 99 minutes and 50 seconds.
5. Press START/EXPRESS COOK button to start.

NOTE: The longest preheat time is 30 minutes, and the preheat time cannot be set. When the oven reaches preheat temperature, the oven will sound beep every 5 seconds for 30 minutes. If there is not any operation within the 30 minutes, the cooking program will end automatically. During cooking, you can check the convection temperature by pressing GRILL/CONV. button.

To cook with convection:

1. In standby mode, press GRILL/CONV. button twice, then press it repeatedly to select temperature.
2. Use number buttons to set cooking time. The longest time is 99 minutes and 50 seconds.
3. Press START/EXPRESS COOK button to confirm.

NOTE: During cooking, you can check the convection temperature by pressing GRILL/CONV. button.

MICROWAVE+CONVECTION

1. In standby mode, press MICRO+CONV. button repeatedly to select temperature (110°C→140°C→170°C).
2. Use number buttons to set cooking time. The longest time is 99 minutes and 50 seconds.
3. Press START/EXPRESS COOK button to confirm.

NOTE: During cooking, you can check the combination power level by pressing MICRO+CONV. button.

OFC-H1/H2

1. In standby mode, press OFC-H1/H2 button once or twice, the display will show "H-1" or "H-2".
2. Press START/EXPRESS COOK button to start. The oven will pause and sound after preheating 2 minutes.
3. Use number buttons to set cooking time. The longest time is 99 minutes and 50 seconds.
4. Press START/EXPRESS COOK to start.

NOTE: After preheating, the buzzer emits two beeps every 10 seconds for 1 minute. If there is not any operation within 1 minute, the buzzer will sound five beeps and the oven will return to standby mode.

AUTO DEFROST

The defrosting time and power level are automatically set once the food weight is programmed. The food weight ranges from 100 g to 1800 g.

1. In standby mode, press AUTO DEFROST button once.
2. Press UP or DOWN button repeatedly to select food weight.
3. Press START/EXPRESS COOK button to confirm.

NOTE: During defrosting, the system will pause and sound beeps to remind user to turn food over, after that, press START/EXPRESS COOK button to resume the defrosting.

SMART CHOICE

To keep warm:

1. In standby mode, press SMART CHOICE button once.
2. Press START/EXPRESS COOK button to start.

NOTE: The keeping warm time is 30 minutes.

For deodorization:

1. In standby mode, press SMART CHOICE button twice.
2. Press START/EXPRESS COOK button to start.

NOTE: The deodorization time is 5 minutes.

To clean:

1. In standby mode, put a bowl of 500 ml water and a slice of lemon into the oven and close the door.
2. press SMART CHOICE button 3 times.
3. Press START/EXPRESS COOK button to start.

NOTE: The cleaning time is 10 minutes.

For fermentation:

1. In standby mode, press SMART CHOICE button 4 times.
2. Press START/EXPRESS COOK button to start.

NOTE: The fermentation time is 30 minutes.

To save power:

To set: In standby mode, press SMART CHOICE button 5 times, the display will turn off and the oven will enter power saving mode.

To cancel: In power saving mode, open or close the oven door once or press any button to light up the display screen.

BATTER FERMENT

Fermentation is essential for various batters in Indian cuisine such as Dosa batter, Idli batter, Medu wada batter, Appam batter, Jalebi batter. This program is designed to Re-create suitable warm temperature inside the oven cavity, irrespective of the outside room temperature. Suitable for regions with cold climate, facing difficulties in batter fermentation especially during winters.


1. In Standby mode, place the batter inside the cavity.
2. Press BATTER FERMENT button once.
3. Press START/EXPRESS COOK button to start.

NOTE: The fermentation time is 50 minutes

MULTI-STAGE COOKING

Your oven can be programmed for up to 3 automatic cooking sequences.

Suppose you want to set the following cooking program.

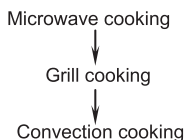

1. Input the microwave cooking program. Do not press START/EXPRESS COOK button.
2. Input the grill cooking program. Do not press START/EXPRESS COOK button.
3. Input the convection cooking program.
4. Press START/EXPRESS COOK button.

NOTE: Auto cook menus, weight defrost and OFC-H1/H2 function cannot be set in multi-stage cooking program.

CHILD LOCK

Use to prevent unsupervised operation of the oven by children.

To set: In standby mode, press and hold STOP/RESET button for 3 seconds, then a beep will sound, the oven will auto enter child lock mode and the lock indicator light will turn on. In the lock state, all buttons are disabled.

To cancel: Press and hold STOP/RESET button for 3 seconds, then a beep will sound and the indicator light will disappear.

PROTECTION

OVERHEATING PROTECTION: When the system enters into super high temperature protection status, the digital display shows "E01" and continues to beep. After troubleshooting, press STOP/RESET button, the system comes back to normal standby mode.

LOW TEMPERATURE PROTECTION: When the system enters into super low temperature protection status, the digital display shows "E02" and continues to beep. After pressing STOP/RESET button, the system comes back to normal standby mode.

SENSOR MALFUNCTION PROTECTION: The system enters into protection mode when the system sensor is short circuited. The display shows "E03" and continues to beep. After troubleshooting, press STOP/RESET, the system comes back to normal standby mode.

BUTTON ADHESION PROTECTION

In any state, if any button on the control panel is adhesion for 60 seconds, the program stops working immediately, the display shows "FAIL" and the system will sound beep. If the button is adhesion all the time, beep will sound every one minute. Any button is invalid at this time. After troubleshooting, press STOP/RESET button to return standby mode.

COOLING FEATURE

This system of the microwave oven has the feature of cooling. As for cooking mode which cooking time above 2 minutes, after finishing cooking, the oven fan will work about 3 minutes automatically to cool the oven for prolonging the life of the oven.

AUTO COOK

For the following food or cooking mode, it is not necessary to program the cooking time and power. It is sufficient to indicate the type of food that you want to cook as well as the weight or servings of this food.

1. In standby mode, press the corresponding menu button once
2. Press UP or DOWN button repeatedly to select food weight or servings.
3. Press START/EXPRESS COOK button to start.

Auto cook menus:

Food	Note
Tea/Coffee (200 ml/cup, 1-3 cups)	<ul style="list-style-type: none">• For Kebab/Tikka, during cooking, the oven will pause and sound to remind you to turn food over, then press START/EXPRESS COOK to resume.• The result of auto cook depends on factors such as the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the oven. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly.
Rice/Pulao (150-600 g)	
Pasta/Noodles (100 g, 200 g, 300 g)	
Popcorn (100 g)	
Cookies/Cakes (475 g)	
Pizza (90 g, 180 g)	
Auto Reheat (200-800 g)	
Kebab/Tikka (800-1400 g)	

CLEANING AND CARE

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. A steam cleaner is not be used.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
8. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild, soapy water or in a dishwasher. When removing the roller ring, be sure to replace it in the proper position.
10. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. If the light bulb burns out, please contact customer service to have it replaced.
12. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
13. Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.
14. When the microwave oven with grill function is first used, it may produce slight smoke and smell. This is a normal phenomenon, because the oven is made of a steel plate coated with lubricating oil, and the new oven will produce fumes and odor generated by burning the lubricating oil. This phenomenon will disappear after a period of using.

About E-waste

E-waste or Electronic Waste or Waste Electrical and Electronic Equipment (WEEE) are the terms used to describe old, end-of-life or discarded appliances which are operated using electricity.

Do's and don'ts for customers

Do's

- Always dispose of products that have reached end-of-life by calling an Authorized local E-waste Recycler.
- Always drop off your used/discarded or end-of-life electronic products, batteries or any accessories at your nearest Authorized E-Waste Recycler or E-waste collection center.
- Wherever possible or as instructed, separate the packaging material according to responsible waste disposal and recycling options.
- Check with your nearest dealer or electronic showroom if any scheme is available with return of old and end-of-life electronic item.



Don'ts

- Do not dismantle your electronic products on your own.
- Do not throw electronics in bins having "Do Not Dispose" sign.
- Do not give E-waste to informal and unorganized sectors like Local Scrap Dealer and Rag Pickers.
- Do not dispose off your product in garbage bins along with municipal waste that ultimately reaches landfills.

Risks of improper handling of E-waste

E-waste usually includes components which if disposed off improperly hold adverse environmental consequences such as air, water, and soil pollution and also pose risks to human health. By ensuring this product is disposed off correctly, you will help prevent potential negative consequences for the environment and human health.

Components and materials used in the manufacture of this product are RoHS compliant.

For detailed information and disposal request

Please visit our website <https://www.ifbappliances.com/e-waste> or Contact IFB Care at 080 458 45678 and provide your details to our representative to raise a request for product to be picked up for recycling and safe disposal.

WARRANTY

IFB Industries Limited. ("The Company") warrants to the original domestic purchase of this Microwave oven ("Appliances") that it is free from defects in workmanship & materials. During 12 months from the date of purchase of the new microwave oven model, all the parts of the microwave oven and 36 months magnetron & cavity, shall be replaced or repaired free of charge, on intimation to the Company I Company's authorized service centre nearest to the place where the appliance is installed. This warranty is subject to Limitations of Warranty.

1. This warranty is not valid in case of the following events.

- a) If the warranty card is not fully and properly filled in and signed at the time of purchase I installation by the company's authorised dealer I service engineer.
- b) If the completed warranty card is not presented to the authorised personnel at the time of service I repair.
- c) If the appliance is not used in accordance with manufacturer's instructions given in the Operating Manual.
- d) If the appliance has been serviced, repaired, opened or tampered by any unauthorized personnel.
- e) If defects arise caused by accidents, alteration, misuse, neglect, abuse, substitution of original components with spurious I non-genuine components, attack by household pests I rodents, fire, flood, earth-quake, lightning and I or any other acts of God natural calamities.
- f) If damages occur by improper electrical, circuit outside the appliance or by any defective electrical supply thereof.
- g) If the machine serial number on the appliance is defaced, missing or altered.
- h) If the appliance is taken out of India.

2. This warranty does not cover any type of painting, plating including rusting etc or defects thereof.

3. This warranty does not cover normal wear and tear of parts.

4. Liability for consequential damages is neither accepted nor implied.

5. Parts replaced or repaired under this warranty are warranted throughout the remaining of the original warranty period.

6. Company is not liable for any delay in servicing due to reasons beyond the control of the company or any of its authorised service center.

7. This warranty is not applicable, if the built in oven is used for commercial purpose of at places like Institutions, Hotels, Hostels, Hospitals, Community Halls and other similar applications.

8. For any service under this warranty beyond city, town, municipal limits from the Company, authorized service centre, a fixed charge of Rs. 250 /- will be collected from the customer in addition to the actual to and fro charges by the shortest route.

Alternatively the customer can bring the appliance to the nearest service centre for carrying out the necessary repairs, at customer's own cost.

9. During the warranty period whenever the appliance is shifted from the original city of purchase to another city , town where service is provided by the company's authorized service agent, a warranty transfer charge of Rs. 300 /- will be collected from the customer by the company's authorized service agent. The above charges also include the reinstallation of the appliance. However in case of transfer to a city where the company provides direct service, a nominal charge of Rs. 250 /- only will be collected from the customer towards reinstallation. The Company, however, shall not undertake the responsibility of shifting I transferring the appliance from the location where the appliance was originally installed.

10. This warranty is issued subject to the jurisdiction of Kolkata courts, and I or other judicial/ quasi judicial forums having jurisdiction over the registered office of the Company.

Note: For all types of repairs I maintenance under warranty, the appliance shall be brought to the nearest **Company service centre or its authorised service agent.**

CUSTOMER COPY

Mr./Mrs./Ms -----
Address -----

Telephone No.: -----

Model Name: -----
Serial No.: -----
Date of Purchase: -----
Cash Memo No.: -----
Dealer Name and: -----

Address stamp: -----

Service Station Copy

Mr./Mrs./Ms -----

Address -----

Pin code : -----
Telephone No.: (R) ----- (0) -----
Model Name: -----
Serial No.: -----
Date of Purchase: -----

Cash Memo No.: -----

Products Owned by the customer:

Products Owned by the customer:(Please tick in the appropriate box.)

- | | | | | |
|--|--|----------------------------------|---|-------------------------------------|
| <input type="checkbox"/> Washing Machine | <input type="checkbox"/> Refrigerator | <input type="checkbox"/> ColorTV | <input type="checkbox"/> 100% Clothes Dryer | <input type="checkbox"/> Dishwasher |
| <input type="checkbox"/> Car | <input type="checkbox"/> Air Conditioner | | | |

IFB Industries Limited
Regd. off.: 14 Taratala Road
Kolkata – 700088