

IFB

DeepClean®


POWERED BY 


WASHING MACHINE USER MANUAL

Diva Plus VXS/BXS 6008

Elena SXS/SBS/BLS 6510


UF421PKMAN536 I

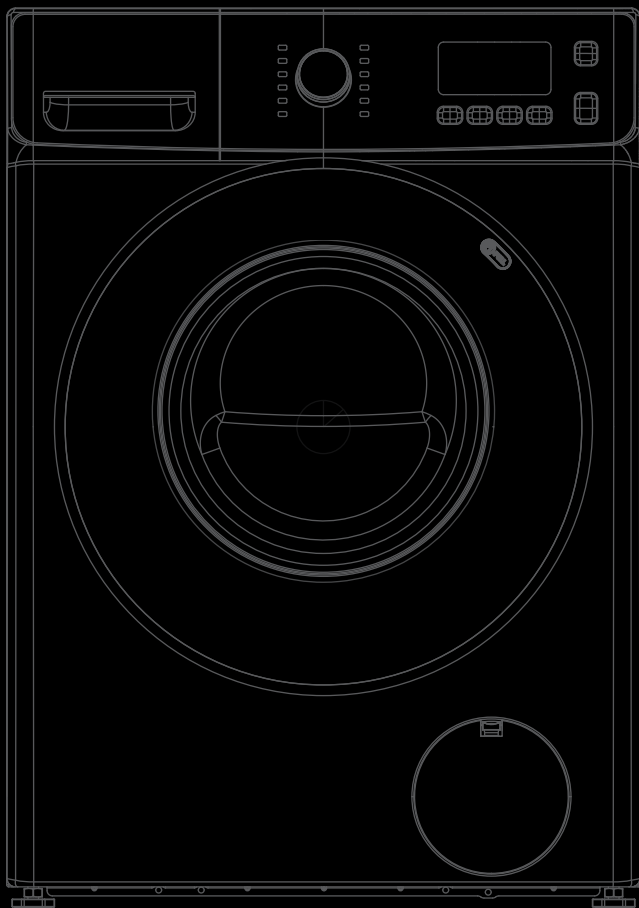

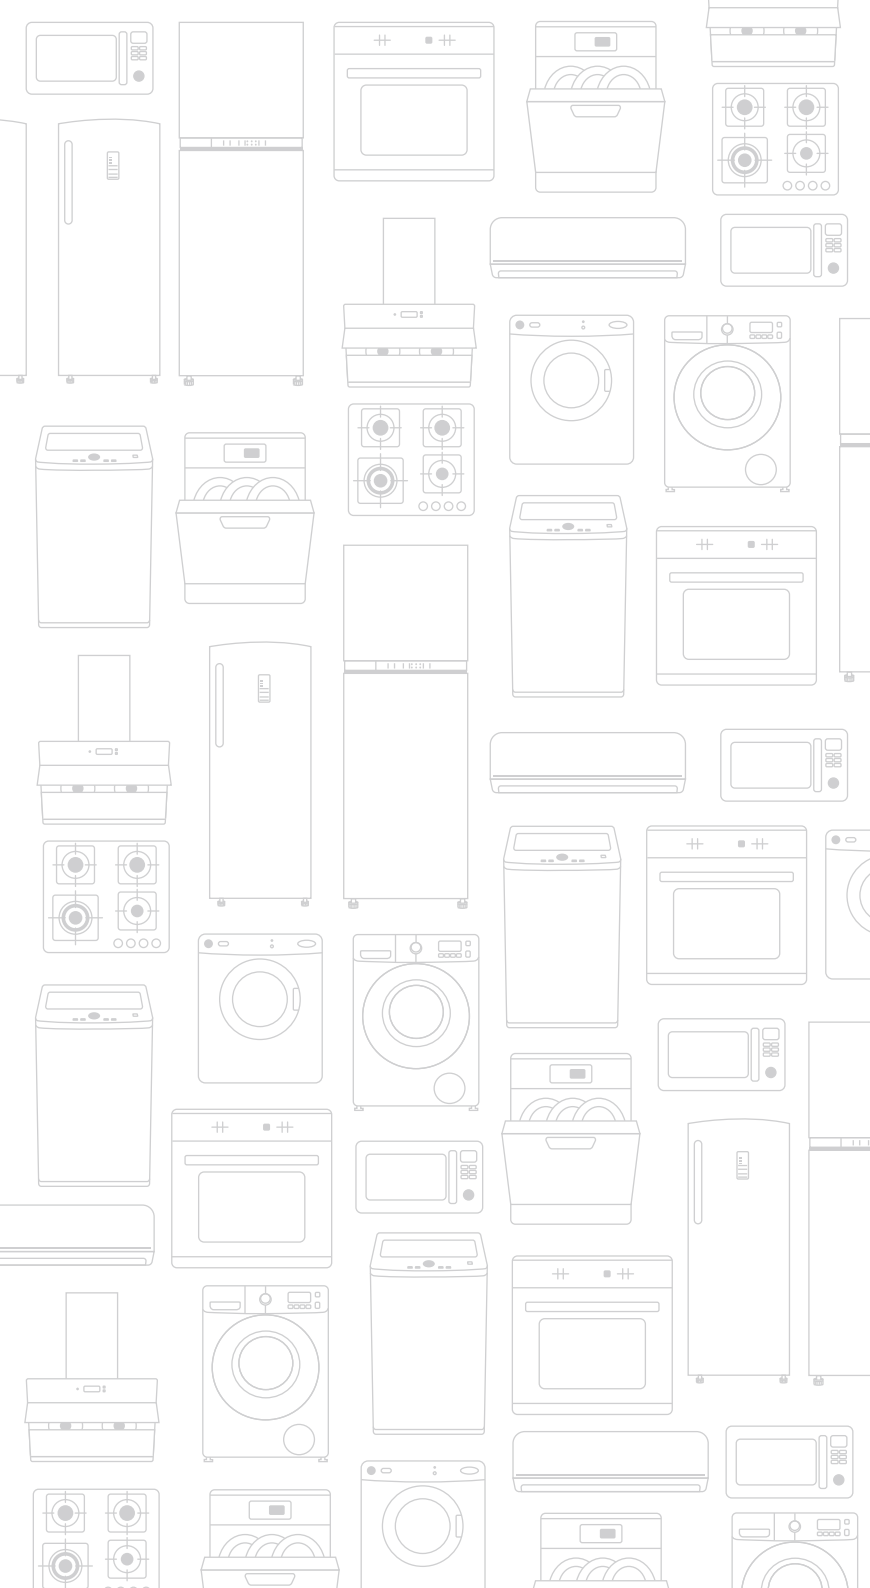

Welcome to the IFB Family

Get ready to experience excellence
in washing and long lasting peace
of mind. Happy Laundry Days to you!

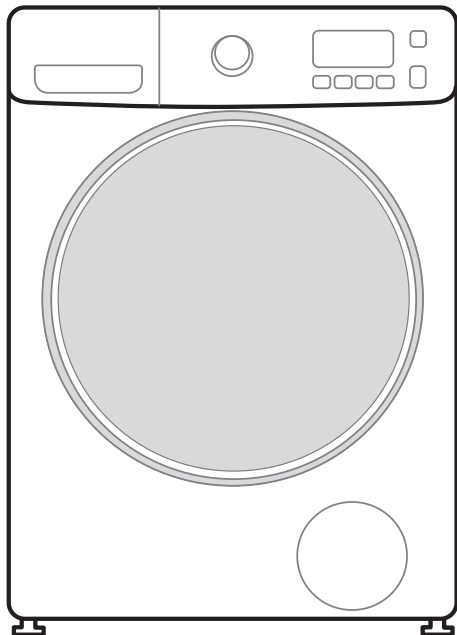

Front Load Washer

Contents

The A to Z of Your Washing Machine	06
---	----

The Display Panel	08
--------------------------	----

Safety Guidelines

Installation	10
--------------	----

Instructions	12
--------------	----

Caution	13
----------------	----

About eWaste	17
---------------------	----

Section 1 Getting Started

With Your Washing Machine

Installation and Safety Guidelines	19
------------------------------------	----

Before You Start	23
------------------	----

Section 2 Running Your Machine

6 Easy Steps For Doing Your Laundry	24
-------------------------------------	----

Finishing	30
-----------	----

Program Guide	31
---------------	----

Wash Options	32
--------------	----

Wash Guide Map	37
----------------	----

Key Features	41
--------------	----

Section 3 Getting More From Your Machine

Tips for Best Results	46
-----------------------	----

Stain Treatment	49
-----------------	----

Maintenance and Cleaning	53
--------------------------	----

Section 4 Useful Information

Troubleshooting	58
-----------------	----

Display & Error Codes	67
-----------------------	----


Technical Specifications	71
--------------------------	----

Revisions Sheet	72
------------------------	----


PRECAUTIONS

This appliance meets the required safety standards, but using it improperly could cause injury or property damage. Make sure to read this manual carefully—it covers safety, installation, use and maintenance. Use detergents with low foam to prevent any problems. Following these guidelines will help you get the most out of your new washing machine and keep it running smoothly while avoiding accidents or damage.

The A to Z of Your Washing Machine

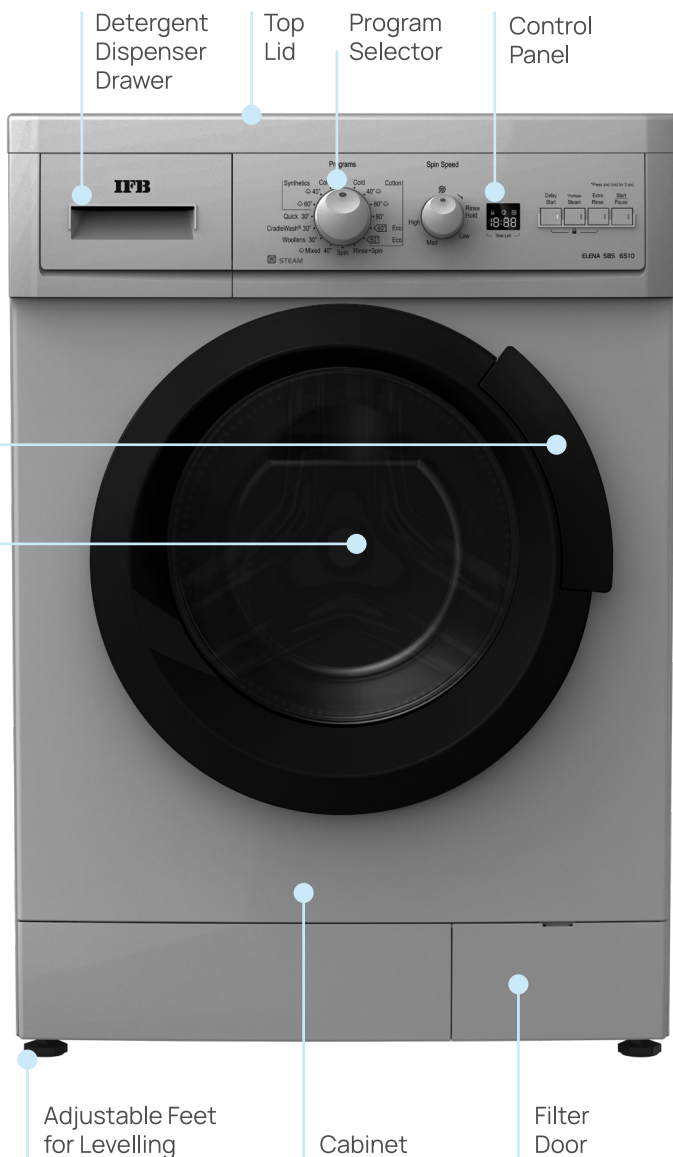

The A to Z of Your Washing Machine

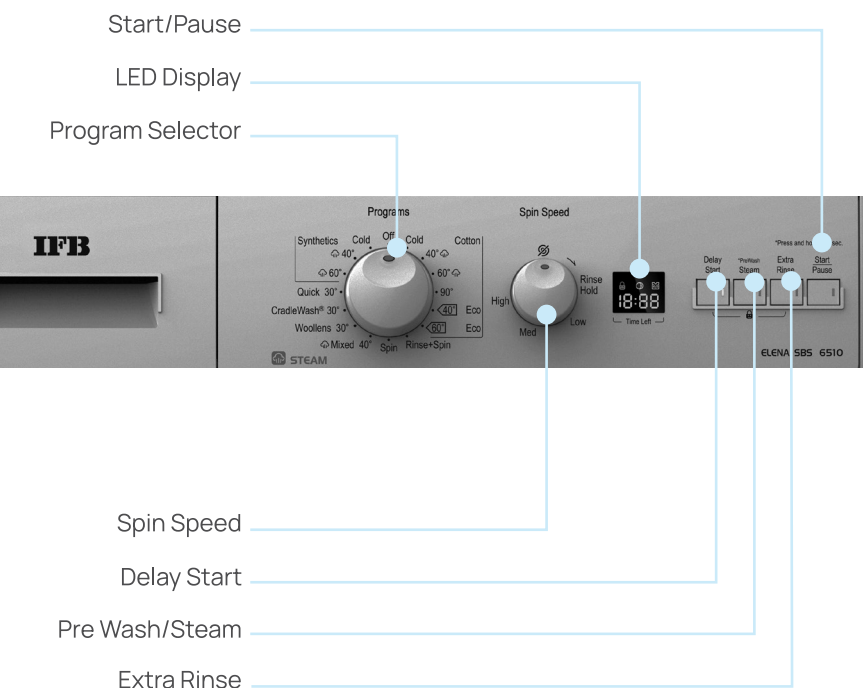

The Display Panel



1 SPIN SPEED

Knob to select the different spin speeds available.

2 TIME LEFT

Glows to indicate the time left.

3 CHILD LOCK

Glows when Child Lock is selected, flashes to indicate deselection.

4 DOOR STATUS

Glows when door is open, flashes during door unlocking, goes OFF when door is locked.

5 STEAM

Touch this button to Select/Deselect Steam function.

The Display Panel



6 DELAY START

Button to select the Delay Start option.

7 STEAM/PRE WASH

Button to select Steam/Pre Wash option

8 EXTRA RINSE

Button to select the Extra Rinse option.

9 START/PAUSE

Touch this button once to START/PAUSE the machine.



Safety Guidelines

FOR INSTALLATION

Read all instructions & explanations carefully before installation. Choose the area where the machine will be placed carefully after reading the



Keep the packaging material. It may come in handy when shifting residence.

Not removing all packaging and transit bolts before using your appliance could damage your appliance. Please do not operate your machine until the transit bolts have been removed.



Pre-installation plumbing and electrical connections must be handled by qualified fitters, electricians, or technicians.

All washing machine installation work must be carried out only by authorised IFB Care Service Personnel.

Use only the new hoses provided with the machine; old hoses should never be reused.

Do not connect your machine to a hot water supply.

This machine works best with water pressure between 0.3 and 10 bar (that's about 3.5 to 10 litres/ minute). If the water pressure is too low, your machine might malfunction.



Your machine comes with ventilating openings on the base. Always put it directly on the floor after removing any carpets.

Keep your machine safe from direct sunlight and rainfall.

Avoid installing the machine in damp areas or bathrooms exposed to direct showers

Don't put the machine on a sloping, uneven, or unstable surface.

Make sure your machine is installed in a room with adequate ventilation. Don't pick a room without windows. And make sure there's at least 4 inches (100 mm) of space between the back of the machine and the wall.

Don't put your washing machine in places where the temperature is below freezing. If hoses freeze, they could burst when under pressure. Also, the electronic control unit might not work if it's too cold (below freezing) or too hot (above 50 °C).

A concrete floor is recommended for installation, as it reduces vibration during the spin cycle compared to wooden floorboards.

Ensure the machine is placed on a stable, level surface to prevent vibrations during operation. All four washer feet should be levelled and balanced against the floor.

Before cleaning your machine, make sure you disconnect the main electricity supply & remove the plug from the socket.

Don't use your appliance near flammable stuff like oil, benzene, or highly flammable gas. These might start fires or explosions. And don't use combustible detergents that can catch fire either.



Safety Guidelines

INSTRUCTIONS FOR USE

Safety first, always. Make sure you read all the instructions carefully before you start using the appliance. Keep the operating instructions handy for future reference



Remember, if cockroaches or other pests cause any damage, the appliance guarantee won't cover it.

Don't install or use a machine that's damaged. Before you plug it in, check if the connection details on the data plate (like fusing, voltage and frequency) match your electricity supply. If you're not sure, reach out to IFB Care for help.

Avoid washing or drying articles contaminated with combustible or explosive substances, such as oil, paint, gasoline, or solvents, to prevent fire or explosions.

Before using the machine for the first time, ensure the transit bolt at the rear is removed (refer to the installation section).

If you're leaving the machine for a while, for example if you're going on holiday, remember to turn OFF the stopcock, especially if there's no floor drain nearby.

Keep children away from the appliance, and closely supervise them when the machine is in use.

Appliances are not intended for use by children. Parents or legal guardians are responsible for supervising or training children on safe product usage. Do not let children clean or maintain appliances without adult supervision.



Caution

A WORD OF WARNING



The manufacturer isn't responsible if there's a problem with the earthing system. Make sure your machine is connected to a grounded outlet with a 16A Fuse or MCB. If you're unsure whether the machine is properly grounded, get it checked by a qualified technician or licensed electrician.

If the earthing connection is not properly carried out, it could lead to electric shocks.

Make sure the machine is connected to a 3-pin socket with good earthing and 16 Amp MCB for protection against short circuits.

Avoid using extension cables with the appliance for safety reasons, as they do not meet the required levels of safety.

When disconnecting the plug, hold the plug itself, not the cord. Don't insert or remove the plug with damp hands.

Overheating could be a real danger.

Your machine has been built according to current safety requirements.

Your machine is totally disconnected from electricity when you switch it OFF at the wall socket and remove the plug, or turn it OFF from the main source, or remove the main fuse, or switch OFF the MCB.



Caution



Letting unauthorised mechanics repair your machine, may pose unforeseen dangers. Only authorised IFB Care Service Personnel should undertake repairs.

Only use a new hose kit to connect your machine to the water supply on site. Don't try to reuse old hoses. If any parts need replacing, make sure to use genuine IFB spare parts. That way, you can be sure your machine meets safety standards.

Faulty connection cables must be replaced by authorised IFB Care Service Personnel to prevent potential danger to the user.

Never stack a washer and dryer without the proper stacking kit. This is dangerous because the dryer could shake off the washing machine while it is in use.

First use after installation—Condensed water droplets may remain inside the drum after assembly and test run. Run the first cycle without garments. Use the Cotton program at the highest temperature, add detergent, DO NOT put any clothes in the machine.

If the trolley vibrates excessively, it needs to be replaced right away. Otherwise, it could make the machine less reliable and shorten its lifespan.

If your machine has a porthole door, keep in mind that the glass might get hot when you're washing at high temperatures. Make sure children don't touch it.

Always ensure the drum is stationary before removing clothes to avoid accidents.

Avoid dragging the washing machine while its running to prevent damage.



Caution

Keep your machine dry to avoid corrosion/rusting.

Don't spill water on the machine. If spills occur, wipe it dry. Your machine should be kept away from floor cleaning chemicals. Don't wash or spray water over the switch or control panel. Keep the machine dry to prevent corrosion and rusting. Make sure to wipe the machine after cleaning the coin trap.



Don't wash shoes or utensils in this appliance.

Check the labels on your clothes for the washing instructions for the fabric.

Use detergents that have been recommended for this washing machine.

Only use dyes specified by the manufacturer for domestic washing machines. Make sure to follow the manufacturer's instructions carefully.

Never use solvent-based cleaning agents in the machine. They can damage parts and produce dangerous fumes. Plus, they can also increase the risk of fire and explosions.

If your clothes have been treated with solvent-based cleaning agents before washing, make sure to rinse them really well in clean water before you put them in the machine.

Avoid using colour run and dye removers containing sulphur compounds, as they can cause corrosion or damage.



Caution

Your machine has been built according to current safety requirements.

During assembly, the machine is tested with water to make sure it performs correctly. Sometimes, a few water droplets may be left inside the drum.

Replace the trolley immediately if excessive vibrations are observed, as it can affect the machine's reliability and lifespan.

Flooding Danger

When you're connecting the drain hose to a washbasin, make sure the water drains away fast to stop the sink from overflowing. Also, make sure the hose is firmly in place so the water flow doesn't push it out. Otherwise, you might end up with flooding.

Be careful to not let things like nails, pins, coins, or paper clips end up in the machine with your laundry. They can damage parts like the suds container or drum, which can then ruin your clothes during the wash.

USE OF APPLIANCE

This appliance is not intended to be used in household and similar applications such as—

- Staff kitchen areas in shops, offices and other working environments,
- Farm houses,
- By clients in hotels, motels and other residential type environments,
- Bed and breakfast type environments, and
- Areas for communal use in blocks of flats or in launderettes.

If the manufacturer wants to limit the use of the appliance to less than the above, this shall be clearly stated in the instructions.

About eWaste

eWaste, or Waste Electrical and Electronic Equipment (WEET), refers to discarded appliances using electricity. To responsibly manage eWaste, follow the guidelines below.



DOs

- Always dispose of end-of-lifecycle products by contacting an authorised local eWaste recycler.
- Do drop off used electronic products, batteries, or accessories at authorised eWaste recyclers.
- Sort packaging materials for responsible waste disposal and recycling options whenever possible or as instructed.



DON'Ts

- Do not dismantle electronic products on your own.
- Never dispose of electronic products in bins marked 'Do Not Dispose'.
- Refrain from giving eWaste to informal sectors like local scrap dealers or rag pickers.
- Do not dispose of your product in garbage bins along with municipal waste that ultimately reaches landfills.

RISKS OF IMPROPER HANDLING OF eWASTE

eWaste usually includes components which, if disposed of improperly, hold environmental consequences such as air, water and soil pollution and also pose risks to human health.

By ensuring your appliance is disposed of correctly, you will help prevent potential negative consequences for the environment and human health. Components and materials used in this washing machine are fully compliant with the Provisions of Hazardous Substances outlined in eWaste Management Rule, 2016.




FOR DETAILED INFORMATION AND DISPOSAL REQUEST
Contact **IFB Care** at **080 695 45678**. Provide your details to our representative to arrange for proper product disposal.

Getting started with your washing machine


Installation and Safety Guidelines

1 SELECTING THE RIGHT SPOT

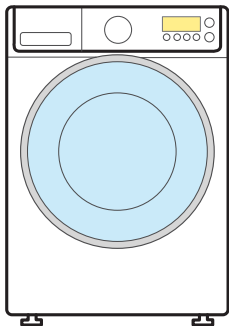


Place the machine on a level floor.

Make sure the machine is close to both water and electrical connections.

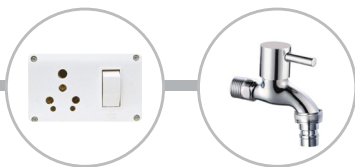

2 REMOVING TRANSIT BOLTS

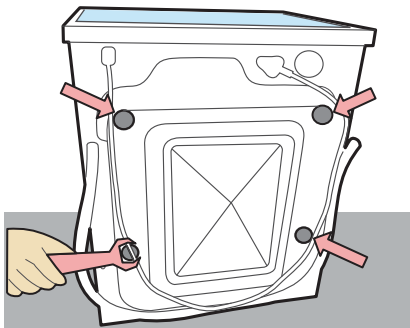

Use a spanner to remove the transit bolts.

Insert the plastic caps provided.


Keep the transit bolts carefully as they will be required in case you need to shift the machine.

Please do not operate the machine until the transit bolts have been removed.

Getting started with your washing machine




Installation and Safety Guidelines

3 LEVELLING

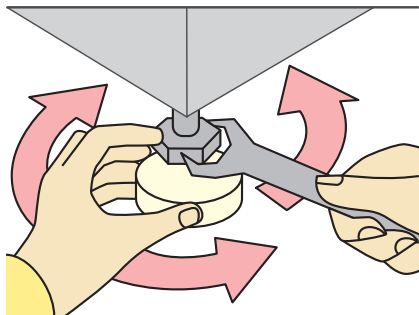

Level the machine by using adjustable screws, as shown.

Make sure all 4 feet are grounded.

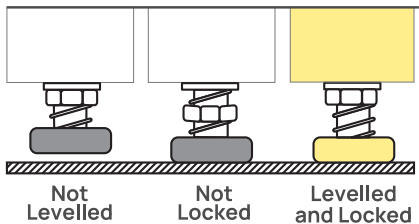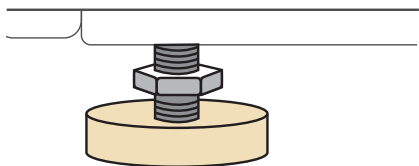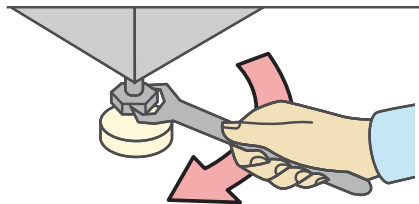


Getting started with your washing machine

Installation and Safety Guidelines

4

CONNECTION TO WATER SUPPLY

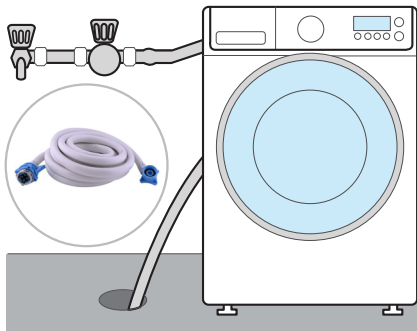

The water inlet of the machine has a collar with parallel internal threads.


Water supply point with a 3/4" external/parallel thread should be within 1 m of the machine.

Don't stretch the water supply hose.

Note After connecting inlet hose to water tap, turn on the water tap to flush out foreign substances such as dirt, sand or sawdust in the pipelines.

5

CONNECTION TO DRAIN HOSE

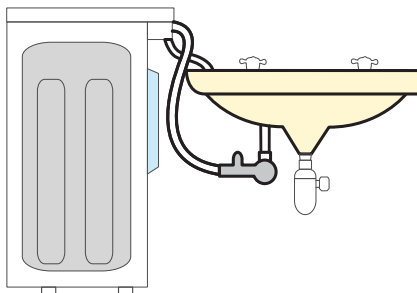

The machine uses a drain pump. Direct the end of the drain hose towards a sink.


The drain hose can be either placed on the floor or over a sink at a maximum height of 1 m from the floor.

Getting Started With Your Washing Machine


Installation and Safety Guidelines

5 CONNECTION TO DRAIN HOSE (contd)

Is the sink on the **left** side? Follow this diagram.

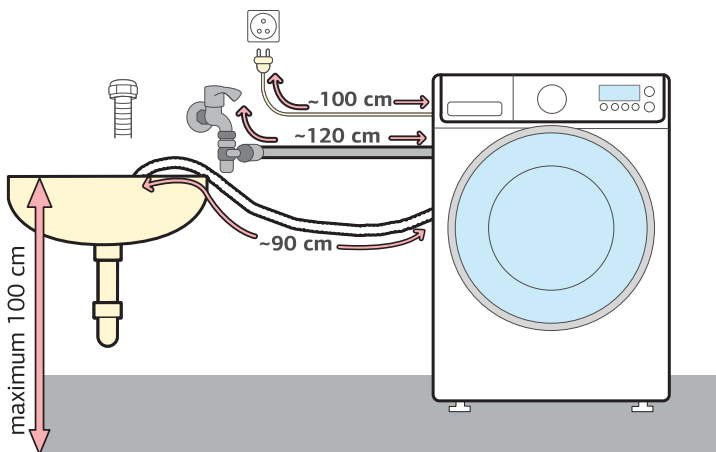


Is the sink on the **right** side? Follow this diagram.

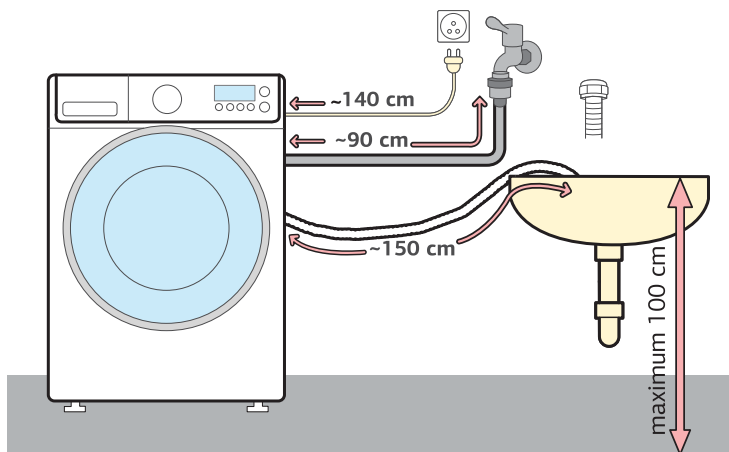


Getting Started With Your Washing Machine

Installation and Safety Guidelines


6 ELECTRICAL CONNECTION

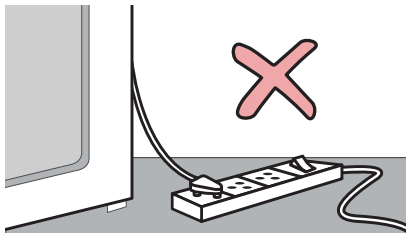

 A 16 Amp, 3 pin 220-240 V AC, 50 Hz electrical point with a 16 Amp MCB within 1 m of the machine is mandatory.



Make sure your home has proper earthing and the connection between the socket and the plug is firm.

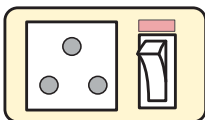

BEFORE YOU START

Make sure that the machine has been installed and connected as per the instructions above.

To remove any water leftover from factory testing of your machine, the first wash cycle should be carried out without any laundry in the machine.

Turn ON the water tap,


- › Pull out the detergent drawer completely
- › Pour approximately 20 g of detergent in the dispenser
- › Close the drawer
- › Set the program selector knob to Cotton and maximum Temperature
- › Press Start/Pause
- › Switch OFF the machine when 'End' message is displayed.

Running Your Machine

6 Easy Steps for Doing Your Laundry

1

SORT THE LAUNDRY

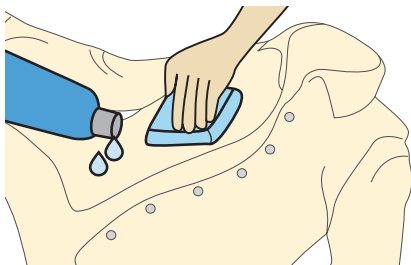


Pre treat collars, cuffs and stains.

Check for wash care symbols.


Close zippers, hooks and strings.

Empty the pockets of your clothes.

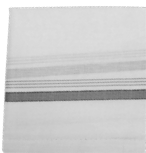


Running Your Machine

6 Easy Steps for Doing Your Laundry

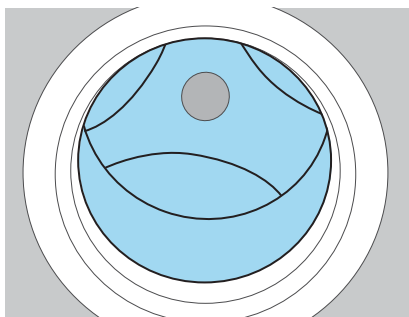2**LOAD THE LAUNDRY**

Make sure the laundry drum is empty.


Load garments one by one.

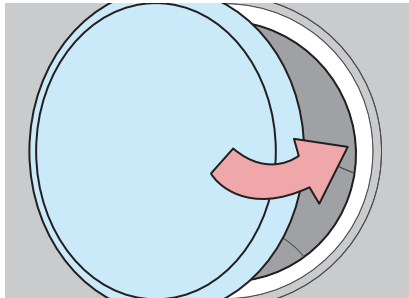

Close the door and press till you hear a click.

6 Easy Steps for Doing Your Laundry


3 ADD DETERGENT

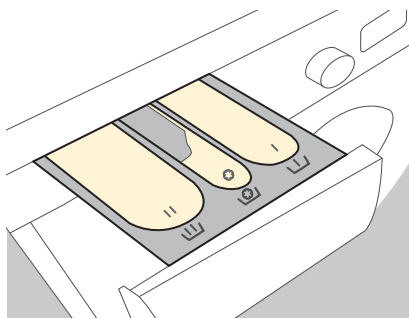

Pull out detergent dispenser drawer completely.


Add the correct amount of detergent.

- For heavily soiled clothes use Pre wash 'I' option.
 - For every other wash program use 'II'.
- ⊗ 'Settings' to be used to dispense additives. Use the fabric conditioner additives chamber and take care not to exceed the maximum level.

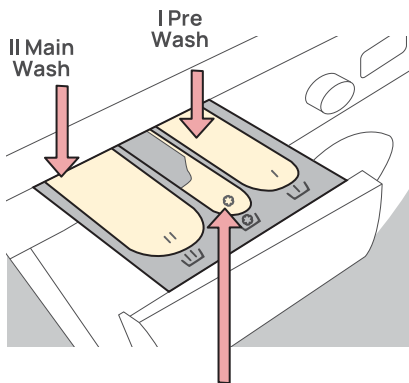

Additives/Fragrances (IFB Sensora)

If liquid detergent is used, use the liquid detergent dispenser supplied in the main wash chamber.

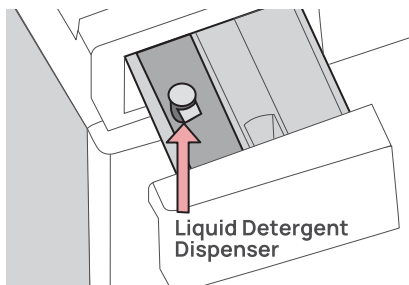

Running Your Machine


**Note**

Always use detergents that are recommended for front load washing machines. Using the wrong detergent can cause laundry issues. Avoid using soap flakes or granulated soap powders in your washing machine. When washing woollens or silk, make sure to use the detergent type recommended by the manufacturer. If you notice too many suds, reduce the amount of detergent you're using.

Running Your Machine

6 Easy Steps for Doing Your Laundry

4 SELECT PROGRAM

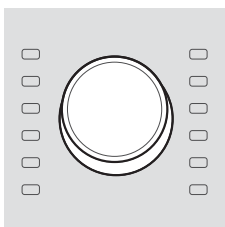

Switch ON the machine.

Turn the Program Selector knob to the required program.

Start/Pause LED will flash.

Choose Wash Option.



To change/cancel the program during the machine run, rotate the Program Selector knob to the OFF position and wait for 2 secs, then select the new program.

For more information scroll to the **Program Guide** section.

5 SELECT WASH OPTIONS

Touch the Option button to select desired Wash Option.

For more information scroll to the **Wash Options** section.

6 START WASHING



Press the flashing Start/Pause LED button to start washing.

To interrupt the cycle and change Wash Options or to add/remove laundry, press the Start/Pause button.

6 Easy Steps for Doing Your Laundry


6

START WASHING (contd)



Door status will be displayed after pressing the Start/Pause button.

If the water level inside the drum is above the rubber or the temperature inside the drum is high, the door won't open.

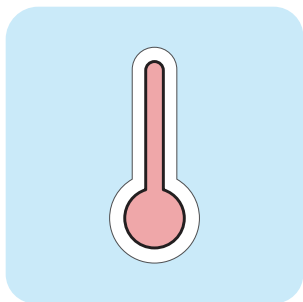


Once the wash is complete the 'END' message will appear. The door can be opened after this message.



The machine has been programmed to switch OFF all visual displays such as LEDs to save energy. Start/Pause LED will slowly blink after END of program. This is in line with the latest 'Energy Using Product' norms (EUP).



Finishing

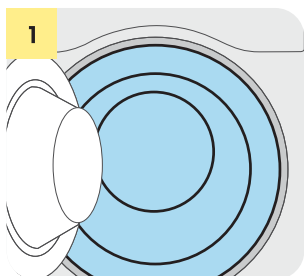

1 Remove the laundry and wipe the moisture from the door and door seal. Leave the door slightly open.

2 Wipe the panel and cabinet with a dry cloth to remove the moisture.

3 Turn OFF the tap.

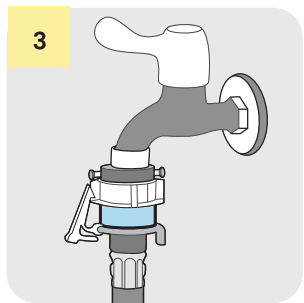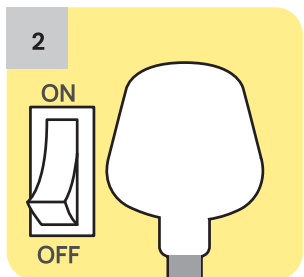

Running Your Machine

Program Guide

PROGRAM	TYPE OF LAUNDRY
Cotton  Cotton Eco	Cotton colour-fast garments. Shirts, pants, uniforms, bed and table linen, towels, night dresses, pyjamas, underwear, etc.
Synthetic/  Daily	Polyester, acrylic or polyamide daily wear garments.
Quick 30	Lightly soiled coloured laundry, made of cotton, linen, synthetic or blended fabrics.
CradleWash® 	Hand wash and delicate wash garments. Silk, lingerie, satin, synthetic or sheer fabrics.
Woollens 30	Machine washable woollen garments only. Use appropriate detergent.
Mix Soiled 40 	Cotton, synthetic and easy-care garments. Not recommended for special garments like silk/delicates, dark clothes, wool, duvets, curtains, etc.

Running Your Machine

Wash Options

OPTIONS

Details



Delay Start

This option allows you to specify the time a program should start.

Press the Delay Start button once to select the Delay Start option.

The first press of the Delay start button will display 00 delay time, second press will select 1:00 hour delay time, third press will select 2:00 hours delay time, further press will update the delay time by 1:00 hour each till 19:00 hours.

The corresponding LED will glow to indicate that the option has been selected.



Pre Wash

If the Pre Wash option is selected, the clothes are given a preliminary wash before the main wash.

Press and hold the Steam button for 3 secs to select Pre Wash option.

A single beep will indicate that the option has been selected.

You can select more wash options or press the Start/Pause button to start the program.

Running Your Machine

Wash Options

OPTIONS

Details



Steam

When the Steam option is selected, steam is produced inside the drum—at the optimum wash time to enhance the wash.

Press the Steam button to select or deselect the Steam option.

Steam LED will glow indicating that the Option has been selected.

You can select more wash options or touch the Start/Pause button to start the program.

*Note

Steam option can be selected for Cotton 40°/60°, Synthetics 40°/60° and Mixed 40° programs.

It is normal that steam may not be visible during the Wash/Steam cycle.

Do not touch the door during the Steam cycle as the surface may be very hot.

Do not attempt to open the door forcibly or reach into the machine the Steam cycle. The steam can cause severe burns.



Extra Rinse

An extra rinse cycle is executed to remove left over detergent from clothes.

Press the Extra Rinse button to Select or deselect the Extra Rinse option.

Running Your Machine

Wash Options

OPTIONS

Details

Spin

Spin Speed

You can change the default spin speed in the given range.

Press the Spin Speed button on the control panel and select from No Spin, 600 RPM, 700 RPM, 800 RPM Rinse Hold and Repeat (for 6 kg) and No Spin, 700 RPM, 900 RPM, 1000 RPM, Rinse, Hold and Repeat (for 6.5 kg).

To select No Spin rotate the knob anti-clockwise to the  position till you hear a gentle click.

The knob should not be turned beyond High RPM clockwise or beyond the  position anticlockwise

You can choose other options or press the Start/Pause button to start the program.

	6.0 Kg	6.5 Kg
High	800 RPM	1000 RPM
Med	700 RPM	900 RPM
Low	600 RPM	700 RPM

***Note** If the Spin Speed knob is set to High RPM, the maximum speed limit will depend upon the program selected.



Rinse

Rinse Hold

If clothes are left unattended for a long time it may cause creasing.

This option pauses the program during its final rinse to prevent this.

To select the Rinse Hold option, turn the Spin Speed knob to Rinse Hold position.

Running Your Machine

Wash Options

OPTIONS	Details
 +	Child Lock This activates protection against unintentional changes to the program sequence. To select Child Lock, press the Delay Start and Extra Rinse buttons simultaneously for 2 secs. No changes can be made while the program is running. If the appliance is switched OFF, it will resume from where it was interrupted in this mode. The door will remain locked till the end of the program. You can disable this option the same way you enabled it.



Running Your Machine

Washing Symbols—A Guide



RESISTANT MATERIAL



DELICATE FABRIC



WASHABLE AT 95°C



WASHABLE AT 60°C



WASHABLE AT 40°C



WASHABLE AT 30°C



HAND WASH



DRY CLEAN ONLY



WOOL SEAL



BLEACHABLE IN COLD WATER



DON'T BLEACH



DON'T DRY CLEAN



DRY FLAT



HANG TO DRY



DRY ON CLOTHES HANGER



TUMBLE DRY, NORMAL HEAT



TUMBLE DRY, REDUCED HEAT



DON'T TUMBLE DRY

Running Your Machine

Wash Guide Map

	PRE WASH	EXTRA RINSE	RINSE HOLD	STEAM	DELAY START	LAUNDRY WEIGHT in KG	
						6 KG	6.5 KG

PROGRAM

Cotton	✓	✓	✓	✓	✓	6	6.5
--------	---	---	---	---	---	---	-----

Temperature °C Cold, 40, 60, 90

Spin Speed RPM 600–800/No Final Spin (6 KG)
700–1000/No Final Spin (6.5 KG)

Cotton Eco	✗	✓	✓	✗	✓	6	6.5
------------	---	---	---	---	---	---	-----

Temperature °C 40, 60**

Spin Speed RPM 600–800/No Final Spin (6 KG)
700–1000/No Final Spin (6.5 KG)

Rinse + Spin	✗	✓	✓	✗	✓	6	6.5
--------------	---	---	---	---	---	---	-----

Temperature °C ✗

Spin Speed RPM 600–800/No Final Spin (6 KG)
700–1000/No Final Spin (6.5 KG)

**Program setting for BEE test in conformity with IEC 60456 with maximum spin speed selection settings.



Option
available for
selection



Option not
available for
selection

Running Your Machine

Wash Guide Map

	PRE WASH	EXTRA RINSE	RINSE HOLD	STEAM	DELAY START	LAUNDRY WEIGHT in KG	
						6 KG	6.5 KG

PROGRAM

Spin	✗	✗	✗	✗	✓	6	6.5
------	---	---	---	---	---	---	-----

Temperature °C ✗
 Spin Speed RPM 600–800/No Final Spin (6 KG)
 700–1000/No Final Spin (6.5 KG)

Synthetics	✓	✓	✓	✓	✓	3	3
------------	---	---	---	---	---	---	---

Temperature °C Cold, 40, 60
 Spin Speed RPM 600–800/No Final Spin (6 KG)
 700–900/No Final Spin (6.5 KG)

Quick 30	✗	✓	✓	✗	✓	2	2
----------	---	---	---	---	---	---	---

Temperature °C 30
 Spin Speed RPM 600–800/No Final Spin (6 KG)
 800/No Final Spin (6.5 KG)

**Program setting for BEE test in conformity with IEC 60456 with maximum spin speed selection settings.



Option
available for
selection



Option not
available for
selection

Running Your Machine

Wash Guide Map

	PRE WASH	EXTRA RINSE	RINSE HOLD	STEAM	DELAY START	LAUNDRY WEIGHT in KG	
						6 KG	6.5 KG

PROGRAM

CradleWash®



×	✓	✓	×	✓	2	2
---	---	---	---	---	---	---

Temperature °C 30

Spin Speed RPM 600/No Final Spin

Woollens 30

×	✓	✓	×	✓	2	2
---	---	---	---	---	---	---

Temperature °C 30

Spin Speed RPM 800/No Final Spin

Mixed 40

✓	✓	✓	✓	✓	3	3
---	---	---	---	---	---	---

Temperature °C 40

Spin Speed RPM 600–800/No Final Spin (6 KG)
700–900/No Final Spin (6.5 KG)

**Program setting for BEE test in conformity with IEC 60456 with maximum spin speed selection settings.



Option
available for
selection



Option not
available for
selection

Running Your Machine

Note

With Cotton Eco 60** program, the actual wash temperature attained will be lower than 60°C, although the wash performance will be at par with the Cotton 60°C program.

The actual performance of the machine can vary based on a few factors like water pressure, water hardness, temperature, the amount and type of laundry, detergent used, and other conditions like foam or unbalance detection.

That's why the numbers mentioned in the user manual or with the machine might not always match with your experience, since they're tested in lab conditions.

Program time can also skip or extend due to above mentioned conditions.

Last run program is selected by default.

Machine automatically detects the weight of the laundry during the program and accordingly adjusts the Time/Rinse Water. Press and hold the Options button once during the program run to check the total number of wash cycles completed by the machine.

The design and specifications (includes colour, shades, aesthetics, features etc) are subject to change without prior notice due to continuous improvement and product development.

**Program setting for BEE test in conformity with IEC 60456 with maximum spin speed selection settings.



Option
available for
selection




Option not
available for
selection

Running Your Machine

Key Features

ADVANCED WASH TECHNOLOGY

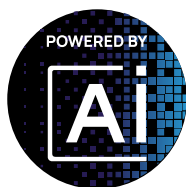

Powered by Ai

The intuitive sensing logic in the machine detects two parameters important for fabric care during cleaning—

- **Type of fabric** Cotton, Mixed or Synthetic
- **Weight of the fabric**


The Ai model, based on thousands of parameters, selects the optimised configuration suitable for the type of garment and its weight. Thus it helps in reducing the washing time and water consumption while ensuring the best care for your clothes without any manual intervention.

***Note** available on selected models only.



Cool Down Cycle

Water is drained after the main wash cycle. If it is hot it can harm people and the environment. Thus the hot water is mixed with cold water before draining.

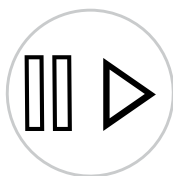


Start/Pause (Program Interrupt)

Gives you the flexibility to Start or Pause the program whenever you want.

Running Your Machine


Key Features

ADVANCED WASH TECHNOLOGY

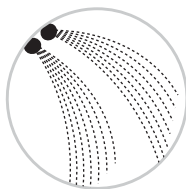

2D Wash

Scoops on the inner drum pick up water and shower it on the clothes. This happens when the drum rotates and ensures thorough wetting of clothes.

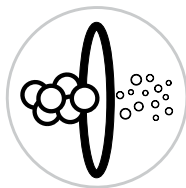

Aqua Energie

The technology that energises water to carry the detergent deep into the fabric.



CradleWash®

India's first wash program for the care of delicate fabrics.



Crescent Moon Drum

The crescent moon design of the drum allows the water to cushion the wash and protect the fabric.

Running Your Machine

Key Features

WASH PROGRAMS AND OPTIONS

More than 100 thoughtfully designed programs and options to give your clothes the ultimate wash experience.

Time, Energy, Water Saving

Cotton Eco
Quick 30

Fabric Friendly Wash

Cotton, Synthetic,
CradleWash®, Woollens,
Mixed 40

Hygienic Wash

Cotton 90

Customisable Modes

Quick 30',
Rinse + Spin

User Friendly Options

Pre Wash, Temperature,
Extra Rinse, Steam, Rinse Hold,
Spin Speed, Delay Start

Running Your Machine

Key Features

MACHINE CARE



Quick Wash

This program washes your clothes faster. Good for gym clothes or less soiled garments.



Eco Wash

A special program that optimises the water and energy used and gives you the best wash quality. Good for you and the environment.



High-Low Voltage Protection

A microcontroller continuously monitors the voltage fluctuations and stops the program if it goes below $150 \pm 10V$ or rises above $270 \pm 10V$. The program will resume once the voltage is within a safe range.



Auto Restart

The program remembers where to pick up from when power is restored after failure, thus saving on time, water, and energy, while adding longevity to the machine.



Auto Imbalance System

This system automatically balances the clothes inside to stabilise the spin cycle.

Running Your Machine

Key Features

USER CONVENIENCE



Child Lock

Prevents children from tampering with the machine settings.



Laundry Add

Lets you add laundry even after the cycle has started.



Inbuilt Easy Iron

Reduces wrinkling of clothes for easy ironing.



Pre Wash

Very dirty clothes are first washed through a preliminary wash to shake out the dirt. After this the main Wash cycle starts.

Get More From Your Machine

Tips for best results

BEFORE WASHING



Empty all pockets. Remove everything including coins, keys, pins, notes etc.

Close all zips and fasten all hooks.

Check the wash care label and avoid non-machine washable items.



WHILE SORTING



Separate polyester fabrics from cotton.

Try to have a mix of large and small clothes in each load.

Wash dark clothes separately.



Get More From Your Machine

Tips for best results

WHILE LOADING



Load large items first.

Don't wash single items, add similar items.

Place small items in a laundry bag.

WATER SOFTENING



Do you live in an area with hard water?

You need to use water softening agents to get the best wash results.

You may also adjust the detergent dosage to improve your wash.

To do so follow the dose recommended by the detergent manufacturer.



Get More From Your Machine

Tips for best results

EASY TIPS TO REMOVE STAINS



Soak or pre wash the stained laundry in warm water.

Try to wash immediately after staining.

Understand the fabric, the nature of the stain and check the wash care label before treating it.

Start with cold or warm water as hot water can set the stain in.

Use fabric safe bleach if recommended.

Put the stained area face down on a paper towel or white cloth.

Apply the stain remover to the back of the stain so that the stain is forced out of the cloth.

Get More From Your Machine

Stain Treatment



Get More From Your Machine

Stain Treatment

STAIN	TREATMENT
Chewing gum Adhesive Tape Rubber Cement	Use ice in a plastic bag to harden the gum. Scrape off what you can and then sponge with white spirits.
Blood	Rinse and soak immediately in cold water with an enzyme pre wash.
Chocolate Cocoa	Sponge with cold water and soak in enzyme pre wash. Rub in a little detergent and rinse in cold water.
Coffee	Rinse in cold water. Rub in detergent and wash in the maximum temperature allowed for the fabric.
Cream Milk Ice-cream	Rinse in cold water and wash normally. Sponge with white spirits.
Deodorant	Rub affected area with white vinegar and then rinse in cold water. Sponge with white spirits and then treat stiffened areas with an enzyme pre wash.
Egg	Soak in cold enzyme pre wash, rinse and wash.
Fabric Softener	Rub affected areas with bar soap and wash.

Get More From Your Machine

Stain Treatment

STAIN	TREATMENT
Fruit	Treat as soon as possible by sponging with cold water. Rub a little detergent on the stain and wash.
Grass	Sponge with white spirits. Rub in an enzyme pre wash and then wash.
Grease Oil	Sponge with white spirits or dry-cleaning fluid and then wash.
Iron Rust	Apply lemon juice and salt and place in the sun before washing.
Collars Cuffs Cosmetics	Pre-treat with a pre wash stain remover or rub with a bar soap.
Mildew	Rub affected area with white vinegar and then rinse in cold water. Sponge with white spirits and then treat stiffened areas with an enzyme pre wash.
Mud	Brush off the mud and rinse in cold water. Rub a little detergent and wash.
Oil Paint	Scrape off any fresh paint. Sponge with a non-flammable dry cleaning fluid and wash.

Get More From Your Machine


Stain Treatment

STAIN	TREATMENT
Water Based Paint	Treat while still wet. Rinse in warm water and wash.
Scorch Marks	Dampen a cloth with hydrogen peroxide. Lay it over the affected area and press with a hot iron.
Ink	Some inks are impossible to remove. However, try using a pre wash stain remover, denatured alcohol or non-flammable dry cleaning fluid.
Nail Polish	Try applying nail polish remover to the back of the stain. Blot with paper towels and repeat. Don't use acetate fabrics. However, it may be impossible to remove in some cases.
Shoe Polish	Liquid Pre-treat with a paste of granular detergent and water. Paste Scrape the residue and pre-treat with a pre wash stain remover or non-flammable dry cleaning liquid. Apply detergent to the dampened area and wash using bleach safe for the fabric.
Candle Wax Crayon	Scrape off surface wax. Press with warm iron until wax is absorbed into a paper towel. Treat remaining stain with a pre-wash stain remover or non-flammable dry cleaning fluid. Hand wash to remove solvent and wash using bleach safe for the fabric.

Get More From Your Machine

Maintenance and Cleaning


CLEANING THE DETERGENT DISPENSER DRAWER

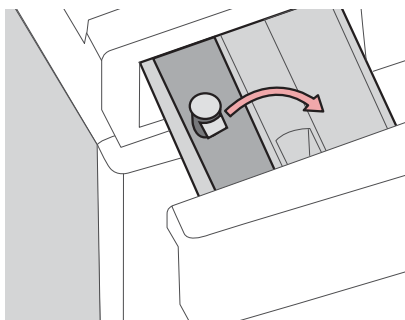

Remove detergent residue regularly.

Clean the detergent dispenser drawer with warm water.

Remove and clean the siphon under running warm water.

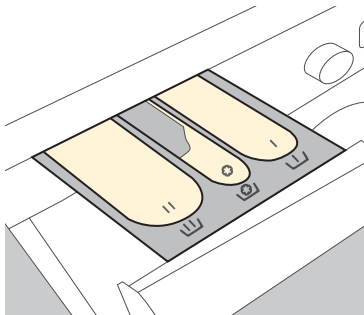


Detergent residue can build in the dispenser housing, clean it before reinstalling the dispenser.

Get More From Your Machine

Maintenance and Cleaning


CLEANING THE WATER HOSE MESH FILTER

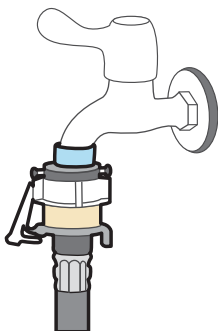

Turn OFF taps and disconnect the power supply to the machine.


Unscrew the inlet hose from the machine and tap the drain water from the hose.

Remove the filter mesh from the tap end of the inlet hose and clean under running water with a brush.

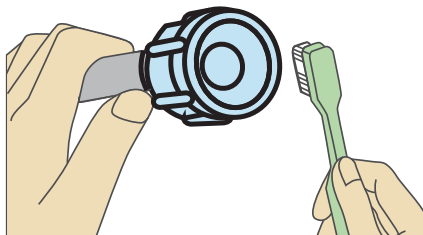

Pull out the sieve of the magnetic valve with a pair of flat nosed pliers.


Clean the sieve under running water with a brush.

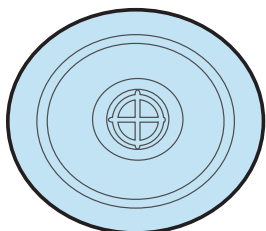

Fit the sieve back into the valve.

Screw the inlet hose back to the machine and the tap.

Turn ON the water tap to check if the connection is watertight.

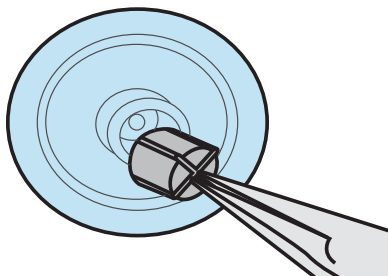


Note Dirt, sediments or sand in the water can affect both your wash quality and the water valve.

Get More From Your Machine


Maintenance and Cleaning

CLEANING THE FILTER

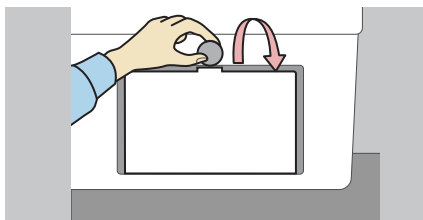

The filter should be cleaned frequently in order to increase the life of the drain pump.


Open the detachable bottom door with a coin or a key.

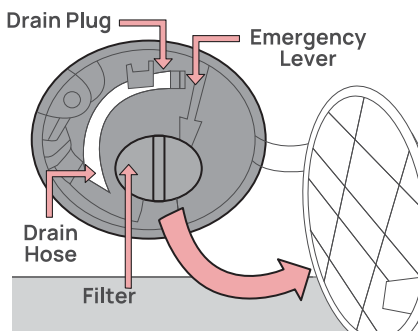

Place a shallow container near the bottom drawer.



Pull out the drain hose and open the drain plug.

Once the water is drained, turn the filter anti-clockwise to open it and take out any coins, pins, hooks, or other objects.

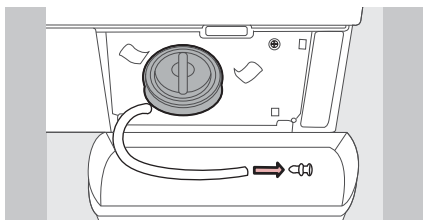

Tighten the filter and drain plug to their original positions, then close the bottom door.

Don't open the filter when a program is running.

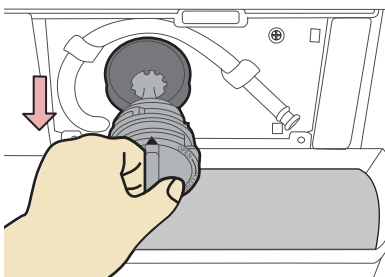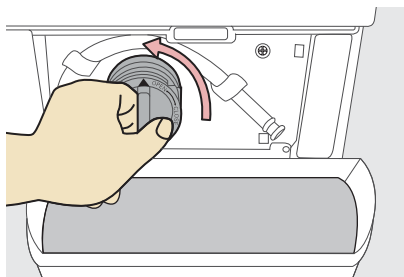

Get More From Your Machine

Let's make washing easier.

Here is a list of clothes and their approximate weights to help you figure out a perfect wash load.

CLOTHING WEIGHTS

Bottoms

Lungi/Dhoti	200 g
Skirts	200 g
Trousers	250 g
Jeans	400 g

Tops

Cotton Shirts	280 g
Other Shirts	200 g
Cotton Blouses	140 g
Other Blouses	100 g
Woollen Sweaters	400 g
Heavy Sweaters	300 g
Light Sweaters	150 g

Other Clothes

Cotton Sarees	650 g
Synthetic Sarees	350 g
Bath Towels	600 g
Hand Towels	250 g
Pyjama Kurta	400 g
Panties	60 g
Cotton Vests	100 g
Underslips	100 g
Long Socks, 2 pairs	150 g
Short Socks, 2 pairs	85 g
6 Handkerchiefs	85 g
12 Napkins	1.1 Kg

Sheets

Cotton (Double)	1 Kg
Cotton (Single)	500 g
Non Cotton (Double)	650 g
Non Cotton (Single)	400 g

Pillow slips

Cotton Pillow Slips	110 g
Other Pillow Slips	85 g

Table Cloths

Small	230 g
Large	600 g
Table Napkins (4)	150 g

Bedspread

3 Kg

Blankets

Wool	2 Kg
Acrylic	1.5 Kg

Get More From Your Machine

This table may help you plan a laundry load of 6, or 6.5 Kg.

LAUNDRY ITEMS	6 Kg	6.5 Kg
Bath Towels	2	2
Shirts	3	4
Blouses	2	2
Skirts	2	3
Pair of Pants	1	1
Pair of Jeans	2	2
T-shirts	3	3
Set of Pyjamas	3	4
Tea Towels	2	2

The chart indicates average weights of clothes. Make sure not to overload your machine beyond the recommended weight. This way, your clothes will get a thorough wash. Suggested weights are approximate and may vary.

Useful Information About Your Washing Machine

Troubleshooting

In case of machine malfunction, check the following points before contacting your service provider.

SYMPTOM	PROBABLE CAUSE	SOLUTION
LED Display is not lit.	Power supply switch is not turned ON.	Turn ON the power supply switch.
	Electrical power cord is not plugged in or is loose.	Plug the electrical power cord in securely and check.
	No program is selected.	You need to select a program.
Washing Machine Door is stuck and won't open.	Machine is in operation.	Ensure that the program isn't active. If active, pause the program and check the door symbol on display. The door cannot be opened mid-operation, due to high water level, temperature and speed.
	Opening the door is not possible.	Check if the machine is displaying the 'dL Er' message.
	Child Lock is active.	Disable the Child Lock and wait until the Door display glows.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Program does not start.	Start/Pause button is not pressed ON.	Press the Start/Pause button. The display will glow to indicate activity.
	Water supply faucet is not turned ON; there is no or low water pressure.	Turn ON the water faucet fully. Ensure that the water pressure is normal.
	Machine door is not securely closed.	Close the machine door properly.
	Pause/Soak or Rinse Hold mode is active.	Check the status of the programs on display and refer to the user manual.
Water is not supplied to the machine. Detergent is not flushed into the drum.	Water supply faucet is not turned ON; there is no or low water pressure.	Turn ON the water faucet fully. Ensure that the water pressure is normal.
	Machine door is not securely closed.	Close the machine door properly.
	Inlet hose is bent, sieve, inlet valve or the hose is clogged.	Straighten the inlet hose. Check; unclog the sieve, valve and hose.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Detergent dispenser is leaking suds.	Unsuitable detergent is used.	Use detergents recommended for Front Load Washing Machines only.
Excessive foam in drum.	Excessive detergent is used.	Use less detergent.
Detergent residue on clothes.	Machine is overloaded with clothes.	Do not overload the machine. Put fewer clothes per load.
	Cold Wash program is active.	Choose the Hot Wash program.
	Water pressure is low.	Ensure that the water pressure is optimum.
Water leakage in the machine.	Inlet hose connection is loose.	Check and tighten the inlet hose connection.
	Filter is not securely tightened.	Check and tighten the filter.
	Inlet hose is leaking.	Contact IFB Care.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Machine water is not draining.	Filter is clogged.	Clean the filter. Make sure that it is not clogged.
	Drain hose end is placed 1 m above floor level.	Measure 1 m from the ground level, place the drain hose end below the level.
	Drain hose is kinked or clogged.	Ensure that the drain hose is straight, clean and unclogged.
	Wash only machine washable door/bath mats in the washing machine. Washing of non-washable mats will cause lint/fibre build up. This may lead to drain pump clogging.	
Machine vibrates excessively during spinning.	Machine is not properly levelled.	Ensure that the machine is levelled properly.
	Filter is partially clogged.	Clean and ensure that the filter is unclogged.
	Load is unbalanced.	Add a few clothes to balance the load. Rearrange the load to allow proper spinning.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Machine is not spinning or clothes remain wet.	Load is too small, causing disbalance.	Add a few clothes to balance the load. Rearrange the load to allow proper spinning.
	Machine is overloaded with clothes.	Load clothes as per the fabric type and capacity recommended for the selected program. Reduce a few items.
	Spin Speed is set to 0 RPM or is too low.	Select a higher Spin Speed.
	Rinse Hold mode is active.	Select the Start/Pause button at Rinse Hold stage.
	Filter is clogged.	Clean and ensure that the filter is unclogged.
	Excessively foaming detergent is used.	Use detergents recommended for Front Load Washing Machines only.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Ineffective treatment of soiled clothes.	Detergent quantity is insufficient.	Use the recommended amount of detergent based on load size and hardness of water.
	Cold Wash program is active.	Opt for the Hot Wash program.
	Incorrect load size as per capacity.	Ensure that the load is within the capacity.
	Untreated stains on clothes.	Make sure to treat stains before washing. Scroll up to the 'Easy Tips to Remove Stains' section.
	Heavily and lightly soiled clothes are washed in the same load.	Wash heavily and lightly soiled clothes in separate washes.
Blue stains on clothes.	Excessive use of fabric additives.	Use only the required amount of fabric additives. Do not pour additives directly on the fabric.
	Additives of inferior quality being used.	Use good quality fabric additives.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Black or grey stains on clothes.	Detergent quantity insufficient as per hardness of water.	Use the recommended amount of detergent based on load size and hardness of water.
	Pre-existing stains on some clothes.	Separate stained clothes from the unsoiled ones.
Yellow or brown, rust-like stains.	The water supply for the wash is dirty.	Before washing—run the faucet to check if the water is clean. Wash only when the water is clean. To restore a discoloured load of whites use a rust remover safe for fabric.
Detergent residue left on clothes.	Overloading of clothes.	Do not overload the washing machine.
	Excessive use of detergent.	Use proper amount of detergent.
	Cold wash program.	Use hot wash program.
Buttons not working.	Button not pressed properly.	All the buttons are sensitive and need to be pressed softly.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM

Motor noise.

While in operation, it is normal for the motor to make some noise.

Pump noise.

Unless the filter is clogged, it is normal for the pump to make some noise during the process of draining.

Anyway do check for filter clogging.

Program cycle time is delayed.

It is normal for the program cycle time to be delayed based on factors such as type and quantity of laundry load, inlet water pressure and temperature, fluctuation in power supply etc.


Balance time on display remains unchanged.

In case of a disbalance in load, the machine makes attempts to redistribute the clothes to minimise vibrations. This can extend the duration of the program.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Display

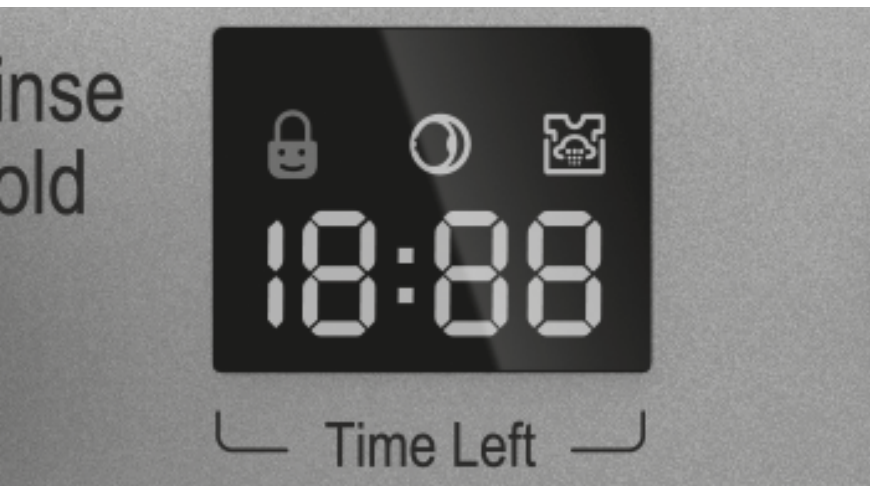

THE LED DISPLAY GIVES YOU COMPLETE INFORMATION

- Balance time of the program.
- Door status.
- Spin Speed.
- Problem/fault indications, if any.
- Child Lock and Delay Start selection.

Useful Information About Your Washing Machine

Display Messages & Error Codes

For any code displayed that is not present in the following list or if the suggested solution does not fix the problem, contact IFB Care or an authorised dealer.

DISPLAY	PROBABLE CAUSE	SOLUTION
E1	E1—Indicates that the washing machine door is stuck or jammed and can't be opened.	Switch OFF the washing machine and wait for 2 minutes before attempting to open the door again. Do not forcibly open the door. If the problem and/or the display persists, contact IFB Care
E2	E2—Water supply tap is turned OFF.	Ensure that the Water supply tap is turned ON.
	E2—Water supply is unavailable or water pressure is insufficient.	Operations will restart when water supply is available/normal.
	E2—Sieve or filter in inlet hose is clogged.	Clean and unclog the sieve/filter. (Refer to 'Cleaning the water hose mesh filter' section).
	E2—Water inlet hose is bent/damaged.	Remove and replace the bent/damaged water inlet hose.

Useful Information About Your Washing Machine

Display Messages & Error Codes

DISPLAY	PROBABLE CAUSE	SOLUTION
	E3—Water not drained.	Touch Start/Pause button to restart the Drain program.
	E3—Filter is blocked.	Switch OFF the appliance, drain out the water using the drain pump and then clean the filter.
	E3—Exhaust hose clogged/bent.	Clean exhaust hose/remove bend.
	E4—Laundry load is unbalanced	If the laundry load is small (eg a pair of jeans, 2–3 Turkish towels, bathrobe etc), it can lead to an unbalanced condition. Add 1–2 similar items to help balance the load and rearrange the load to allow proper spinning.

Useful Information About Your Washing Machine

Display Messages & Error Codes

DISPLAY	PROBABLE CAUSE	SOLUTION
E6	E6—Cloth trapped between drum and door area.	Switch OFF the washing machine and wait for 2 secs. Run the Drain program. After END, rearrange the clothes and restart the program. If the same message appears again, switch OFF the appliance and contact IFB Care.
E7	E7—Water temp is above 60°C at the start of the program.	Start new/Drain program once the water cools down to approximately 60°C. Switch OFF the washing machine, wait for 2 secs and restart.
E8	E8	Switch OFF the washing machine, wait for 2 secs and restart. If the same message appears again, turn the tap OFF, switch OFF the appliance and contact IFB Care.

Useful Information About Your Washing Machine

Display Messages & Error Codes

DISPLAY	PROBABLE CAUSE	SOLUTION
	E9—Input voltage is high.	Machine will start automatically after the voltage decreases to a safe operating level. If this error display persists/occurs frequently, contact your electrician to locate the fault in the electrical system.
	E9—Input voltage is low.	Machine will start automatically after the voltage increases to safe operating level. If this error display persists/occurs frequently, contact your electrician to locate the fault in the electrical system.

For further assistance please download My IFB App for service registrations or you call us on our call centre number

08045845678/ 080 695 45678

Useful Information About Your Washing Machine

Technical Specifications

MODEL	Diva Plus VXS/BXS 6008 Elena SXS/SBS/BLS 6510
POWER SUPPLY	220–240 V Single Phase 50 Hz
DIMENSIONS cm Net Size WxDxH	59.8 x 51.3x 87.5
NEW WEIGHT	64 Kg (6 Kg)/65 Kg (6.5 Kg)
CAPACITY	6.0 Kg of Dry Cotton (6 Kg) 6.5 Kg of Dry Cotton (6.5 Kg)
WASH CARE PROGRAMS	15 (> 100 with options)
SELECTOR BUTTONS (Model Dependent)	Delay Start, Steam/Pre wash Extra Rinse, Start/Pause
SELECTOR KNOB (Model Dependent)	Program Selector Spin Speed Selector
SPIN SPEED	600–800 RPM or Spin Cancel (6 Kg) 600–1000 RPM or Spin Cancel (6.5 Kg)
WATER CONSUMPTION*	9 Ltr/Kg/cycle (Program setting for BEE test in conformity with IEC 60456)
WATER PRESSURE	0.3 Bar–10 Bar (3.5–10 Ltr/min)
RATING	Refer to the product label
DRAIN PUMP RATING	30 W
HEATER RATING	2000 W
DRUM	Stainless Steel

Revisions Sheet

TITLE User Manual Diva Plus VXS/BXS 6008 Elena SXS/SBS/BLS 6510							
Characteristic Symbol Critical (Cc) Significant (Sc)							
MATERIAL Paper		MANUAL No UF421PKMAN536				Revision I	
IFB Industries Limited, Goa							
Rev	Information	Change Ref	Date	Checked By	Date	Approved By	Date
A	New model						
B	Changed steam as option		26/02 2022				
C	Elena SBS model added. Updated call centre number						
D	Details updated as per ECN 36341/PR 57873 and Customer Care number update		20/03 2023 20/04 2023				
E	Changes as per ECN 45181						
F	Updated power rating		27/12 2023				
G	Updated as per PR No-74533		10/05 2024				
H	Addition of Elena BLS 6510 model		27/05 2024				
I	Updated for BIS Compliance Obligations note as per PR 77673		14/08 2024				

TRUSTED BY OVER
7 MILLION
CUSTOMERS



+91 080 458 45678/080 695 45678

     +91 92310 04321

www.ifbappliances.com