



EN Built-in Oven / User Manual



656 FTCE/E-RCT

Thank you for choosing this product.

This User Manual contains important safety information and instructions on the operation and maintenance of your appliance.
Please take the time to read this User Manual before using your appliance and keep this book for future reference.

Icon	Type	Meaning
	WARNING	Serious injury or death risk
	RISK OF ELECTRIC SHOCK	Dangerous voltage risk
	FIRE	Warning; Risk of fire / flammable materials
	CAUTION	Injury or property damage risk
	IMPORTANT / NOTE	Operating the system correctly

CONTENTS

1.SAFETY INSTRUCTIONS.....	4
1.1 General Safety Warnings	4
1.2 Installation Warnings	6
1.3 During Use	7
1.4 During Cleaning and Maintenance	8
2.INSTALLATION AND PREPARATION FOR USE.....	9
2.1 Instructions for the Installer	9
2.2 Installation of the Oven.....	9
2.3 Electrical Connection and Safety.....	11
3.PRODUCT FEATURES	12
4.USE OF PRODUCT	13
4.1 Cooking Table.....	14
4.2 Use of the Full Touch Control Timer	14
4.3 Accessories	17
5.CLEANING AND MAINTENANCE.....	22
5.1 Cleaning	22
5.2 Maintenance	24
6.TROUBLESHOOTING&TRANSPORT	25
6.1 Troubleshooting.....	25
6.2 Transport	25

Technical Specification:

- Voltage Rating: 50 Hz 230 V
- Power Rating: max 3100 W
- Oven Dimensions (mm) H/W/D: 595/595/575
- Inner Capacity: 69 L
- Net Weight: 34.21kg
- Gross Weight: 36.08 kg

1. SAFETY INSTRUCTIONS

- Carefully read all instructions before using your appliance and keep them in a convenient place for reference when necessary.
- This manual has been prepared for more than one model therefore your appliance may not have some of the features described within. For this reason, it is important to pay particular attention to any figures whilst reading the operating manual.

1.1 GENERAL SAFETY WARNINGS

- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.

 **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Keep children less than 8 years of age away unless they are continually supervised.

  **WARNING:** Danger of fire: Do not store items on the cooking surfaces.

  **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

- Do not operate the appliance with an external timer or separate remote-control system.

- During use the appliance will get hot. Care should be taken to avoid touching heating elements inside the oven.
- Handles may get hot after a short period during use.
- Do not use harsh abrasive cleaners or scourers to clean the oven door glass and other surface. They can scratch the surfaces which may result in shattering of the door glass or damage to surfaces.
- Do not use steam cleaners for cleaning the appliance.

 **WARNING:** To avoid the possibility of electric shock, make sure that the appliance is switched off before replacing the lamp.

 **CAUTION:** Accessible parts may be hot when cooking or grilling. Keep young children away from the appliance when it is in use.

- Your appliance is produced in accordance with all applicable local and international standards and regulations.
- Maintenance and repair work should only be carried out by authorised service technicians. Installation and repair work that is carried out by unauthorised technicians may be dangerous. Do not alter or modify the specifications of the appliance in any way. Inappropriate hob guards can cause accidents.
- Before connecting your appliance, make sure that the local distribution conditions (nature of the gas and gas pressure or electricity voltage and frequency) and the specifications of the appliance are compatible. The specifications for this appliance are stated on the label.

 **CAUTION:** This appliance is designed only for cooking food and is intended for indoor domestic household use only. It should not be used for any other purpose or in any other application, such as for non-domestic use, in a commercial environment or for heating a room.

- Do not use the oven door handles to lift or move the appliance.
- All possible measures have been taken to ensure your safety. Since the glass may break, care should be taken while cleaning to avoid scratching. Avoid hitting or knocking the glass with accessories.
- Make sure that the supply cord is not trapped or damaged during installation. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to prevent a hazard.
- Do not let children climb on the oven door or sit on it while it is open.
- Please keep children and animals away from this appliance.

1.2 INSTALLATION WARNINGS

- Do not operate the appliance before it is fully installed.
- The appliance must be installed by an authorised technician. The manufacturer is not responsible for any damage that might be caused by defective placement and installation by unauthorised people.
- When the appliance is unpacked, make sure that it has not been damaged during transportation. In case of any defect do not use the appliance and contact a qualified service agent immediately. The materials used for packaging (nylon, staplers,

Styrofoam, etc.) may be harmful to children and they should be collected and removed immediately.

- Protect your appliance from the atmosphere. Do not expose it to effects such as sun, rain, snow, dust or excessive humidity.
- Any materials (i.e. cabinets) around the appliance must be able to withstand a minimum temperature of 100°C.
- The appliance must not be installed behind a decorative door, in order to avoid overheating.

1.3 DURING USE

- When you first use your oven you may notice a slight smell. This is perfectly normal and is caused by the insulation materials on the heater elements. We suggest that, before using your oven for the first time, you leave it empty and set it at maximum temperature for 45 minutes. Make sure that the environment in which the product is installed is well ventilated.
- Take care when opening the oven door during or after cooking. The hot steam from the oven may cause burns.
- Do not put flammable or combustible materials in or near the appliance when it is operating.
- Always use oven gloves to remove and replace food in the oven.
- Under no circumstances should the oven be lined with aluminium foil as overheating may occur.
- Do not place dishes or baking trays directly onto the base of the oven whilst cooking. The base becomes very hot and damage may be caused to the product.



Do not leave the oven unattended while cooking with solid or liquid oils. They may catch fire under extreme heating conditions. Never pour water on to flames that are caused by oil, instead switch the oven off and cover the pan with its lid or a fire blanket.

- If the product will not be used for a long period of time, turn the main control switch off.
- Make sure the appliance control knobs are always in the “0” (stop) position when it is not in use.
- The trays incline when pulled out. Take care not to spill or drop hot food while removing it from the ovens.
- Do not place anything on the oven door when it is open. This could unbalance the oven or damage the door.
- Do not hang towels, dishcloths or clothes from the appliance or its handles.

1.4 DURING CLEANING AND MAINTENANCE

- Make sure that your appliance is turned off at the mains before carrying out any cleaning or maintenance operations.
- Do not remove the control knobs to clean the control panel.
- To maintain the efficiency and safety of your appliance, we recommend you always use original spare parts and to call our authorised service agents in case of need.

2. INSTALLATION AND PREPARATION FOR USE

⚠ WARNING : This appliance must be installed by an authorised service person or qualified technician, according to the instructions in this guide and in compliance with the current local regulations.

- Incorrect installation may cause harm and damage, for which the manufacturer accepts no responsibility and the warranty will not be valid.
- Prior to installation, ensure that the local distribution conditions (electricity voltage and frequency) and the adjustments of the appliance are compatible. The adjustment conditions for this appliance are stated on the label.
- The laws, ordinances, directives and standards in force in the country of use are to be followed (safety regulations, proper recycling in accordance with the regulations, etc.).
- If the product contains removable shelf guides (wire racks) and the user manual includes recipes like yoghurt, the wire racks shall be removed and the oven operated in the defined cooking mode. Removal of the Wire Shelf information is included in the CLEANING AND MAINTENANCE section.

2.1 INSTRUCTIONS FOR THE INSTALLER

General instructions


- After removing the packaging material from the appliance and its accessories, ensure that the appliance is not damaged. If you suspect any damage, do not use it and contact an authorised service person or qualified technician immediately.
- Make sure that there are no flammable or combustible materials in the close vicinity, such as curtains, oil, cloth etc. which may catch fire.
- The worktop and furniture surrounding the appliance must be made of materials resistant to temperatures above 100°C.
- The appliance should not be installed directly above a dishwasher, fridge, freezer, washing machine or clothes dryer.

2.2 INSTALLATION OF THE OVEN


The appliances are supplied with installation kits and can be installed in a worktop with the appropriate dimensions. The dimensions for hob and oven installation are given below.

A (mm)	557	min./max. F (mm)	560/580
B (mm)	550	min. G (mm)	555
C (mm)	595	min. H/I (mm)	600/590
D (mm)	575	min. J/K (mm)	5/10
E (mm)	576		


Installation under a worktop

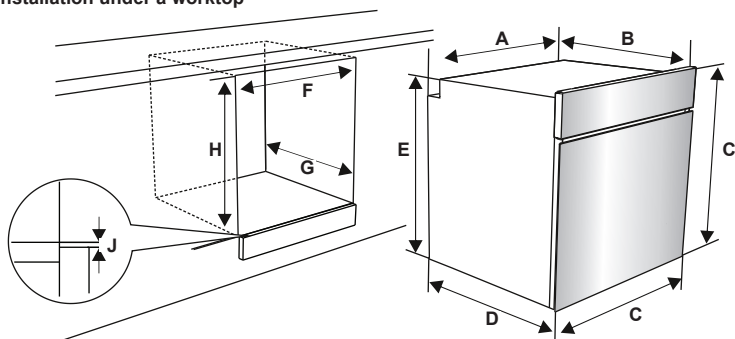

Installation in a wall unit

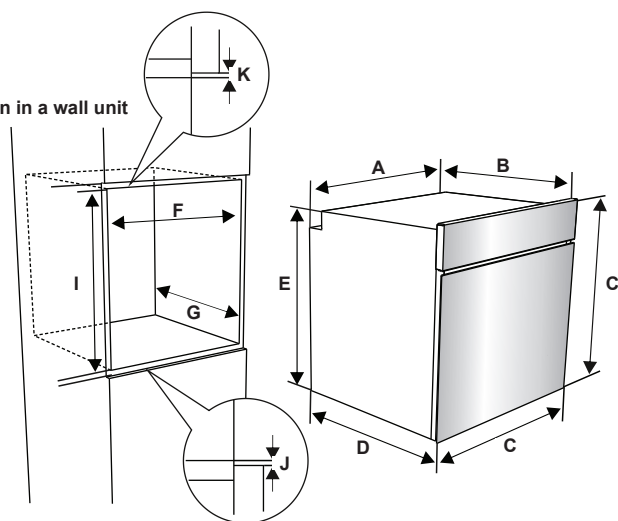

After making the electrical connections, insert the oven into the cabinet by pushing it forward. Open the oven door and insert 2 screws in the holes located on the oven frame. While the product frame touches the wooden surface of the cabinet, tighten the screws.

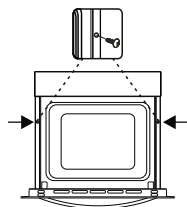


2.3 ELECTRICAL CONNECTION AND SAFETY

! WARNING: The electrical connection of this appliance should be carried out by an authorised service person or qualified electrician, according to the instructions in this guide and in compliance with the current local regulations.

! WARNING: THE APPLIANCE MUST BE EARTHED.

- Before connecting the appliance to the power supply, the voltage rating of the appliance (stamped on the appliance identification plate) must be checked for correspondence to the available mains supply voltage, and the mains electric wiring should be capable of handling the appliance's power rating (also indicated on the identification plate).
- During installation, please ensure that isolated cables are used. An incorrect connection could damage your appliance. If the mains cable is damaged and needs to be replaced this should be done by a qualified personnel.
- Do not use adaptors, multiple sockets and/or extension leads.
- The supply cord should be kept away from hot parts of the appliance and must not be bent or compressed. Otherwise the cord may be damaged, causing a short circuit.
- If the appliance is not connected to the mains with a plug, a all-pole disconnector (with at least 3 mm contact spacing) must be used in order to meet the safety regulations.
- The appliance is designed for a power supply of 220-240V. If your supply is different, contact the authorised service person or a qualified electrician.
- The power cable (H05VV-F) must be long enough to be connected to the appliance, even if the appliance stands on the front of its cabinet.
- Ensure all connections are adequately tightened.
- Fix the supply cable in the cable clamp and then close the cover.
- The terminal box connection is placed on the terminal box.

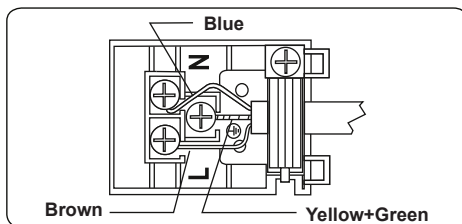

3. PRODUCT FEATURES




Important: Specifications for the product vary and the appearance of your appliance may differ from that shown in the figures below.

List of Components



- 1. Control Panel
- 2. Oven Door Handle
- 3. Oven Door

Control Panel

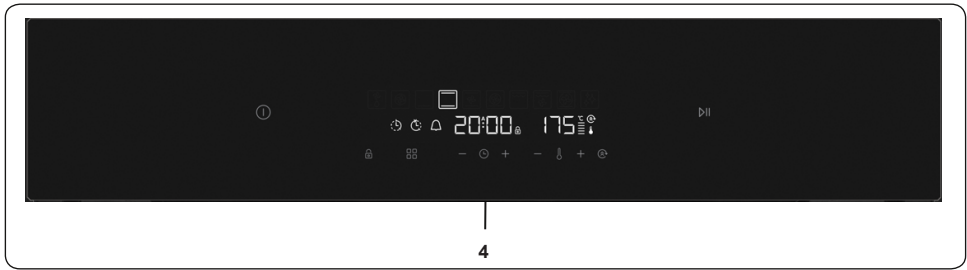


- 4. Timer

4. USE OF PRODUCT


Oven Functions

* The functions of your oven may be different due to the model of your product.

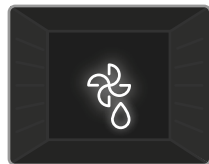


Defrost Function: The oven's warning lights will switch on and the fan will start to operate. To use the defrost function, place your frozen food in the oven

on a shelf in the third slot from the bottom. It is recommended that you place an oven tray under the defrosting food to catch the water accumulated due to melting ice. This function will not cook or bake your food, it will only help to defrost it.

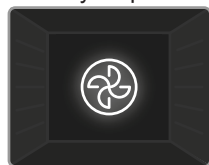


Turbo Function: The oven's thermostat and warning lights will switch on, and the ring heating element and fan will start operating. The turbo function

evenly disperses the heat in the oven so all food on all racks will cook evenly. It is recommended that you preheat the oven for about 10 minutes.

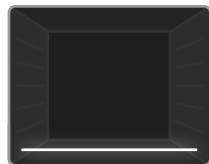

Lower Heating Function: The oven's thermostat and warning lights will switch on, and the lower heating element will start operating.

The lower heating function is ideal for heating pizza as the heat rises from the bottom of the oven and warms the food up. This function is appropriate for heating food instead of cooking.

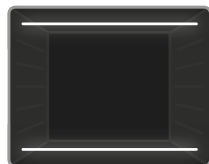

Static Cooking Function: The oven's thermostat and warning lights will switch on, and the lower and upper heating elements will start operating. The

static cooking function emits heat, ensuring even cooking of food. This is ideal for making pastries, cakes, baked pasta, lasagne and pizza. Preheating the oven for 10 minutes is recommended and it is best to use only one shelf at a time in this function.




Fan Function: The oven's thermostat and warning lights will switch on, and the upper and lower heating elements and fan will start operating.

This function is good for baking pastry. Cooking is carried out by the lower and upper heating elements within the oven and by the fan, which provides air circulation, giving a slightly grilled effect to the food. It is recommended that you preheat the oven for about 10 minutes. The fan and lower heating function is ideal for baking food, such as pizza, evenly in a short period of time. The fan evenly disperses the heat of the oven, while the lower heating element bakes the food.



Pizza Function: The oven's thermostat and warning lights will switch on, and the ring, lower heating elements and fan will start operating. This function

is ideal for baking food, such as pizza, evenly in a short time. While the fan evenly disperses the heat of the oven, the lower heating element ensures baking of the food.

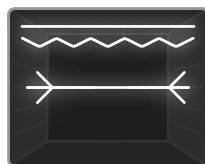

Faster Grilling and Roasting Chicken Function: The oven's thermostat and warning lights will switch on, and the grill, upper heating elements and turnspit will start operating. This

function is used for faster grilling as well as for grilling food with a larger surface area, such as meat. It is also suitable for roasting chicken using the roasting skewer. For grilling, use the upper shelves of the oven. Lightly brush the wire grid with oil to stop foods sticking and place food in the centre of the grid. Always place a tray beneath the food to catch any drips of oil or fat. When roasting chicken, please see the accessories section. We recommend preheating the oven for about 10 minutes when using this function.

Warning: When grilling, the oven door must be closed and the oven temperature should be adjusted to 190°C.



Double Grill - Fan and Roasting

Chicken Function:

The oven's thermostat and warning lights will illuminate, and the grill, upper heating

elements, fan and turnspit will start operating. This function is used for fast grilling of thick food, for cooking food with a large surface area and for roasting chicken with the roasting skewer. Both the upper elements of the grill will operate along with the fan to ensure even cooking. For grilling, use the upper shelves of the oven. Lightly brush the wire grid with oil to stop food from sticking and place food in the centre of the grid. Always put a tray underneath the food to catch any drips of oil or fat. When roasting chicken, please see the accessories section. We recommend that you preheat the oven for about 10 minutes.

Warning: When grilling, the oven door must be closed and the oven temperature should be adjusted to 190°C.



3D Function: In order to save energy you can use this function instead of cooking using the turbo function. However, the cooking time will be longer. Examine the

cooking table to obtain the best results for cooking that can be done with this function.

Warning: The oven door should not be opened until the food is completely cooked.

VapClean:

Set your oven function to the function that includes the vap clean symbol (Bottom, Bottom+Fan, Turbo or Top+Bottom Function. It may differentiate among models.) at 90 °C to operate Vap Clean function. Pour 200-250ml of water into the tray. In some models there is a cavity which is stated on the oven base. In this models pour 200-250ml of water into this cavity. Start the oven and Vapclean will take approximately 30-60 minutes to prepare your oven for easy cleaning.


Warning: When grilling, the oven door must be closed and the oven temperature should be adjusted to 190°C.

4.1 COOKING TABLE

Function	Dishes			
Static	Puff Pastry	2-3-4	170-190	35-45
	Cake	2-3-4	170-190	30-40
	Cookie	2-3-4	170-190	30-40
	Stew	2	175-200	40-50
	Chicken	2-3-4	200	45-60
Fan	Puff Pastry	2-3-4	170-190	25-35
	Cake	2-3-4	150-170	25-35
	Cookie	2-3-4	150-170	25-35
	Stew	2	175-200	40-50
	Chicken	2-3-4	200	45-60
Turbo	Puff Pastry	2-3-4	170-190	35-45
	Cake	2-3-4	150-170	30-40
	Cookie	2-3-4	150-170	25-35
	Stew	2	175-200	40-50
Grilling	Grilled meatballs	7	200	10-15
	Chicken	*	190	50-60
	Chop	6-7	200	15-25
	Beefsteak	6-7	200	15-25

*If available cook with roast chicken skewer.

4.2 USE OF THE FULL TOUCH CONTROL TIMER

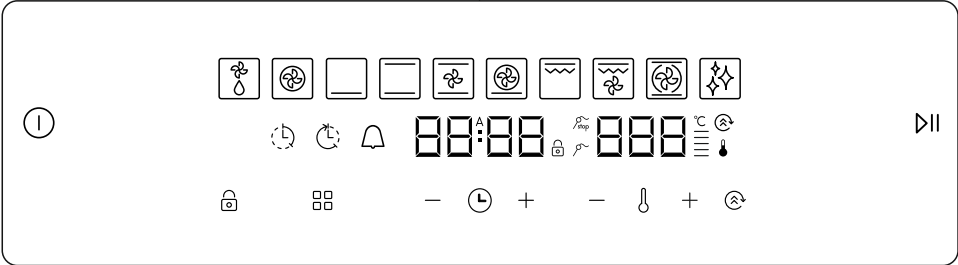

Function Description							
	On/Off		Faster Grilling Function		Auto Cooking		Meat Probe Stop
	Defrost		Double Grill + Fan Function		Temperature Bar		Meat Probe
	Turbo Function		3D Function		Thermostat		Cooking Time
	Bottom Function		Cleaning Function		Minus		Cooking End Time
	Static Function		Temperature Display		Plus		Minute Minder
	Fan Function		Time Display		Key Lock		Boost
	Pizza Function		Mode		Play/Pause		Function Menu

The appliance is operated using touch control sensors. The functions are controlled by touching the sensor fields. When you are using the controls, make sure that you touch the sensor field correctly. If your touch is too flat or too small the sensors will not operate correctly.

The cooling fan will switch on automatically in order to keep the surfaces of the appliance cool. The fan will continue to run until it automatically switches off, even after the oven has been switched off.

The control unit will switch off after 5 minutes if no function is selected or changed.

Oven Function Selection

Touch the ON/OFF sensor for 2 seconds to switch the control unit on. The oven will enter “WAIT” mode. Defrost function comes as a default on “WAIT” mode. However, unless the **PLAY/PAUSE** sensor is pressed, the function will not start.

During this mode, you will be able to select the desired cooking functions, adjust the temperature, activate the “**BOOST**” function, as well as adjust the cooking time, end time, Minute Minder timer and the time of day.

During “**WAIT**” mode, the desired cooking function can be selected by touching the sensor button. Each touch on the sensor will change the oven function, as shown below (some of these cooking functions may not be present in your cooker model):

Defrost → Turbo → Bottom→Bottom and Top →Bottom and Top with Fan →Pizza → Faster Grilling (with/without turnspit) → Double Grill with Fan (with/without turnspit) → 3D →Vap clean

The operated heaters related to the selected function will be displayed.

When a cooking function is selected using the sensor, the previously selected

temperature value will show on the Temperature display. This can be adjusted using the **PLUS** and **MINUS** sensor buttons on the side of the temperature button. The temperature can be adjusted within the range of 50°C to 275°C.

After the desired function, temperature and time have been selected, touch the **PLAY/PAUSE** sensor to start the oven function operation.



Temperature can be adjusted within the range of 50°C to 320°C in Pizza function.

Adjusting the Time of Day

When the oven has been installed, the time of day must be set according to the following instructions.

Touch the **ON/OFF** sensor to switch the oven on and enter “**WAIT**” mode. During this mode, touch the **MODE**() sensor button for 5 seconds until the day time is selected. The symbol for the time will illuminate on the left side and you can adjust it using the **PLUS** and **MINUS** sensor buttons on the side of the **MODE**() button. To complete the time adjustment, touch the **MODE**() sensor once again or do not touch any button for 5 seconds.

The time will only have to be set again if the appliance is disconnected from the power supply for a long period of time.

Adjusting the Minute Minder

Touch the **MODE**() sensor until the Minute Minder symbol illuminates on the Time display and “**00:00**” appears. Adjust the desired time period for the warning signal using the **PLUS** and **MINUS** sensor buttons while the symbol is flashing. When you have completed the adjustment, do not press any buttons for a few seconds, then the Minute Minder timer will be set.

When the timer reaches zero, an audible warning will sound, and the Minute Minder symbol and “**00:00**” will flash on the Time display. Press any button to stop the audible warning and the symbol will disappear.

Adjusting the Cooking Duration Time

The cooking time can be adjusted during “**WAIT**” mode or during “**OPERATING**” mode. This function helps you to cook for a fixed period of time. Prepare the food for cooking and put it in the oven. Then select the desired cooking function and the temperature. Touch the **MODE**() sensor button until you see the cooking

time symbol on the Time display. Set the required cooking period using the **PLUS** and **MINUS** sensors while the timer is in this position. When you have completed the adjustment, wait until the current time of day is displayed and until the cooking time symbol remains illuminated.

When the timer reaches zero, the oven will switch off, an audible warning will sound and the cooking time symbol will flash on the Time display. Touch any sensor on the control unit to end the sound.

Adjusting the Cooking End Time

This function is used to begin cooking after a certain period of time and for a specific duration of time. Prepare the food for cooking and put it in the oven. Then, select the desired cooking function and the temperature.

Touch the **MODE**() button until you see the cooking time symbol on the Time display. Set the required cooking period using the **PLUS** and **MINUS** sensor. When you have completed the adjustment the cooking time, touch the **MODE**() sensor button until you see the Cooking End Time symbol on the Time display. The time of day and the Cooking End Time symbol will flash. Set the required finish time using the **PLUS** and **MINUS** sensors. When you have completed the adjustment, wait until the current time of day is displayed and until the Cooking End Time symbol remains illuminated.

The oven will calculate the operating time by deducting the cooking period from the set finishing time, at which it will stop operating. The timer will give an audible warning and the cooking time symbol will flash. Touching any button on the timer will end the audible warning.



The cooking end time cannot be set when the grill functions are activated. If the cooking end time was set before activating the grill functions, the cooking end time will be canceled after the grill functions are selected.

Sound Adjustment

To change the warning signal sound, while the time display shows the time of day, press and hold the **THERMOSTAT**() sensor button for 5 seconds until there is an audible signal sound. After that, different signal sound will be heard each time the **PLUS** and **MINUS** buttons next to the thermostat button are pressed. There are five different types of signal sounds. If “off”

is selected, all sounds will be turned off except alarm and error sounds. Select the sound you want and any other do not press a button. After a short time the selected beep will be recorded.

Boost Function

This function is used to shorten the preheating time. You can preheat in Turbo, Fan, Static or Pizza functions. In order to preheat, it is sufficient to press the **BOOST** (⚡) sensor after selecting the desired cooking function.

Use this function to heat the oven the desired temperature as quickly as possible. This mode is not appropriate for cooking.

Key Lock Function


The key lock is used to avoid unintentional changes being made to the oven settings. Press and hold the "🔒" button until you see the key lock symbol on the display screen. To deactivate the key lock, press and hold the "🔒" button until the key lock symbol disappears from the display. While the key lock is active, only the power button will be usable, all other buttons will remain locked. If there is no oven activity for 6 hours while the oven is operating, the oven will automatically switch off.

Mode	Electricity consumption	Time to switch into mode
Standby Mode	0,8 W	5 minutes

4.3 ACCESSORIES

The EasyFix Wire Rack

Clean the accessories thoroughly with warm water, detergent and a soft clean cloth on first use.

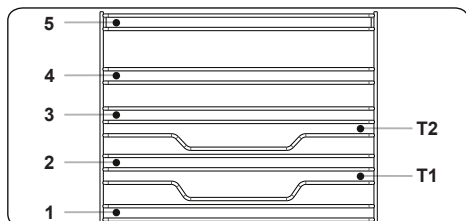

- Insert the accessory to the correct position inside the oven.
- Allow at least a 1 cm space between the fan cover and accessories.
- Take care removing cookware and/or accessories out of the oven. Hot meals or accessories can cause burns.


- The accessories may deform with heat. Once they have cooled down, they will recover their original appearance and performance.
- Trays and wire grids can be positioned on any level from 1 to 5.
- Telescopic rails can be positioned on levels T1, T2, 3, 4, 5.
- Level 3 is recommended for single level cooking.
- Level T2 is recommended for single level cooking with the telescopic rails.
- The turnspit wire grid must be positioned on Level 3.
- Level T2 is used for the turnspit wire grid positioning with telescopic rails.

****Accessories may vary depending on the model purchased.

The Deep Tray

The deep tray is best used for cooking stews.

Put the tray into any rack and push it to the end to make sure it is placed correctly.

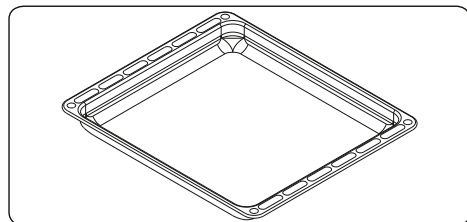


FIRST IN THE WORLD

Hot Air Shield System in Built-in Ovens

The patented hot air shield system prevents hot air from reaching the end user by creating an air curtain when the oven door is opened.

The Meat Probe

The meat probe measures the temperature inside a roast. Cooking with the meat probe ensures optimum results for any type of meat or size of roast.

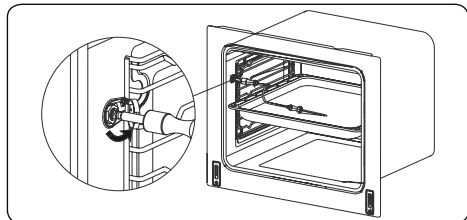

Placing the meat probe

- Place the probe before roasting begins.
- Insert the probe into the side of the roast so that the point reaches its centre.
- Insert the entire probe, up to the handle.
- We recommend that you turn the roast over half-way through cooking. Bear this in mind when placing the probe to avoid problems with it later.
- The point of the probe must not be touching a bone or fatty areas of the joint. Also, it should not be in a hollow area, which could happen with poultry.
- Put the roast with the probe already in it into the oven.
- Plug the probe into the socket in the upper left side of the oven.

Warning: Do not use the meat probe for cooking at temperatures higher than 200°C. Do not leave it installed in the oven.



Using the Meat Probe with the Timer

Plug the probe into the socket which is at the upper left side of the oven, and the meat probe symbol  and meat probe temperature will appear on the display. When the meat probe is plugged, only manual cooking will be performed and from the main menu. When the meat probe is plugged or unplugged, the running function will remain on the set oven function.



Meat probe can be used when functions other than cleaning, automatic cooking, defrost and boost are selected. At this screen meat probe temperature/meat probe symbol will be showed on the display and function can be selected. Also temperature symbol used to adjust the meat probe temperature between 30°C - 100°C while cooking and before cooking. When the thermostat button is pressed again after setting the meat probe temperature, the core temperature of the oven is adjusted. Pressing the play/pause symbol, cooking will be started by using the meat probe, and since the meat probe is heated to desired temperature, heat display will be loaded. When the heat display is completely loaded, cooking will end with a buzzer warning.

The Rotisserie

1. Loosen the screws on the skewer clamps (b) and pull them off the spit. Push the spit through the chicken, slide the clamps back on, and stick them into the chicken. Tighten the screws.
2. Fit the skewer grid (c) into the appropriate rack.

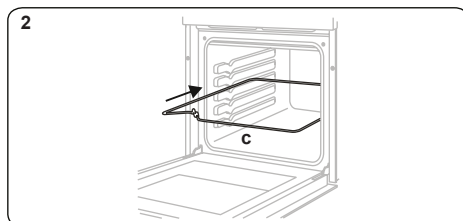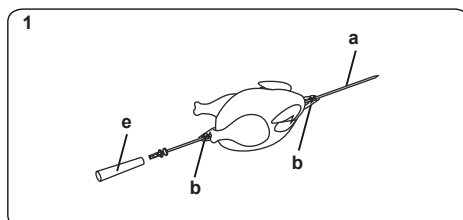

3. Insert the tip of the skewer (a) into the skewer insertion hole (d).
4. Fit the skewer on the skewer grid, remove the handle and close the oven door. The handle (e) must only be attached for removing the chicken after roasting.

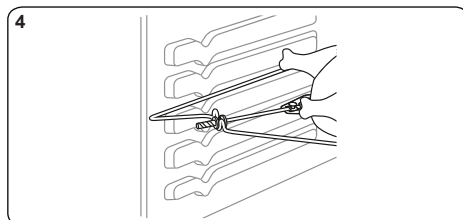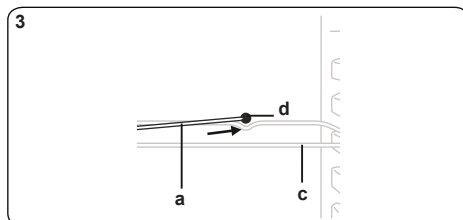


Important: Make sure the oven is not in operation while performing these steps.

Place the grill heat deflector under the control panel if your oven does not support closed-door grilling.

The Shallow Tray


The shallow tray is best used for baking pastries.

Put the tray into any rack and push it to the end to make sure it is correctly placed.

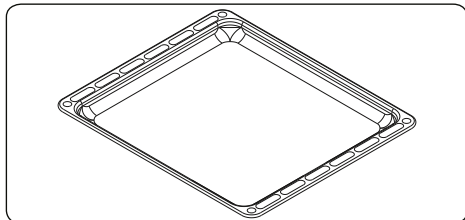


Wire Rack with Easyfix Full Extension Telescopic Rail

The telescopic rail extends out fully to allow easy access to your food.

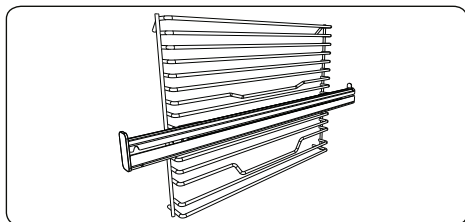


Telescopic rails

Clean the accessories thoroughly with warm water, detergent and a soft clean cloth on first use.

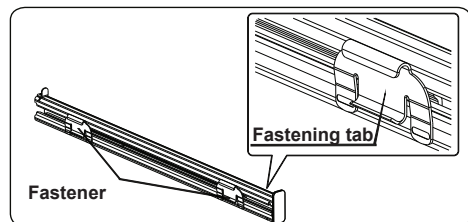


- Positioning of the telescopic rails on the wire rack is secured with the fastening tabs on the fasteners.
- Remove the side runner. See section "Removal of the wire shelf".

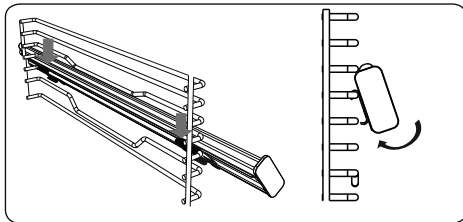


- On each telescopic rail there are top and bottom fasteners that allows you to reposition the rails.
- Hang the telescopic rail top fasteners on the side rack level reference wire and simultaneously press the bottom fasteners until you clearly hear the fasteners clip into the side rack level fixing wire.
- In order to remove, hold the front surface of the rail and follow the previous instructions in reverse.

Frying Kit

Especially designed for the air frying of foods such as potatoes, chicken and corn without or with less oil in the oven.

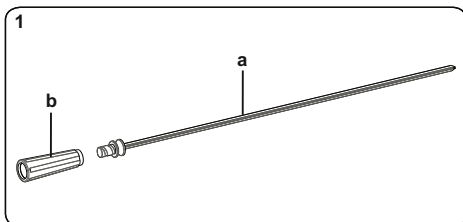


Fix the the handle (b) on the skewer (a) by screwing clockwise.

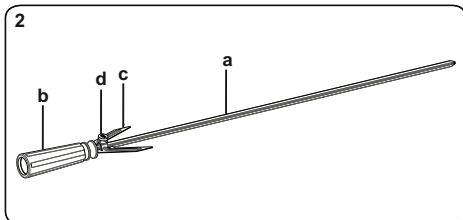


Position one of the skewer clamps (c) on the skewer (a) in contact with the end of the skewer.


Tighten the screw (d) to fix the position of the clamp.

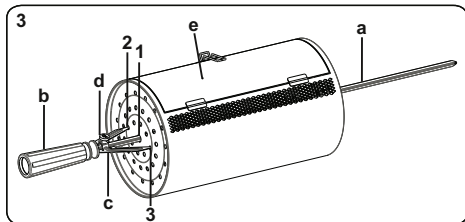

Place the frying basket (e) on the skewer (a), through the center hole (1) and position it such that the end points of the skewer clamp move in the holes (2) and (3).

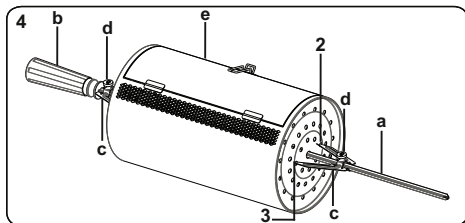

Fix the frying basket by positioning the second skewer clamp (c) on the skewer (a) such that the end points of the skewer clamp (c) are inserted in the holes (2) and (3). Tighten the screw (d).

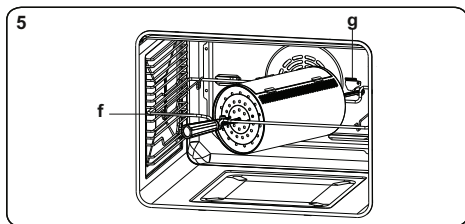


Fit the skewer grid (f) into the appropriate rack.

Insert the tip of the skewer (a) into the skewer hole (g) on the rear wall of the oven cavity.

Fit the skewer (a) on the skewer grid, remove the handle (b) and close the oven door.

Important: Be sure that the oven is not operating while performing above steps.

Important: The handle (b) must be re-attached for removing the frying set after cooking process.

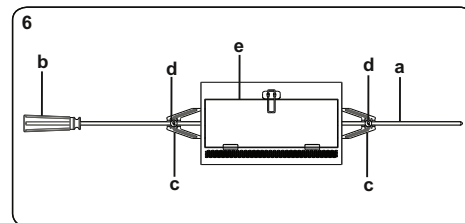

Important: For the 90x60cm ovens, the frying basket should (e) be placed in the middle of the skewer (a) as shown in Figure-6.

Important: Unless the roasting chicken function is used, be sure that the cover of the skewer hole is closed.

Important: In order to prevent the spillage on the bottom of the oven cavity, oven tray can be used in a rack position below the frying kit.

Important: Cooking times may vary depending on the fat content of the food.

Important: If your oven is not supporting grill function when oven door is closed, be sure that the grill heat shield is fitted on the oven before the grill function.

ITEM	PART DEFINITION	QUANTITY
a	Skewer	1
b	Skewer Handle	1
c	Skewer Clamp	2
d	Screw	2
e	Frying Basket	1
f	Skewer Grid	1
g	Skewer Hole	1
h	Skewer Hole Cover	1

Cooking Table

Foods	Quantity	Function	 °C	 min.
Chicken leg	6 nos	Double Grill + Fan	200°C	40-45
Potato chips	0.5 kg	Double Grill + Fan	200°C	25-30
Popcorn	200 g + 2 tbsp butter	Double Grill + Fan	270°C	6 min (from the first corn kernel pops) (Cover with another tray)
Sausage	200 g	Double Grill + Fan	200°C	15-20
Vegetable	200 g	Double Grill + Fan	200°C	20-25


Cleaning the Frying Kit

After each cooking process clean the frying kit.

Frying Kit should be hand washed with a sponge with warm water and detergent after being kept in hot water for a while until the dirt softens.


The Wire Grid

The wire grid is best used for grilling or for processing food in oven-friendly containers.

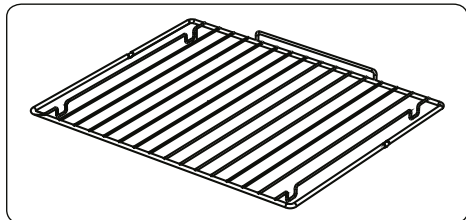


WARNING

Place the grid to any corresponding rack in the oven cavity correctly and push it to the end.

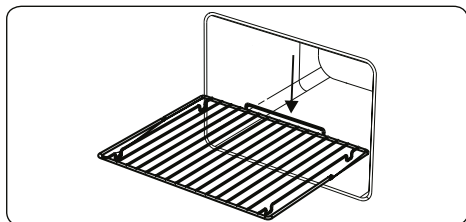

Soft-Close Oven Door

The oven door closes slowly by itself when it is released just before the closed position.

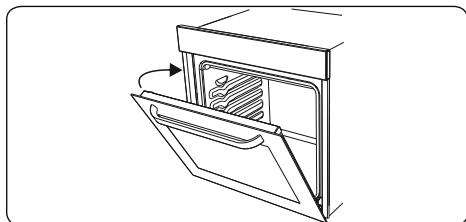


The Water Collector

In some cases of cooking, condensation may appear on the inner glass of the oven door. This is not a product malfunction.

Open the oven door into the grilling position and leave it in this position for 20 seconds.

Water will drip to the collector.

Cool the oven and wipe the inside of the door with a dry towel. This procedure must be applied regularly.

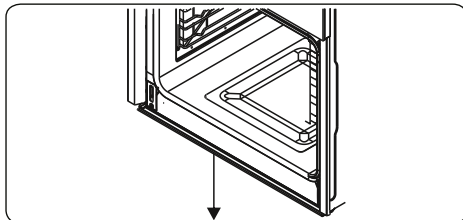

5. CLEANING AND MAINTENANCE

5.1 CLEANING

 **WARNING:** Switch off the appliance and allow it to cool before cleaning is to be carried out.

General Instructions

- Check whether the cleaning materials are appropriate and recommended by the manufacturer before use on your appliance.
- Use cream cleaners or liquid cleaners which do not contain particles. Do not use caustic (corrosive) creams, abrasive cleaning powders, rough wire wool or hard tools as they may damage the cooker surfaces.


 Do not use cleaners that contain particles as they may scratch the glass, enamelled and/or painted parts of your appliance.

- Should any liquids overflow, clean them immediately to avoid parts becoming damaged.

 Do not use steam cleaners for cleaning any part of the appliance.

Cleaning the Inside of the Oven

- The inside of enamelled ovens are best cleaned while the oven is warm.
- Wipe the oven with a soft cloth soaked in soapy water after each use. Then, wipe the oven over again with a wet cloth and dry it.
- You may need to use a liquid cleaning material occasionally to completely clean the oven.

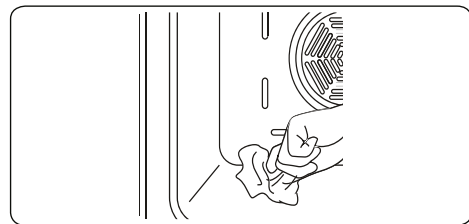

Cleaning the Glass Parts

- Clean the glass parts of your appliance on a regular basis.
- Use a glass cleaner to clean the inside and outside of the glass parts. Then, rinse and dry them thoroughly with a dry cloth.

Cleaning the Stainless Steel Parts (if available)

- Clean the stainless steel parts of your appliance on a regular basis.
- Wipe the stainless steel parts with a soft cloth soaked in only water. Then, dry them thoroughly with a dry cloth.



Do not clean the stainless steel parts while they are still hot from cooking.



Do not leave vinegar, coffee, milk, salt, water, lemon or tomato juice on the stainless steel for a long time.


Cleaning Painted Surfaces (if available)

- Spots of tomato, tomato paste, ketchup, lemon, oil derivatives, milk, sugary foods, sugary drinks and coffee should be cleaned with a cloth dipped in warm water immediately. If these stains are not cleaned and allowed to dry on the surfaces they are on, they should NOT be rubbed with hard objects (pointed objects, steel and plastic scouring wires, surface-damaging dish sponge) or cleaning agents containing high levels of alcohol, stain removers, degreasers, surface abrasive chemicals. Otherwise, corrosion may occur on the powder painted surfaces, and stains may occur. The manufacturer will not be held responsible for any damage caused by the use of inappropriate cleaning products or methods.

Removal of the Inner Glass


You must remove the oven door glass before cleaning, as shown below.

1. Push the glass in the direction of **B** and release from the location bracket (**x**). Pull the glass out in the direction of **A**.

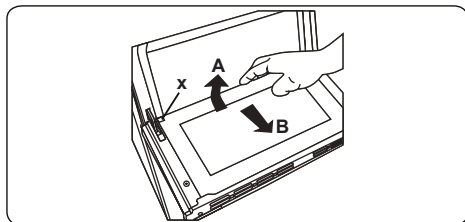


To replace the inner glass:

1. Push the glass towards and under the location bracket (**y**), in the direction of **B**.

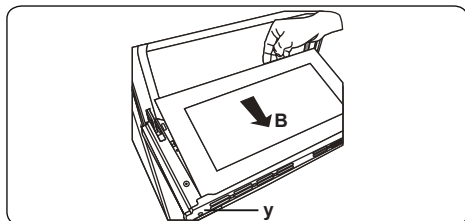

3. Place the glass under the location bracket (**x**) in the direction of **C**.

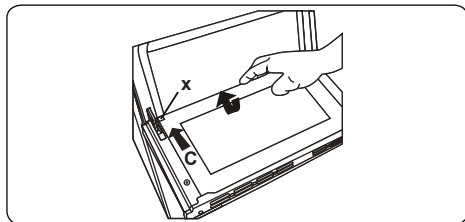


If the oven door is a triple glass oven door, the third glass layer can be removed the same way as the second glass layer.


Removal of the Oven Door

Before cleaning the oven door glass, you must remove the oven door, as shown below.


1. Open the oven door.

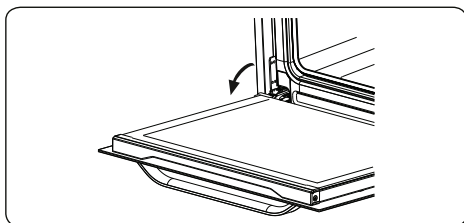

2. Open the locking catch (**a**) (with the aid of a screwdriver) up to the end position.

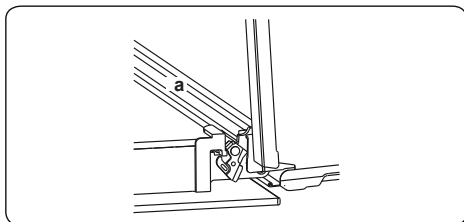


3. Close the door until it is almost in the fully closed position, and remove the door by pulling it towards you.

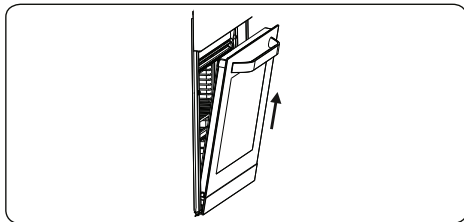

Removal of the Wire Shelf

To remove the wire rack, pull the wire rack as shown in the figure. After releasing it from the clips (**a**), lift it up.

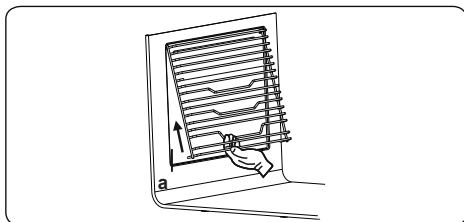


5.2 MAINTENANCE

WARNING: The maintenance of this appliance should be carried out by an authorised service person or qualified technician only.

Changing the Oven Lamp

WARNING: Switch off the appliance and allow it to cool before cleaning your appliance.

- Remove the lamp
- Insert the new led lamp (5VDC, 3.4W, LED)
- Your oven is ready for use.
- The product contains a light source of energy efficiency class E.
- Light source can not be replaced by end user. After sales service is needed.
- The included light source is not intended for use in other applications.

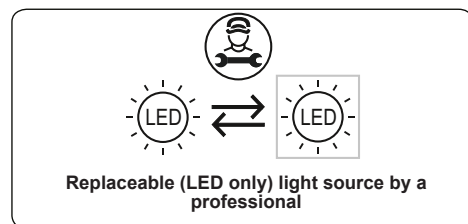

WARNING: The lamp is designed specifically for use in household cooking appliances. It is not suitable for household room illumination.

6. TROUBLESHOOTING&TRANSPORT

6.1 TROUBLESHOOTING



If you still have a problem with your appliance after checking these basic troubleshooting steps, please contact an authorised service person or qualified technician.

Problem	Possible Cause	Solution
Oven does not switch on.	Power is switched off.	Check whether there is power supplied. Also check that other kitchen appliances are working.
No heat or oven does not warm up.	Oven temperature control is incorrectly set. Oven door has been left open.	Check that the oven temperature control knob is set correctly.
Oven light (if available) does not operate.	Lamp has failed. Electrical supply is disconnected or switched off.	Replace lamp according to the instructions. Make sure the electrical supply is switched on at wall socket outlet.
Cooking is uneven within the oven.	Oven shelves are incorrectly positioned.	Check that the recommended temperatures and shelf positions are being used. Do not frequently open the door unless you are cooking things that need to be turned. If you open the door often, the interior temperature will be lower and this may affect the results of your cooking.
The timer buttons cannot be pressed properly.	There is foreign matter caught between the timer buttons. Touch model: there is moisture on the control panel. The key lock function is set.	Remove the foreign matter and try again. Remove the moisture and try again. Check whether the key lock function is set.
The oven fan (if available) is noisy.	Oven shelves are vibrating.	Check that the oven is level. Check that the shelves and any bake ware are not vibrating or in contact with the oven back panel.
The cooling fan continues to operate after the oven is switched off.	Electronically-controlled oven fan automatically runs for a certain amount of time to cool the oven.	The fan switches off automatically when the electronic components have cooled sufficiently.
The oven has switched itself off.	Electronically-controlled ovens switch off automatically if no function is in operation.	The oven will switch itself off automatically to save energy if no other action is taken within a certain time frame after switching it on or after the end of a cooking programme.
If the door is opened during a fan-assisted function, the internal fan will stop.	Electronically-controlled ovens with a door switch will stop cooking if the oven door is opened.	It is a normal operation of the appliance, useful when cooking foods in order to avoid excessive heat escaping. When the door is closed, the oven will restart to normal operation.

6.2 TRANSPORT

If you need to transport the product, use the original product packaging and carry it using its original case. Follow the transport signs on the packaging. Tape all independent parts to the product to prevent damaging the product during transport.

If you do not have the original packaging, prepare a carriage box so that the appliance, especially the external surfaces of the product, is protected against external threats.

WARRANTY

IFB Industries Limited. ("The Company") warrants to the original domestic purchase of this built in oven ("Appliances") that it is free from defects in workmanship & materials. During 12 months from the date of purchase of the new built-in oven model, all parts of the built in oven shall be replaced or repaired free of charge, on intimation to the Company I Company's authorized service centre nearest to the place where the appliance is installed

This warranty is subject to Limitations of Warranty :

1. This warranty is not valid in case of the following events.
 - a) If the warranty card is not fully and properly filled in and signed at the time of purchase I installation by the company's authorised dealer I service engineer.
 - b) If the completed warranty card is not presented to the authorised personnel at the time of service I repair.
 - c) If the appliance is not used in accordance with manufacturer's instructions given in the Operating Manual.
 - d) If the appliance has been serviced, repaired, opened or tampered by any unauthorized personnel.
 - e) If defects arise caused by accidents, alteration, misuse, neglect, abuse, substitution of original components with spurious I non-genuine components, attack by household pests I rodents, fire, flood, earth-quake, lightning and I or any other acts of God natural calamities.
 - f) If damages occur by improper electrical, circuit outside the appliance or by any defective electrical supply thereof.
 - g) If the machine serial number on the appliance is defaced, missing or altered.
 - h) If the appliance is taken out of India.
2. This warranty does not cover any type of painting, plating including rusting etc or defects thereof.
3. This warranty does not cover normal wear and tear of parts.
4. Liability for consequential damages is neither accepted nor implied.
5. Parts replaced or repaired under this warranty are warranted throughout the remaining of the original warranty period.

6. Company is not liable for any delay in servicing due to reasons beyond the control of the company or any of its authorised service center.

7. This warranty is not applicable, if the built in oven is used for commercial purpose of at places like Institutions, Hotels, Hostels, Hospitals, Community Halls and other similar applications.

8. For any service under this warranty beyond city , town ,municipal limits from the Company , authorized service centre, a fixed charge of Rs. 250 /- will be collected from the customer in addition to the actual to and fro charges by the shortest route. Alternatively the customer can bring the appliance to the nearest service centre for carrying out the necessary repairs, at customer's own cost.

9. During the warranty period whenever the appliance is shifted from the original city of purchase to another city , town where service is provided by the company's authorized service agent, a warranty transfer charge of Rs. 300 /- will be collected from the customer by the company's authorized service agent. The above charges also include the reinstallation of the appliance. However in case of transfer to a city where the company provides direct service, a nominal charge of Rs. 250 /- only will be collected from the customer towards reinstallation. The Company, however, shall not undertake the responsibility of shifting I transferring the appliance from the location where the appliance was originally installed.

10. This warranty is issued subject to the jurisdiction of Kolkata courts, and I or other judicial/ quasi judicial forums having jurisdiction over the registered office of the Company. Note: For all types of repairs I maintenance under warranty, the appliance shall be brought to the nearest Company service centre or its authorised service agent.

CUSTOMER COPY

Mr./Mrs./Ms -----

Address -----

Telephone No.: -----

Model Name: -----

Serial No.: -----

Date of Purchase: -----

Cash Memo No.: -----

Dealer Name and: -----

Address stamp: -----

Service Station Copy

Mr./Mrs./Ms -----

Address -----

Pin code : -----

Telephone No.: (R) ----- (0) -----

Model Name: -----

Serial No.: -----

Date of Purchase: -----

Cash Memo No.: -----

Products Owned by the customer:

Products Owned by the customer:(Please tick in the appropriate box.)

- | | | | | |
|--|--|----------------------------------|---|-------------------------------------|
| ☐ Washing Machine | ☐ Refrigerator | ☐ ColorTV | ☐ 100% Clothes Dryer | ☐ Dishwasher |
| ☐ Car | ☐ Air Conditioner | | | |

IFB Industries Limited
Regd.off.: 14 Taratala Road
Kolkata - 700088

52565632

