

IFB

DeepClean[®]

POWERED BY 


WASHING MACHINE USER MANUAL


Eva Plus ZWS 6010

Senorita VXS/SXS 6510

Serena ZSS/MSS 7010


UF421PKMAN643 G

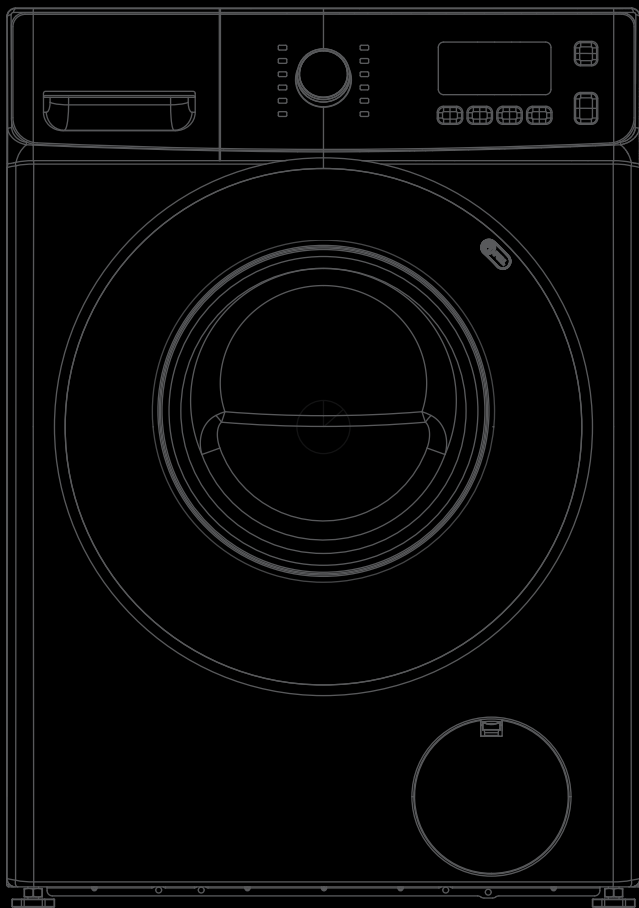

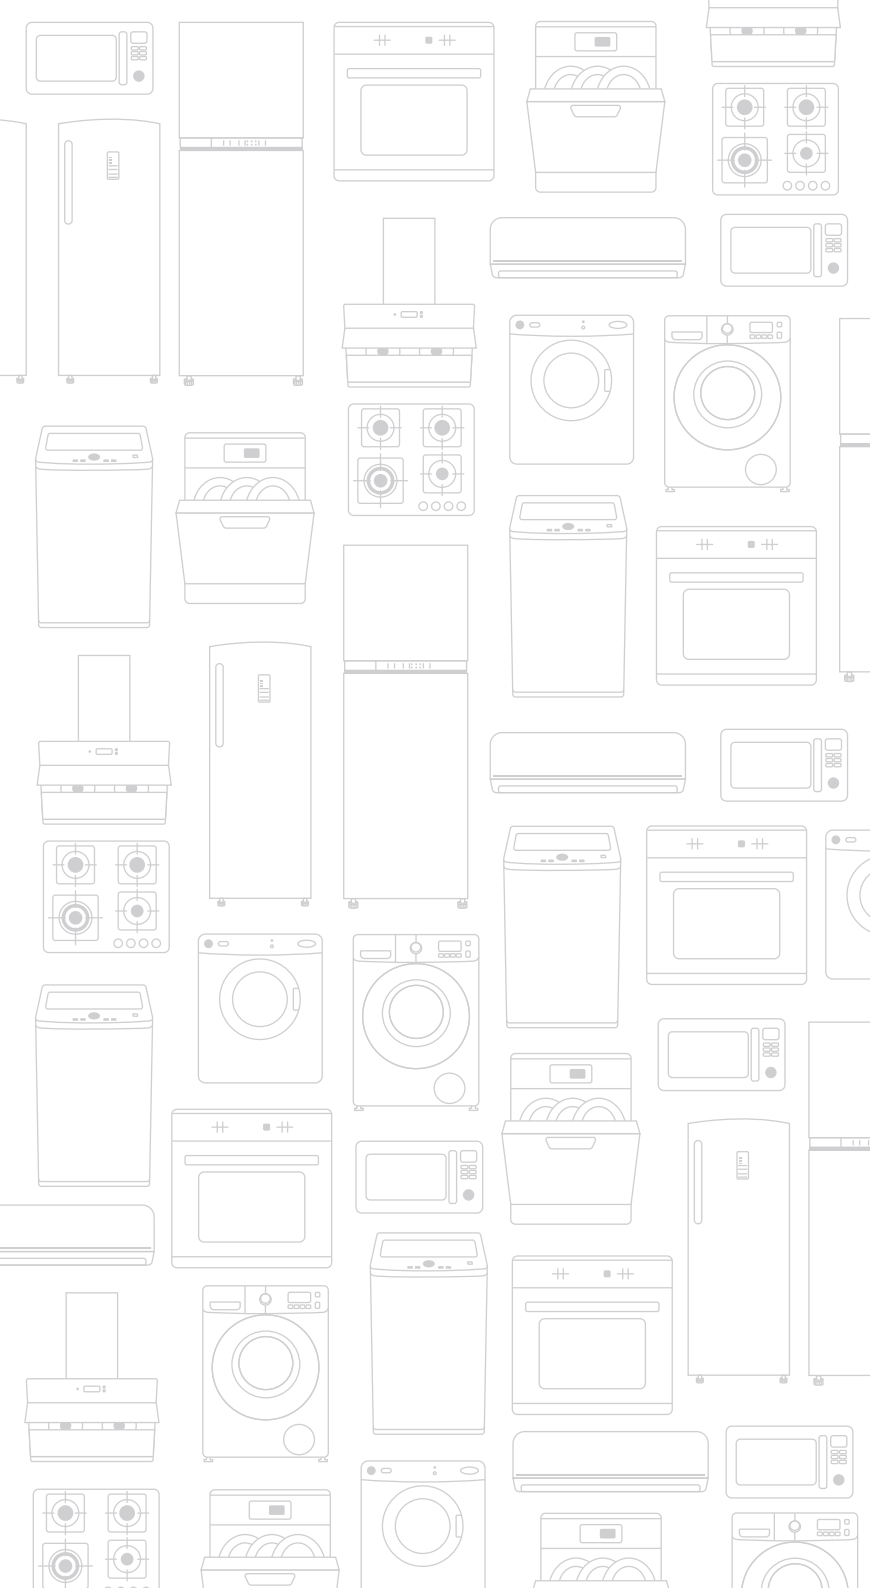

Welcome to the IFB Family

Get ready to experience excellence
in washing and long lasting peace
of mind. Happy Laundry Days to you!

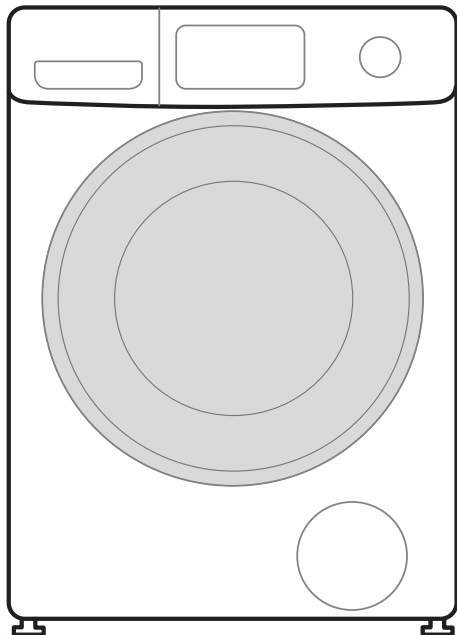

Front Load Washer

Contents

The A to Z of Your Washing Machine 06

The Display Panel 08

Safety Guidelines

Installation 11

Instructions 13

Caution 14

About eWaste 18

Section 1 Getting Started

With Your Washing Machine

Installation and Safety Guidelines 20

Before You Start 24

Section 2 Running Your Machine

6 Easy Steps For Doing Your Laundry 25

Finishing 31

Program Guide 32

Wash Options 34

Wash Guide Map 39

Key Features 43

Section 3 Getting More From

Your Machine

Tips for Best Results 48

Stain Treatment 50

Maintenance and Cleaning 54

Section 4 Useful Information

Troubleshooting 61

Display & Error Codes 69

Technical Specifications 73

Revisions Sheet 74


PRECAUTIONS

This appliance meets the required safety standards, but using it improperly could cause injury or property damage. Make sure to read this manual carefully—it covers safety, installation, use and maintenance. Use detergents with low foam to prevent any problems. Following these guidelines will help you get the most out of your new washing machine and keep it running smoothly while avoiding accidents or damage.

The A to Z of Your Washing Machine



The A to Z of Your Washing Machine

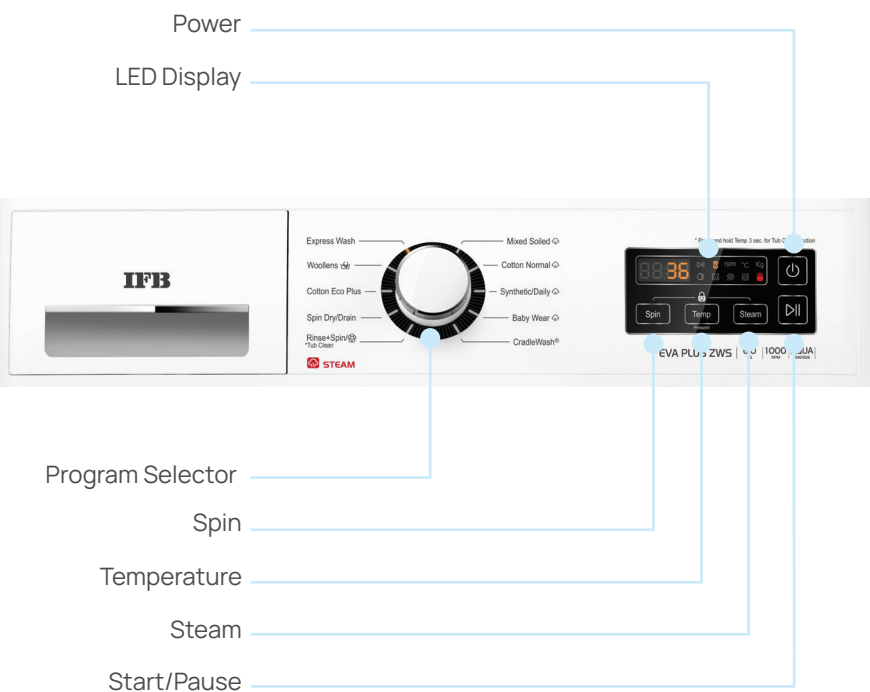



1 SPIN

Button to select the different Spin Speeds available.

2 TEMPERATURE

Button to select the different Temperatures available.

3 STEAM

Button to select the Steam option.

4 TIME STATUS

Displays Program Time, Spin Speed, Temperature, Error Codes and other status.


5 DOOR

Shows door status. Glows when door is open, flashes during door unlocking, goes OFF when door is locked.

6 PRE WASH

Glows when Pre Wash option is selected.

The Display Panel

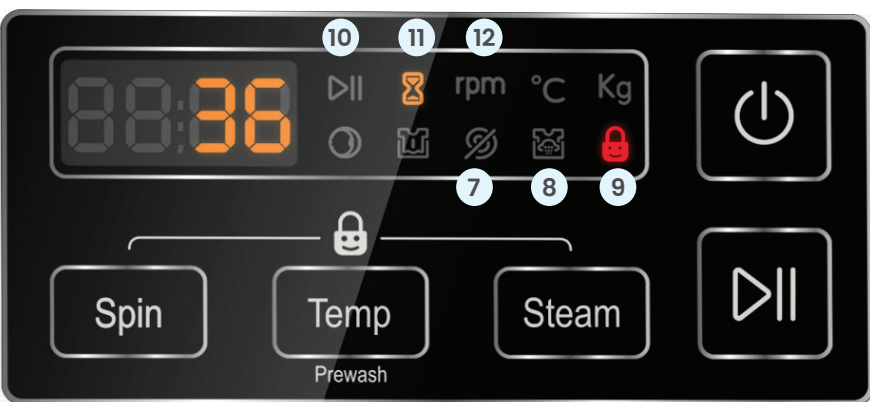

7 SPIN CANCEL

Will glow when Spin Speed '0' (No Spin) is selected.

8 STEAM

Will glow when Steam option is selected.

9 CHILD LOCK

Glow when Child Lock is selected, flashes to indicate deselection.

10 START/PAUSE

LED flashes when door is closed or during Pause mode, remains OFF when door is open and glows when program is running.

11 TIME LEFT

Will glow to indicate time left

12 RPM

Will glow during selection of spin speed.

The Display Panel



13 °C

Will glow during selection of temperature.

14 KG

Will glow indicating the maximum capacity of the program in Kg.

15 Power ON/OFF

Button to turn ON or OFF the machine.

16 START/PAUSE

Button to start or pause the program when the door is closed.



Safety Guidelines

FOR INSTALLATION

Read all instructions & explanations carefully before installation. Choose the area where the machine will be placed carefully after reading the requirements.



Keep the packaging material. It may come in handy when shifting residence.

Not removing all packaging and transit bolts before using your appliance could damage your appliance. Please do not operate your machine until the transit bolts have been removed.



Pre-installation plumbing and electrical connections must be handled by qualified fitters, electricians, or technicians.

All washing machine installation work must be carried out only by authorised IFB Care Service Personnel.

Use only the new hoses provided with the machine. Old hoses should never be reused.

Do not connect your machine to a hot water supply.

This machine works best with water pressure between 0.3 and 10 bar (that's about 3.5 to 10 litres/ minute). If the water pressure is too low, your machine might malfunction.



Your machine comes with ventilating openings on the base. Always put it directly on the floor after removing any carpets.

Keep your machine safe from direct sunlight and rainfall.

Avoid installing the machine in damp areas or bathrooms exposed to direct showers

Don't put the machine on a sloping, uneven, or unstable surface.

Make sure your machine is installed in a room with adequate ventilation. Don't pick a room without windows. And make sure there's at least 4 inches (100 mm) of space between the back of the machine and the wall.

Don't put your washing machine in places where the temperature is below freezing. If hoses freeze, they could burst when under pressure. Also, the electronic control unit might not work if it's too cold (below freezing) or too hot (above 50 °C).

A concrete floor is recommended for installation, as it reduces vibration during the spin cycle compared to wooden floorboards.

Ensure the machine is placed on a stable, level surface to prevent vibrations during operation. All four washer feet should be levelled and balanced against the floor.

Before cleaning your machine, make sure you disconnect the main electricity supply & remove the plug from the socket.

Don't use your appliance near flammable stuff like oil, benzene, or highly flammable gas. These might start fires or explosions. And don't use combustible detergents that can catch fire either.



Safety Guidelines

INSTRUCTIONS FOR USE

Safety first, always. Make sure you read all the instructions carefully before you start using the appliance. Keep the operating instructions handy for future reference



Remember, if cockroaches or other pests cause any damage, the appliance guarantee won't cover it.

Don't install or use a machine that's damaged. Before you plug it in, check if the connection details on the data plate (like fusing, voltage and frequency) match your electricity supply. If you're not sure, reach out to IFB Care for help.

Avoid washing or drying articles contaminated with combustible or explosive substances, such as oil, paint, gasoline, or solvents, to prevent fire or explosions.

Before using the machine for the first time, ensure the transit bolt at the rear is removed (refer to the installation section).

If you're leaving the machine for a while, for example if you're going on holiday, remember to turn OFF the stopcock, especially if there's no floor drain nearby.

Keep children away from the appliance, and closely supervise them when the machine is in use.

Appliances are not intended for use by children. Parents or legal guardians are responsible for supervising or training children on safe product usage. Do not let children clean or maintain appliances without adult supervision.



Caution

A WORD OF WARNING



The manufacturer isn't responsible if there's a problem with the earthing system. Make sure your machine is connected to a grounded outlet with a 16A Fuse or MCB. If you're unsure whether the machine is properly grounded, get it checked by a qualified technician or licensed electrician.

If the earthing connection is not properly carried out, it could lead to electric shocks.

Make sure the machine is connected to a 3-pin socket with good earthing and 16 Amp MCB for protection against short circuits.

Avoid using extension cables with the appliance for safety reasons, as they do not meet the required levels of safety.

When disconnecting the plug, hold the plug itself, not the cord. Don't insert or remove the plug with damp hands.

Overheating could be a real danger.

Your machine has been built according to current safety requirements.

Your machine is totally disconnected from electricity when you switch it OFF at the wall socket and remove the plug, or turn it OFF from the main source, or remove the main fuse, or switch OFF the MCB.



Caution



Letting unauthorised mechanics repair your machine, may pose unforeseen dangers. Only authorised IFB Care Service Personnel should undertake repairs.

Only use a new hose kit to connect your machine to the water supply on site. Don't try to reuse old hoses. If any parts need replacing, make sure to use genuine IFB spare parts. That way, you can be sure your machine meets safety standards.

Faulty connection cables must be replaced by authorised IFB Care Service Personnel to prevent potential danger to the user.

Never stack a washer and dryer without the proper stacking kit. This is dangerous because the dryer could shake off the washing machine while it is in use.

First use after installation—Condensed water droplets may remain inside the drum after assembly and test run. Run the first cycle without garments. Use the Cotton program at the highest temperature, add detergent, DO NOT put any clothes in the machine.

If the trolley vibrates excessively, it needs to be replaced right away. Otherwise, it could make the machine less reliable and shorten its lifespan.

If your machine has a porthole door, keep in mind that the glass might get hot when you're washing at high temperatures. Make sure children don't touch it.

Always ensure the drum is stationary before removing clothes to avoid accidents.

Avoid dragging the washing machine while it's running to prevent damage.



Caution

Keep your machine dry to avoid corrosion/rusting.

Don't spill water on the machine. If spills occur, wipe it dry. Your machine should be kept away from floor cleaning chemicals. Don't wash or spray water over the switch or control panel. Keep the machine dry to prevent corrosion and rusting. Make sure to wipe the machine after cleaning the coin trap.



Don't wash shoes or utensils in this appliance.

Check the labels on your clothes for the washing instructions for the fabric.

Use detergents that have been recommended for this washing machine.

Only use dyes specified by the manufacturer for domestic washing machines. Make sure to follow the manufacturer's instructions carefully.

Never use solvent-based cleaning agents in the machine. They can damage parts and produce dangerous fumes. Plus, they can also increase the risk of fire and explosions.

If your clothes have been treated with solvent-based cleaning agents before washing, make sure to rinse them really well in clean water before you put them in the machine.

Avoid using colour run and dye removers containing sulphur compounds, as they can cause corrosion or damage.



Caution

Your machine has been built according to current safety requirements.

During assembly, the machine is tested with water to make sure it performs correctly. Sometimes, a few water droplets may be left inside the drum.

Replace the trolley immediately if excessive vibrations are observed, as it can affect the machine's reliability and lifespan.

Flooding Danger

When you're connecting the drain hose to a washbasin, make sure the water drains away fast to stop the sink from overflowing. Also, make sure the hose is firmly in place so the water flow doesn't push it out. Otherwise, you might end up with flooding.

Be careful to not let things like nails, pins, coins, or paper clips end up in the machine with your laundry. They can damage parts like the suds container or drum, which can then ruin your clothes during the wash.

USE OF APPLIANCE

This appliance is not intended to be used in household and similar applications such as—

- Staff kitchen areas in shops, offices and other working environments,
- Farm houses,
- By clients in hotels, motels and other residential type environments,
- Bed and breakfast type environments, and
- Areas for communal use in blocks of flats or in launderettes.

If the manufacturer wants to limit the use of the appliance to less than the above, this shall be clearly stated in the instructions.

About eWaste

eWaste, or Waste Electrical and Electronic Equipment (WEET), refers to discarded appliances using electricity. To responsibly manage eWaste, follow the guidelines below.



DOs

- Always dispose of end-of-lifecycle products by contacting an authorised local eWaste recycler.
- Do drop off used electronic products, batteries, or accessories at authorised eWaste recyclers.
- Sort packaging materials for responsible waste disposal and recycling options whenever possible or as instructed.



DON'Ts

- Do not dismantle electronic products on your own.
- Never dispose of electronic products in bins marked 'Do Not Dispose'.
- Refrain from giving eWaste to informal sectors like local scrap dealers or rag pickers.
- Do not dispose of your product in garbage bins along with municipal waste that ultimately reaches landfills.

RISKS OF IMPROPER HANDLING OF eWASTE

eWaste usually includes components which, if disposed of improperly, hold environmental consequences such as air, water and soil pollution and also pose risks to human health.

By ensuring your appliance is disposed of correctly, you will help prevent potential negative consequences for the environment and human health. Components and materials used in this washing machine are fully compliant with the Provisions of Hazardous Substances outlined in eWaste Management Rule, 2016.




FOR DETAILED INFORMATION AND DISPOSAL REQUEST
Contact **IFB Care** at **080 695 45678**. Provide your details to our representative to arrange for proper product disposal.

Getting started with your washing machine


Installation and Safety Guidelines

1 SELECTING THE RIGHT SPOT

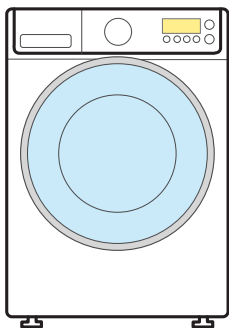


Place the machine on a level floor.

Make sure the machine is close to both water and electrical connections.

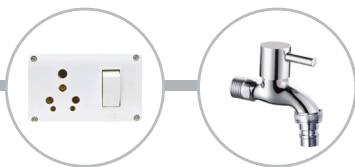

2 REMOVING TRANSIT BOLTS

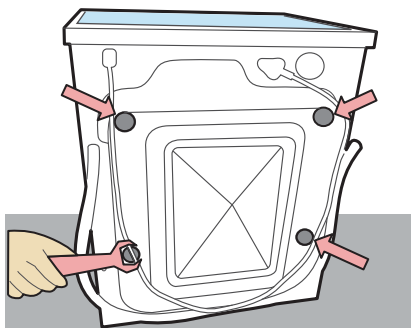

Use a spanner to remove the transit bolts.

Insert the plastic caps provided.


Keep the transit bolts carefully as they will be required in case you need to shift the machine.

Please do not operate the machine until the transit bolts have been removed.

Getting started with your washing machine




Installation and Safety Guidelines

3 LEVELLING

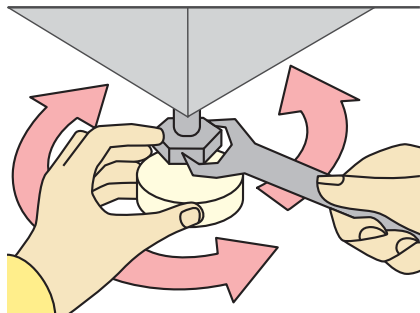

Level the machine by using adjustable screws, as shown.

Make sure all 4 feet are grounded.

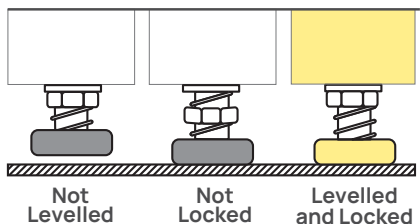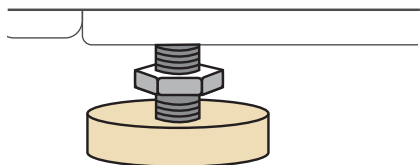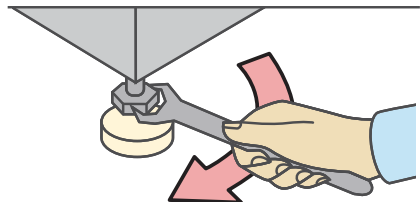


Getting Started With Your Washing Machine

Installation and Safety Guidelines

4

CONNECTION TO WATER SUPPLY

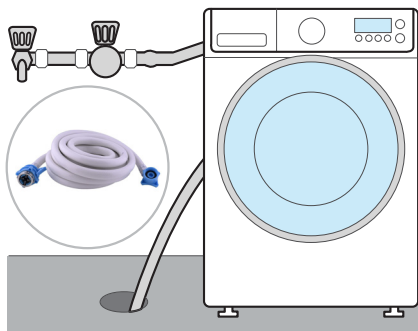

The water inlet of the machine has a collar with parallel internal threads.


Water supply point with a $\frac{3}{4}$ " external/parallel thread should be within 1 m of the machine.

Don't stretch the water supply hose.

Note After connecting inlet hose to water tap, turn on the water tap to flush out foreign substances such as dirt, sand or sawdust in the pipelines.

5

CONNECTION TO DRAIN HOSE

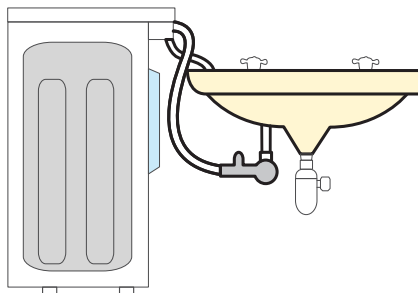

The machine uses a drain pump. Direct the end of the drain hose towards a sink.


The drain hose can be either placed on the floor or over a sink at a maximum height of 1 m from the floor.

Getting Started With Your Washing Machine


Installation and Safety Guidelines

5 CONNECTION TO DRAIN HOSE (contd)

Is the sink on the **left** side? Follow this diagram.

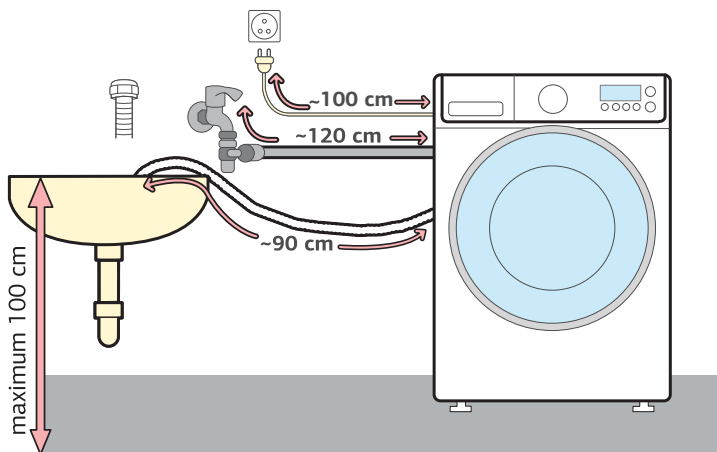


Is the sink on the **right** side? Follow this diagram.

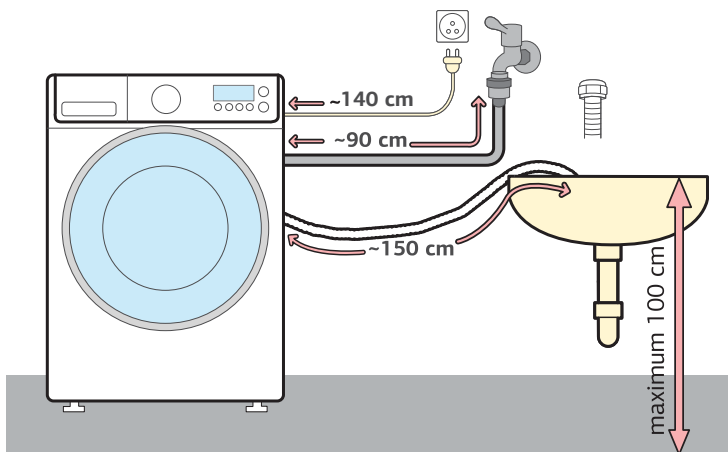


Getting Started With Your Washing Machine

Installation and Safety Guidelines


6 ELECTRICAL CONNECTION

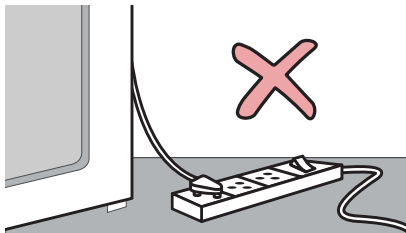

 A 16 Amp, 3 pin 220-240 V AC, 50 Hz electrical point with a 16 Amp MCB within 1 m of the machine is mandatory.



Make sure your home has proper earthing and the connection between the socket and the plug is firm.

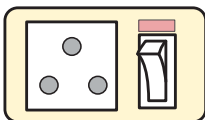

BEFORE YOU START

Make sure that the machine has been installed and connected as per the instructions above.

To remove any water left over from factory testing of your machine, the first wash cycle should be carried out without any laundry in the machine.

Turn ON the water tap,


- › Pull out the detergent drawer completely
- › Pour approximately 20 g of detergent in the dispenser
- › Close the drawer
- › Set the program selector knob to Cotton and maximum Temperature
- › Press Start/Pause
- › Switch OFF the machine when 'End' message is displayed.

Running Your Machine

6 Easy Steps for Doing Your Laundry

1

SORT THE LAUNDRY

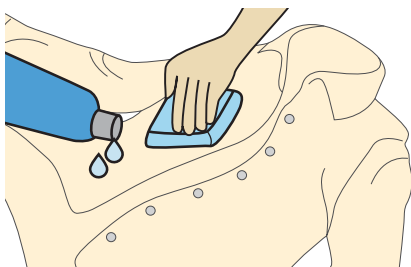


Pre treat collars, cuffs and stains.

Check for wash care symbols.


Close zippers, hooks and strings.

Empty the pockets of your clothes.

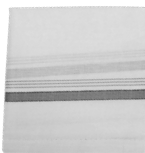


Running Your Machine

6 Easy Steps for Doing Your Laundry

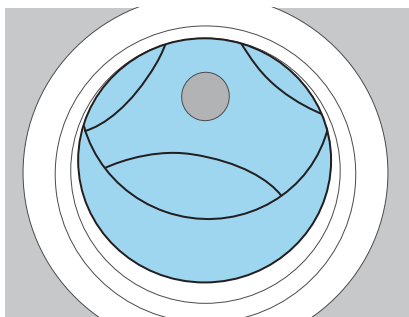2**LOAD THE LAUNDRY**

Make sure the laundry drum is empty.


Load garments one by one.

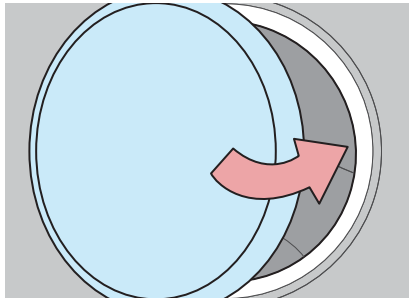

Close the door and press till you hear a click.

6 Easy Steps for Doing Your Laundry


3 ADD DETERGENT

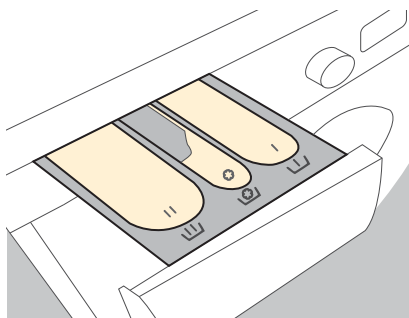

Pull out detergent dispenser drawer completely.


Add the correct amount of detergent.

- For heavily soiled clothes use Pre wash 'I' option.
 - For every other wash program use 'II'.
- ⊗ 'Settings' to be used to dispense additives. Use the fabric conditioner additives chamber and take care not to exceed the maximum level.

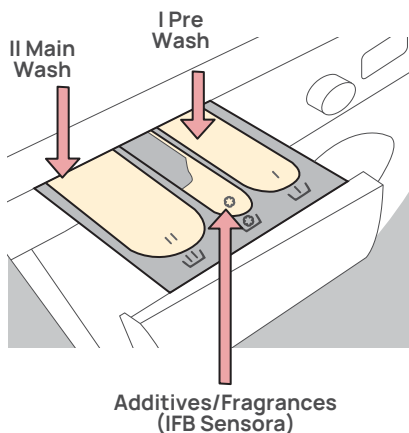

Note To be used to dispense Fragrances (Sensora) only during Refresh cycle.

If liquid detergent is used, use the liquid detergent dispenser supplied in the main wash chamber.

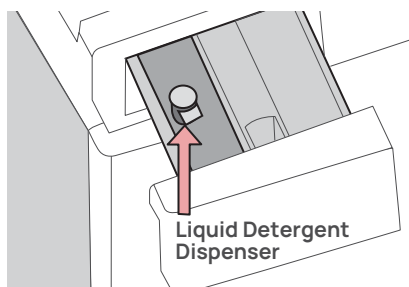

Running Your Machine


**Note**

Always use detergents that are recommended for front load washing machines. Using the wrong detergent can cause laundry issues. Avoid using soap flakes or granulated soap powders in your washing machine. When washing woollens or silk, make sure to use the detergent type recommended by the manufacturer. If you notice too many suds, reduce the amount of detergent you're using.

Running Your Machine

6 Easy Steps for Doing Your Laundry

4 SELECT PROGRAM

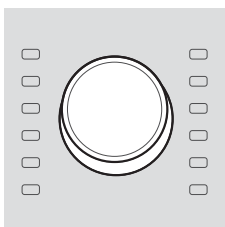

Switch ON the machine.

Turn the Program Selector knob to the required program.

Start/Pause LED will flash.

Choose Wash Option.

To change/cancel the program during the wash, press the Power ON/OFF button and wait for 2 secs, then select the new program.

For more information scroll to the **Program Guide** section.

5 SELECT WASH OPTIONS

Touch the Option button to select desired Wash Option.

For more information scroll to the **Wash Options** section.

6 START WASHING



Press the flashing Start/Pause LED button to start washing.

To interrupt the cycle and change Wash Options or to add/remove laundry, press the Start/Pause button.

6 Easy Steps for Doing Your Laundry


6

START WASHING (contd)



Door status will be displayed after pressing the Start/Pause button.

If the Water Level inside the drum is above the rubber or the temperature inside the drum is high, the door won't open.

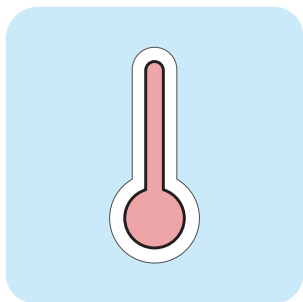


Once the wash is complete the 'End' message will appear. The door can be opened after this message.



The machine has been programmed to switch OFF all visual displays such as LEDs to save energy. Start/Pause LED will slowly blink after program ends. This is in line with the latest 'Energy Using Product' norms (EUP).



Finishing

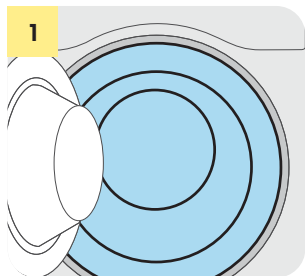

1 Remove the laundry and wipe the moisture from the door and door seal. Leave the door slightly open.



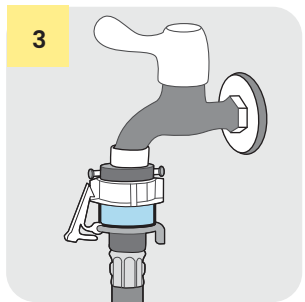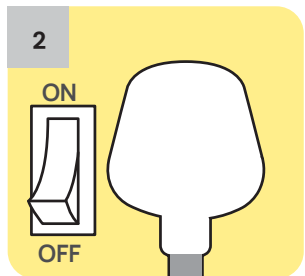

2 Wipe the panel and cabinet with a dry cloth to remove the moisture.

3 Turn OFF the tap.




Running Your Machine

Program Guide

PROGRAM	TYPE OF LAUNDRY
Mixed/Soiled 	Cotton, synthetic and easy-care garments. Not recommended for special garments like silk/delicates, dark clothes, wool, duvets, curtains, etc.
Cotton Normal/ Cotton Eco Plus 	Cotton colour-fast garments. Shirts, pants, uniforms, bed and table linen, towels, night dresses, pyjamas, underwear, etc.
Baby Wear 	High temperature and extra rinses for better rinse performance. Recommended for baby clothes, underwear, cloth diapers, pillows,bedsheets, etc.
CradleWash®	Hand wash and delicate wash garments. Silk, lingerie, satin, synthetic or sheer fabrics.
Express Wash 	Lightly soiled coloured laundry made of cotton, linen, synthetic or blended fabrics.
Wool	Machine washable woollen garments only. Use appropriate detergent.

Running Your Machine

Program Guide

PROGRAM	TYPE OF LAUNDRY
Synthetic/Daily 	Polyester, acrylic or polyamide daily wear garments.
Bulky/Bedding	Machine washable curtains made of cotton and easy care fabrics. Washes large items such as blankets, bedcovers, sofa covers, pillow cases and bedspreads.
Hygiene*	Use this program to wash fabrics like cotton and linen, that are in direct contact with skin—bed linen, pillows, underwear, nappies, towels etc.

*Only in Serena ZSS 7010

Running Your Machine

Wash Options

OPTIONS**Details**

Temp**Temperature**

You can change the default temperature within a given range. Press the Temperature button on the control panel to change the temperature. The temperature selection sequence will be Cold, 30°C, 40°C, 60°C, 95°C and Repeat. The selected temperature will be displayed on the LED display. You can select more wash options or press the Start/Pause button to start the program.

Spin**Spin Speed**

You can change the default Spin Speed in the given range.

Press the Spin Speed button on the control panel and select from No Spin, 400 RPM, 600 RPM, 800 RPM, 1000 RPM, Rinse Hold and Repeat.

Select**Steam**

When the Steam option is selected, steam is produced inside the drum—at the optimum wash time to enhance the wash.

Touch the Steam button on the control panel to select Steam Option.

Steam LED will glow indicating that the Option has been selected.

You can select more wash options or touch the Start/Pause button to start the program.

***Note** The Steam option can be selected for Cotton Normal, Mixed Soiled, Synthetic/Daily, Baby Wear and Hygiene programs.

Running Your Machine

Wash Options

OPTIONS

Details



Pre Wash

If Pre Wash option is selected, the clothes are given a preliminary wash before the main wash.

Press the Temperature button on the control panel to select the Temperature option.

The Pre Wash symbol glows and 'P 0°C, P 30°C, P 40°C, P 60°C or P 95°C' will be displayed on the LED.

The Pre Wash symbol LED both will glow indicating that the option has been selected.

You can select more wash options or press the Start/Pause button to start the program.



Rinse Hold

If clothes are left unattended for a long time it may cause creasing.

This option pauses the program during its final rinse to prevent this.

'rinS HOLD' message will appear on the display.

You can cancel the current program or input your desired Speed/Spin and continue.

Press Spin Speed option till  is displayed.

Running Your Machine

Wash Options

OPTIONS

Details

Spin



Steam

Child Lock

This activates protection against unintentional changes to the program sequence.

To select Child Lock, press the Spin and Steam buttons simultaneously for 2 secs.

No changes can be made while the program is running.

If the appliance is switched OFF, it will resume from where it was interrupted in this mode.


The door will remain locked till the end of the program.

You can disable this option the same way you enabled it.



Running Your Machine


EMERGENCY DOOR LOCK RELEASE

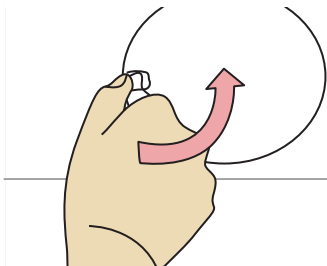

Note Emergency door lock release should be used only during power OFF/power failure. Using this ends the current program.



PRECAUTIONS TO BE TAKEN FOR THE ABOVE

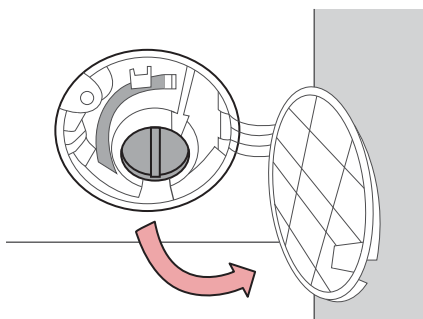


Let the wash water cool down if it is hot.

Don't remove laundry from the drum while it is rotating.

Drain the water from the drum using the emergency drain pipe before releasing the door lock to avoid damage.

EMERGENCY DOOR LOCK RELEASE DURING POWER FAILURE

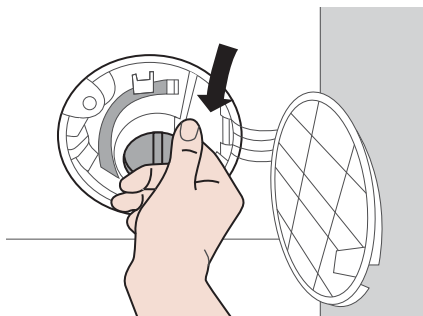

Program will continue after power supply resumes. If you still want to remove the laundry, switch OFF the power supply from the mains. Open the filter door, drain the water through the drain hose and then pull down the emergency lever to open the door.

Running Your Machine

Washing Symbols—A Guide



RESISTANT MATERIAL



DELICATE FABRIC



WASHABLE AT 95°C



WASHABLE AT 60°C



WASHABLE AT 40°C



WASHABLE AT 30°C



HAND WASH



DRY CLEAN ONLY



WOOL SEAL



BLEACHABLE IN COLD WATER



DON'T BLEACH



DON'T DRY CLEAN



DRY FLAT



HANG TO DRY



DRY ON CLOTHES HANGER



TUMBLE DRY, NORMAL HEAT



TUMBLE DRY, REDUCED HEAT



DON'T TUMBLE DRY

Running Your Machine

Wash Guide Map

	PRE WASH	RINSE HOLD	STEAM	LAUNDRY WEIGHT in KG		
				6 Kg	6.5 Kg	7 Kg

PROGRAM

Mix Soiled

✓	✓	✓	3	3	3
---	---	---	---	---	---

Temperature °C Cold, 30, 40

Spin Speed RPM 400–1000/No Final Spin

Cotton/ Normal

✓	✓	✓	6	6.5	7
---	---	---	---	-----	---

Temperature °C Cold, 30, 40, 60, 95

Spin Speed RPM 400–1000/No Final Spin

Synthetic/ Daily

✓	✓	✓	3	3	3
---	---	---	---	---	---

Temperature °C Cold, 30, 40, 60

Spin Speed RPM 400–800/No Final Spin

Baby Wear

✗	✓	✓	3	3	3
---	---	---	---	---	---

Temperature °C Cold, 40, 60

Spin Speed RPM 400–800/No Final Spin

Note For 6010/6510—Steam options is available as a default and can be deselected.** Program setting for BEE test in conformity with IEC 60456 with maximum Spin Speed selection settings.



Option available and can be selected



Option not available and cannot be selected



Only available by default and can be deselected

Running Your Machine

Wash Guide Map

	PRE WASH	RINSE HOLD	STEAM	LAUNDRY WEIGHT in KG		
				6 Kg	6.5 Kg	7 Kg

PROGRAM

Hygiene	✗	✓	✓	3	3	3
---------	---	---	---	---	---	---

Temperature °C 40, 60

Spin Speed RPM 400–1000/No Final Spin

CradleWash®	✗	✓	✗	2	2	2
-------------	---	---	---	---	---	---

Temperature °C Cold, 30, 40

Spin Speed RPM 400–600/No Final Spin

Express Wash	✗	✓	✗	2	2	2
--------------	---	---	---	---	---	---

Temperature °C Cold, 30, 40

Spin Speed RPM 400–800/No Final Spin

Woollens	✗	✓	✗	2	2	2
----------	---	---	---	---	---	---

Temperature °C Cold, 30, 40

Spin Speed RPM 400–800/No Final Spin

Note For 6010/6510—Steam options is available as a default and can be deselected.** Program setting for BEE test in conformity with IEC 60456 with maximum Spin Speed selection settings.

- ✓ Option available and can be selected
 ✗ Option not available and cannot be selected
 ✓ Only available by default and can be deselected

Running Your Machine

Wash Guide Map

	PRE WASH	RINSE HOLD	STEAM	LAUNDRY WEIGHT in KG		
				6 Kg	6.5 Kg	7 Kg

PROGRAM

Cotton Eco Plus	✗	✓	✗	6	6.5	6
------------------------	---	---	---	---	-----	---

Temperature °C 40, 60**

Spin Speed RPM 400–1000/No Final Spin

Bulky Bedding	✓	✓	✗	2	2	2
----------------------	---	---	---	---	---	---

Temperature °C Cold, 40, 60

Spin Speed RPM 400–800/No Final Spin

Spin Dry Rinse	✗	✗	✗	6	6.5	6
-----------------------	---	---	---	---	-----	---

Temperature °C ✗

Spin Speed RPM 400–1000/No Final Spin

Additives/ Rinse + Spin	✗	✓	✗	6	6.5	7
------------------------------------	---	---	---	---	-----	---

Temperature °C ✗ | Spin Speed RPM 400–1000/No Final Spin

Note For 6010/6510—Steam options is available as a default and can be deselected. ** Program setting for BEE test in conformity with IEC 60456 with maximum Spin Speed selection settings.

✓ Option available and can be selected

✗ Option not available and cannot be selected

✓ Only available by default and can be deselected

Running Your Machine

Wash Guide Map

	PRE WASH	RINSE HOLD	STEAM	LAUNDRY WEIGHT in KG		
				6 Kg	6.5 Kg	7 Kg

PROGRAM

Tub Clean	✗	✓	✗	✗	✗	✗
-----------	---	---	---	---	---	---

Temperature °C Cold, 60, 95

Spin Speed RPM ✗


Note For 6010/6510—Steam options is available as a default and can be deselected.** Program setting for BEE test in conformity with IEC 60456 with maximum Spin Speed selection settings.

- ✓ Option available and can be selected
 ✗ Option not available and cannot be selected
 ✓ Only available by default and can be deselected

Running Your Machine

Key Features

ADVANCED WASH TECHNOLOGY

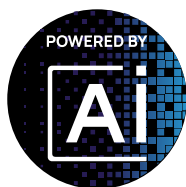

Powered by Ai

The intuitive sensing logic in the machine detects two parameters important for fabric care during cleaning—

- **Type of fabric** Cotton, Mixed or Synthetic
- **Weight of the fabric**

The Ai model, based on thousands of parameters, selects the optimised configuration suitable for the type of garment and its weight. Thus it helps in reducing the washing time and water consumption while ensuring the best care for your clothes without any manual intervention.



7 Swirl

Powered by Ai

Swirl technology that gently cares for your clothes.




3D Wash

Jets of water and showers from the paddles completely soak the clothes. The water and detergent mixture is sprayed onto the clothes in a special mechanism for a better wash.

Running Your Machine

Key Features

ADVANCED WASH TECHNOLOGY

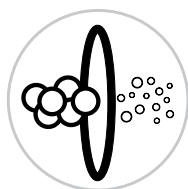

Aqua Energie

The technology that energises water to carry the detergent deep into the fabric.



CradleWash®

India's first wash program for the care of delicate fabrics.



Crescent Moon Drum

The crescent moon design of the drum allows the water to cushion the wash and protect the fabric.

Running Your Machine

Key Features

WASH PROGRAMS AND OPTIONS

More than 100 thoughtfully designed programs and options to give your clothes the ultimate wash experience.

Time, Energy, Water Saving

Cotton Eco Plus
Express Wash

Fabric Friendly Wash

Cotton Normal, Synthetic/Daily, CradleWash®
Woollens, Mixed Soiled, Bulky/Bedding

Hygienic Wash

Baby Wear, Tub Clean,
Hygiene

Customisable Modes

Additives/Rinse + Spin. Spin Dry/Drain

User Friendly Options

Pre Wash, Temperature, Rinse Hold, Spin Speed,
Steam

Running Your Machine

Key Features

MACHINE CARE



High-Low Voltage Protection

A microcontroller continuously monitors the voltage fluctuations and stops the program if it goes below $150 \pm 10V$ or rises above $270 \pm 10V$. The program will resume once the voltage is within a safe range.



Program Memory Backup

The program remembers where to pick up from when power is restored after failure, thus saving on time, water, and energy, while adding longevity to the machine.



Auto Imbalance System

This system automatically balances the clothes inside to stabilise the spin cycle.

Running Your Machine

Key Features

USER CONVENIENCE



Child Lock

Prevents children from tampering with the machine settings.




Laundry Add

Lets you add laundry even after the cycle has started.




Anti Crease

Reduces wrinkling of clothes for easy ironing.

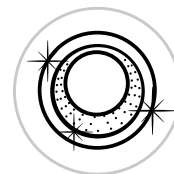

Auto Tub Clean

Automatically ensures tub hygiene after the wash.

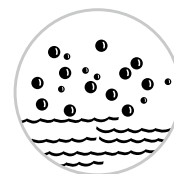

Auto Foam Control System

Auto detection and control of excess foaming.

Get More From Your Machine

Tips for best results

BEFORE WASHING



Empty all pockets. Remove everything including coins, keys, pins, notes etc.

Close all zips and fasten all hooks.

Check the wash care label and avoid non-machine washable items.



WHILE SORTING



Separate polyester fabrics from cotton.

Try to have a mix of large and small clothes in each load.

Wash dark clothes separately.



Get More From Your Machine

Tips for best results

WHILE LOADING



Load large items first.

Don't wash single items, add similar items.

Place small items in a laundry bag.

EASY TIPS TO REMOVE STAINS



You can also use IFB Fabo Stain Remover for stubborn stains

Soak or pre wash the stained laundry in warm water.

Try to wash immediately after staining.

Understand the fabric, the nature of the stain and check the wash care label before treating it.

Start with cold or warm water as hot water can set the stain in.

Use fabric safe bleach if recommended.

Put the stained area face down on a paper towel or white cloth.

Apply the stain remover to the back of the stain so that the stain is forced out of the cloth.

Get More From Your Machine

Stain Treatment



Get More From Your Machine

Stain Treatment

STAIN	TREATMENT
Chewing gum Adhesive Tape Rubber Cement	Use ice in a plastic bag to harden the gum. Scrape off what you can and then sponge with white spirits.
Blood	Rinse and soak immediately in cold water with an enzyme pre wash.
Chocolate Cocoa	Sponge with cold water and soak in enzyme pre wash. Rub in a little detergent and rinse in cold water.
Coffee	Rinse in cold water. Rub in detergent and wash in the maximum temperature allowed for the fabric.
Cream Milk Ice-cream	Rinse in cold water and wash normally. Sponge with white spirits.
Deodorant	Rub affected area with white vinegar and then rinse in cold water. Sponge with white spirits and then treat stiffened areas with an enzyme pre wash.
Egg	Soak in cold enzyme pre wash, rinse and wash.
Fabric Softener	Rub affected areas with bar soap and wash.

Get More From Your Machine

Stain Treatment

STAIN	TREATMENT
Fruit	Treat as soon as possible by sponging with cold water. Rub a little detergent on the stain and wash.
Grass	Sponge with white spirits. Rub in an enzyme pre wash and then wash.
Grease Oil	Sponge with white spirits or dry-cleaning fluid and then wash.
Iron Rust	Apply lemon juice and salt and place in the sun before washing.
Collars Cuffs Cosmetics	Pre-treat with a pre wash stain remover or rub with a bar soap.
Mildew	Rub affected area with white vinegar and then rinse in cold water. Sponge with white spirits and then treat stiffened areas with an enzyme pre wash.
Mud	Brush off the mud and rinse in cold water. Rub a little detergent and wash.
Oil Paint	Scrape off any fresh paint. Sponge with a non-flammable dry cleaning fluid and wash.

Get More From Your Machine


Stain Treatment

STAIN	TREATMENT
Water Based Paint	Treat while still wet. Rinse in warm water and wash.
Scorch Marks	Dampen a cloth with hydrogen peroxide. Lay it over the affected area and press with a hot iron.
Ink	Some inks are impossible to remove. However, try using a pre wash stain remover, denatured alcohol or non-flammable dry cleaning fluid.
Nail Polish	Try applying nail polish remover to the back of the stain. Blot with paper towels and repeat. Don't use acetate fabrics. However, it may be impossible to remove in some cases.
Shoe Polish	Liquid Pre-treat with a paste of granular detergent and water. Paste Scrape the residue and pre-treat with a pre wash stain remover or non-flammable dry cleaning liquid. Apply detergent to the dampened area and wash using bleach safe for the fabric.
Candle Wax Crayon	Scrape off surface wax. Press with warm iron until wax is absorbed into a paper towel. Treat remaining stain with a pre wash stain remover or non-flammable dry cleaning fluid. Hand wash to remove solvent and wash using bleach safe for the fabric.

Get More From Your Machine

Maintenance and Cleaning


CLEANING THE DETERGENT DISPENSER DRAWER

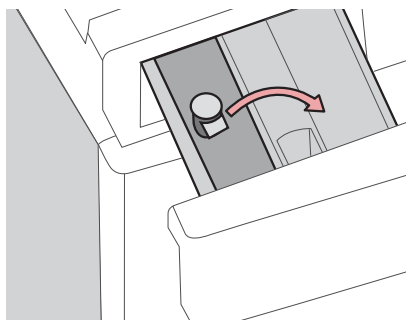

Remove detergent residue regularly.

Clean the detergent dispenser drawer with warm water.

Remove and clean the siphon under running warm water.

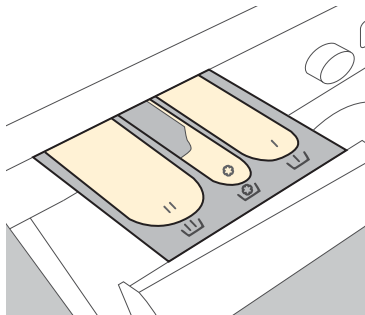


Detergent residue can build in the dispenser housing, clean it before reinstalling the dispenser.

Get More From Your Machine

Maintenance and Cleaning


CLEANING THE WATER HOSE MESH FILTER

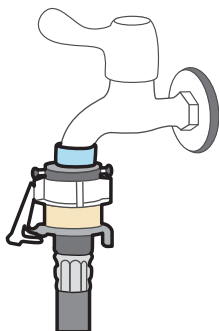

Turn OFF taps and disconnect the power supply to the machine.


Unscrew the inlet hose from the machine and tap the drain water from the hose.

Remove the filter mesh from the tap end of the inlet hose and clean under running water with a brush.

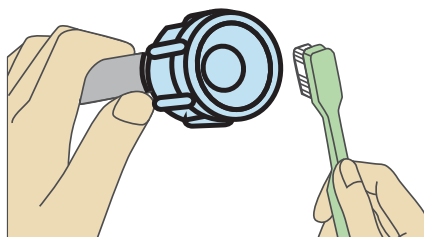

Pull out the sieve of the magnetic valve with a pair of flat nosed pliers.


Clean the sieve under running water with a brush.

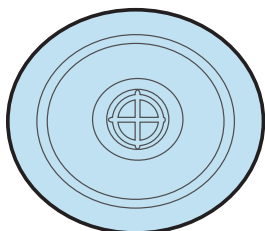

Fit the sieve back into the valve.

Screw the inlet hose back to the machine and the tap.

Turn ON the water tap to check if the connection is watertight.

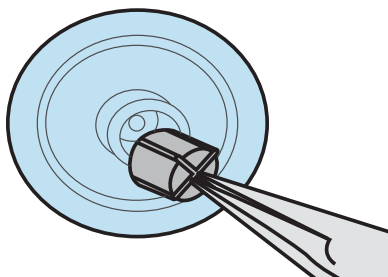


Note Dirt, sediments or sand in the water can affect both your wash quality and the water valve.

Get More From Your Machine


Maintenance and Cleaning

CLEANING THE FILTER

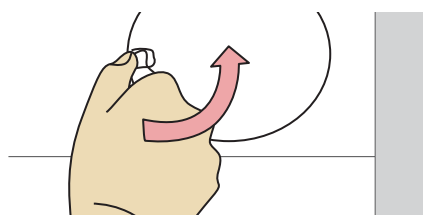

The filter should be cleaned frequently in order to increase the life of the drain pump.


Open the detachable bottom door with a coin or a key.

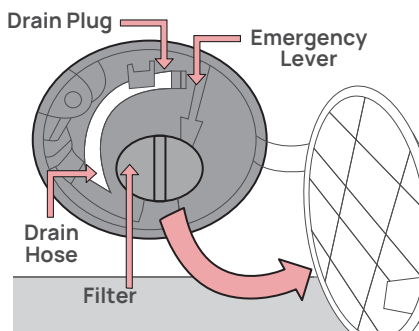

Place a shallow container near the bottom drawer.


Pull out the drain hose and open the drain plug.

Once the water is drained, turn the filter anti-clockwise to open it and take out any coins, pins, hooks, or other objects.

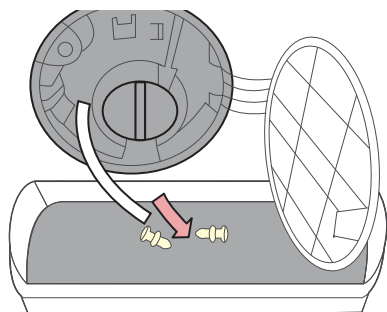

Tighten the filter and drain plug to their original positions, then close the bottom door.

Don't open the filter when a program is running.

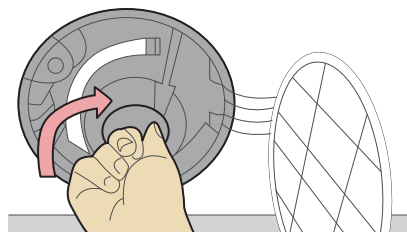

Get More From Your Machine

Maintenance and Cleaning

TUB CLEAN PROGRAM

This program helps eliminate impurities, scaling, bacteria and odours from the machine. Empty the drum before running the program .

TO RUN THE TUB CLEAN PROGRAM



Tub Clean

Run this program to eliminate impurities, scaling, bacteria and unpleasant smell from the washing machine.

IMPORTANT



Do not put laundry in the washing machine during Tub Clean. Before running the Tub Clean program, empty the washing machine drum.

Do not use any Descale or any cleaning agents/additive with Tub Clean program.

To run the Tub Clean program—

Switch ON the washing machine.

The Tub Clean program can be selected by selecting Additives/Rinse + Spin program → keep the Temperature button pressed for 3 secs.

Display will show Tub for 1 sec and cln for 1 sec indicating the Tub Clean program has been selected.

Touch the Start/Pause button to start the Tub Clean program.

END message will be displayed when the program is over.

Get More From Your Machine

Let's make washing easier.

Here is a list of clothes and their approximate weights to help you figure out a perfect wash load.

CLOTHING WEIGHTS

Bottoms

Lungi/Dhoti	200 g
Skirts	200 g
Trousers	250 g
Jeans	400 g

Tops

Cotton Shirts	280 g
Other Shirts	200 g
Cotton Blouses	140 g
Other Blouses	100 g
Woollen Sweaters	400 g
Heavy Sweaters	300 g
Light Sweaters	150 g

Other Clothes

Cotton Sarees	650 g
Synthetic Sarees	350 g
Bath Towels	600 g
Hand Towels	250 g
Pyjama Kurta	400 g
Panties	60 g
Cotton Vests	100 g
Underslips	100 g
Long Socks, 2 pairs	150 g
Short Socks, 2 pairs	85 g
6 Handkerchiefs	85 g
12 Napkins	1.1 Kg

Sheets

Cotton (Double)	1 Kg
Cotton (Single)	500 g
Non Cotton (Double)	650 g
Non Cotton (Single)	400 g

Pillow slips

Cotton Pillow Slips	110 g
Other Pillow Slips	85 g

Table Cloths

Small	230 g
Large	600 g
Table Napkins (4)	150 g

Bedsread

3 Kg

Blankets

Wool	2 Kg
Acrylic	1.5 Kg

Get More From Your Machine

This table may help you plan a laundry load of 6, 6.5, 7 Kg.

LAUNDRY ITEMS	6 Kg	6.5 Kg	7 Kg
Bath Towels	2	2	2
Shirts	3	4	4
Blouses	2	2	3
Skirts	2	3	4
Pair of Pants	1	1	1
Pair of Jeans	2	2	2
T-shirts	3	3	3
Set of Pyjamas	3	4	4
Tea Towels	2	2	2

The chart indicates average weights of clothes. Make sure not to overload your machine beyond the recommended weight. This way, your clothes will get a thorough wash. Suggested weights are approximate and may vary.

Useful Information About Your Washing Machine

Troubleshooting




In case of machine malfunction, check the following points before contacting your service provider.

SYMPTOM	PROBABLE CAUSE	SOLUTION
LED Display is not lit.	Power supply switch is not turned ON.	Turn ON the power supply switch.
	Electrical power cord is not plugged in or is loose.	Plug the electrical power cord in securely and check.
	No program is selected.	You need to select a program.
Washing Machine Door is stuck and won't open.	Machine is in operation.	Ensure that the program isn't active. If active, pause the program and check the door symbol on display. The door cannot be opened mid-operation, due to high water level, temperature and speed.
	Opening the door is not possible.	Check if the machine is displaying the 'dL Er' message.
	Child Lock is active.	Disable the Child Lock and wait until the Door display glows.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Program does not start.	Start/Pause button is not pressed ON.	Press the Start/Pause button. The display will glow to indicate activity.
	Water supply faucet is not turned ON  there is no or low water pressure.	Turn ON the water faucet fully. Ensure that the water pressure is normal.
	Machine door is not securely closed.	Close the machine door properly.
	Pause/Soak or Rinse Hold mode is active.	Check the status of the programs on display and refer to the user manual.
Water is not supplied to the machine. Detergent is not flushed into the drum.	Water supply faucet is not turned ON  there is no or low water pressure.	Turn ON the water faucet fully. Ensure that the water pressure is normal.
	Machine door is not securely closed.	Close the machine door properly.
	Inlet hose is bent, sieve, inlet valve or the hose is clogged.	Straighten the inlet hose. Check  unclog the sieve, valve and hose.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Detergent dispenser is leaking suds.	Unsuitable detergent is used.	Use detergents recommended for Front Load Washing Machines only.
Excessive foam in drum.	Excessive detergent is used.	Use less detergent.
Detergent residue on clothes.	Machine is overloaded with clothes.	Do not overload the machine. Put fewer clothes per load.
	Cold Wash program is active.	Choose the Hot Wash program.
	Water pressure is low.	Ensure that the water pressure is optimum.
Water leakage in the machine.	Inlet hose connection is loose.	Check and tighten the inlet hose connection.
	Filter is not securely tightened.	Check and tighten the filter.
	Inlet hose is leaking.	Contact IFB Care.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Machine water is not draining.	Filter is clogged.	Clean the filter. Make sure that it is not clogged.
	Drain hose end is placed 1 m above floor level.	Measure 1 m from the ground level, place the drain hose end below the level.
	Drain hose is kinked or clogged.	Ensure that the drain hose is straight, clean and unclogged.
	Wash only machine washable door/bath mats in the washing machine. Washing of non-washable mats will cause lint/fibre build up. This may lead to drain pump clogging.	
Machine vibrates excessively during spinning.	Machine is not properly levelled.	Ensure that the machine is levelled properly.
	Filter is partially clogged.	Clean and ensure that the filter is unclogged.
	Load is unbalanced.	Add a few clothes to balance the load. Rearrange the load to allow proper spinning.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Machine is not spinning or clothes remain wet.	Load is too small, causing disbalance.	Add a few clothes to balance the load. Rearrange the load to allow proper spinning.
	Machine is overloaded with clothes.	Load clothes as per the fabric type and capacity recommended for the selected program. Reduce a few items.
	Spin Speed is set to 0 RPM or is too low.	Select a higher Spin Speed.
	Rinse Hold mode is active.	Select the Start/Pause button at Rinse Hold stage.
	Filter is clogged.	Clean and ensure that the filter is unclogged.
	Excessively foaming detergent is used.	Use detergents recommended for Front Load Washing Machines only.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Ineffective treatment of soiled clothes.	Detergent quantity is insufficient.	Use the recommended amount of detergent based on load size and hardness of water.
	Cold Wash program is active.	Opt for the Hot Wash program.
	Incorrect load size as per capacity.	Ensure that the load is within the capacity.
	Untreated stains on clothes.	Make sure to treat stains before washing. Scroll up to the 'Easy Tips to Remove Stains' section.
	Heavily and lightly soiled clothes are washed in the same load.	Wash heavily and lightly soiled clothes in separate washes.
Blue stains on clothes.	Excessive use of fabric additives.	Use only the required amount of fabric additives. Do not pour additives directly on the fabric.
	Additives of inferior quality being used.	Use good quality fabric additives.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Black or grey stains on clothes.	Detergent quantity insufficient as per hardness of water.	Use the recommended amount of detergent based on load size and hardness of water.
	Pre-existing stains on some clothes.	Separate stained clothes from the unsoiled ones.
Yellow or brown, rust-like stains.	The water supply for the wash is dirty.	Before washing—run the faucet to check if the water is clean. Wash only when the water is clean. To restore a discoloured load of whites use a rust remover safe for fabric.
Detergent residue left on clothes.	Overloading of clothes.	Do not overload the washing machine.
	Excessive use of detergent.	Use proper amount of detergent.
	Cold wash program.	Use hot wash program.
Buttons not working.	Button not pressed properly.	All the buttons are sensitive and need to be pressed softly.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM

Motor noise.

While in operation, it is normal for the motor to make some noise.

Pump noise.

Unless the filter is clogged, it is normal for the pump to make some noise during the process of draining.

Anyway do check for filter clogging.

Program cycle time is delayed.

It is normal for the program cycle time to be delayed based on factors such as type and quantity of laundry load, inlet water pressure and temperature, fluctuation in power supply etc.

Balance time on display remains unchanged.

In case of a disbalance in load, the machine makes attempts to redistribute the clothes to minimise vibrations. This can extend the duration of the program.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Display







THE LED DISPLAY GIVES YOU COMPLETE INFORMATION

- Program selection
- Wash Option selection
- Balance time of the program
- Program status
- Problem/fault indications, if any
- Child Lock selection
- Door status

Useful Information About Your Washing Machine

Display Messages & Error Codes

For any code displayed that is not present in the following list or if the suggested solution does not fix the problem, contact IFB Care or an authorised dealer.

DISPLAY	PROBABLE CAUSE	SOLUTION
	rinS HOLd—Indicates that the machine is in the Rinse Hold mode.	Press Start/Pause button or select the drain program.
	door—Indicates that the door is not closed securely.	Close the door properly.
	dLEr—Indicates that the washing machine door is stuck or jammed.	Switch OFF the washing machine and wait for 2 mins before attempting to open the door again. Do not forcibly open the door. If the problem and/or the display persists, contact IFB Care
	tAC0 trC—Cloth trapped between drum and door area.	Switch OFF the washing machine and wait for 2 secs. Run Drain program. After END, rearrange the clothes and restart the required program. If the same message appears again, switch OFF the appliance and contact IFB Care.

Useful Information About Your Washing Machine

Display Messages & Error Codes

DISPLAY	PROBABLE CAUSE	SOLUTION
tAP	tAP—Water supply tap is turned OFF.	Ensure that the Water supply tap is turned ON.
	tAP—Water supply is unavailable or water pressure is insufficient.	Operations will restart when water supply is available/normal.
	tAP—Sieve or filter in inlet hose is clogged.	Clean and unclog the sieve/filter. (Refer to 'Cleaning the water hose mesh filter' section).
	tAP—Water inlet hose is bent/damaged.	Remove and replace the bent/damaged water inlet hose.
dPEr	dPEr—Cloth trapped between drum and door area.	Switch OFF the washing machine and wait for 2 secs. Run Drain program. After END, rearrange the clothes and restart the required program. If the same message appears again, switch OFF the appliance and contact IFB Care.

Useful Information About Your Washing Machine

Display Messages & Error Codes

DISPLAY	PROBABLE CAUSE	SOLUTION
HEAt	HEAt—Water temp is above 60 °C at the start of program	Start New/Drain program once the water cools down to approximately 60 °C. Switch OFF the washing machine, wait for 2 sec and restart. If the same message appears again, switch OFF the appliance and contact IFB Care.
OFEr PrS	OFEr Prs—Water temp is above 60 °C at the start of program	Switch OFF the washing machine, wait for 2 secs and restart. If the same message appears again, turn OFF the tap, switch OFF the appliance and contact IFB Care.
h260	h260—Input voltage is high	Machine will start automatically after the voltage decreases to the safe operating level. If this error display persists/occurs frequently, contact your electrician to locate the fault in the electrical system.

Useful Information About Your Washing Machine

Display Messages & Error Codes

DISPLAY	PROBABLE CAUSE	SOLUTION
L 175	L 175—Input voltage is low	Machine will start automatically after the voltage increases to the safe operating level. If this error display persists/occurs frequently, contact your electrician to locate the fault in the electrical system.
UnbL	UnbL—Laundry load is unbalanced	If the laundry load is small (eg a pair of jeans, 2–3 Turkish towels, bathrobe etc), it can lead to an unbalanced condition. Add 1–2 similar items to help balance the load and rearrange the load to allow proper spinning.

For further assistance please download My IFB App for service registrations or you call us on our call centre number
08045845678/ 080 695 45678

Useful Information About Your Washing Machine

Technical Specifications

MODEL	Eva Plus ZWS 6010 Senorita VXS/SXS 6510 Serena ZSS/MSS 7010
POWER SUPPLY	220–240 V Single Phase 50 Hz
DIMENSIONS cm	598 x 518 x 875 (6 Kg/6.5 Kg)
Net Size WxDxH	610 x 596 x 875 (7 Kg)
NEW WEIGHT	62 Kg (6 Kg/6.5 Kg) or 71 Kg (7 Kg)
CAPACITY	6 Kg of Dry Cotton (6 Kg) 6.5 Kg of Dry Cotton (6.5 Kg) 7 Kg of Dry Cotton (7 Kg)
WASH CARE PROGRAMS	10 (> 100 with options) 12 (> 100 with options)
SELECTOR BUTTONS	Temperature, Spin, Steam, Start/Pause, Power ON/OFF
SELECTOR KNOB	Program Selector
SPIN SPEED	400–1000 RPM or Spin Cancel
WATER CONSUMPTION	9 Ltr/Kg/cycle (Program setting for BEE test in conformity with IEC 60456)
WATER PRESSURE	0.3 Bar - 10 Bar (3.5–10 Ltr/min)
MAXIMUM POWER CONSUMPTION	Refer to the product label
DRAIN PUMP RATING	30 W
HEATER RATING	2000 W
DRUM	Stainless Steel

Revisions Sheet






TITLE User Manual Eva Plus ZWS 6010 Senorita VXS/SXS 6510 Serena ZSS/MSS 7010 (SSL)		
Characteristic Symbol Critical (Cc) Significant (Sc)		
MATERIAL Paper	MANUAL No UF421PKMAN643	Revision G
IFB Industries Limited, Goa		

Rev	Information	Change Ref	Date	Checked By	Date	Approved By	Date
A	New manual						
B	Customer Care number update						
C	Addition of SerenaMSS 7010 model and Images updated as per PR 57873		20/04 2023				
D	Changes as per ECN 45181						
E	Updated power rating		27/12 2023				
F	Updated as per PR No-74533		10/05 2024				
G	Updated for BIS Compliance Obligations note as per PR 77673		14/08 2024				

TRUSTED BY OVER
7 MILLION
CUSTOMERS



+91 080 458 45678/080 695 45678

     +91 92310 04321

www.ifbappliances.com