



IFB
Set yourself free

Refrigerator-Direct Cool

USER MANUAL
Free Standing Appliance



01	SAFETY INFORMATION	2	05	SERVICE INFORMATION	5
	A) General safety Information	2	06	SPECIAL FEATURES	5
	B) Safety of children and vulnerable persons	2	07	TEMPERATURE CONTROL SETTINGS & ICE MAKING	5-6
	C) Safety instructions to prevent risk of fire	2	08	FEATURE USAGE INFORMATION	6
02	IMPORTANT INFORMATION ON THE USE OF APPLIANCE	3	09	USER INTERFACE CONTROLS	6
	D) Food storage & food handling guidelines	3	10	ERROR CODE DISPLAY	7
	E) Advice for saving power with refrigeration appliances	3	11	TROUBLESHOOTING GUIDE	7
03	WARNING	3	12	CLEANING AND MAINTENANCE	7
04	INSTALLATION INFORMATION	3	13	HELPFUL HINTS	8
	F) Before using the appliance for the first time	3	14	DISPOSAL OF OLD APPLIANCE	8
	G) Description of the Appliance	4	15	WARRANTY & TERMS AND CONDITIONS	8
	H) Installation of refrigerator	4			
	i. Guidelines for selecting refrigerator installation site	4			
	ii. Protect Flooring while installation	4			
	iii. Adjust the levelling feet	4			
	iv. Connecting Appliance to Power source	5			
	I) Pedestal Installation Guide	5			
	J) Instructions for relocating the refrigerator	5			

1. SAFETY INFORMATION

Please read the User manual thoroughly before operating the appliance and retain it safely for future reference.

A GENERAL SAFETY INFORMATION

- It is customer's responsibility to use the product with care and precautions as this manual does not cover all the possible situation that may arise.
- This appliance is intended solely for household with the sole purpose of storing food and drinks at low temperature.
- Don't connect a fridge to the electricity supply until all packaging has been removed.
- Always ensure that the area you are placing the refrigerator is free of flammable materials such as EPS, gas cylinder, and make sure that the ventilation openings provided in the appliance are clear of obstructions.
- Make sure you don't trap the mains cable beneath the fridge when putting it in position.
- After installation, the Plug of the refrigerator must be accessible to disconnect the appliance in

B SAFETY OF CHILDREN AND VULNERABLE PERSONS

- This appliance is not intended to use by children without supervision and adequate knowledge.
- This appliance can be used by children aged 8+ years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instructions concerning use of the appliance in a safe way and understand the hazards involved.
- To avoid the risk of children becoming trapped and suffocating, do not allow them to play or hide inside the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- ⚠ WARNING:** Improper use can cause physical damage and personal injury.

C SAFETY INSTRUCTIONS TO PREVENT RISK OF FIRE

- Plug the appliance into a grounding socket: the appliance must be correctly connected to an approved earthing system.
- Never use a loose power plug. It can cause an electric shock or catch fire due to an electrical short circuit.
- Do not use single/multi adapters or extension cords.
- In order to avoid a hazard, installation and maintenance, including Power cable replacement, must be carried out by a qualified technician, in compliance with the manufacturer's instructions and the local safety regulations in force. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- Do not use a heater or any sharp edge equipment to defrost ice build up inside the freezer.
- In case of gas leakage, ventilate the room instead of unplugging the refrigerator: Explosion or fire may occur.
- Never install the refrigerator at a humid place or the place where water splashes easily: Short circuit or fire may occur if you do it.
- If there is a burning smell from the refrigerator, unplug it immediately. It is very dangerous to leave the refrigerator running abnormally.

- case of emergency situations such as gas leakage, fire etc.
- Never block the interior or exterior ventilation openings of the refrigerator. Allow 100mm or more clearance over wall, side and rear plate of the refrigerator for air circulation
- Indoor refrigerators should not be stored outside as they are not designed for safe operation in an outdoor environment.
- Don't place a refrigerator near heat source such as cookers, radiators, OTG or in direct sunlight, as this will affect performance of the refrigerator.
- This manual covers various models and in case of any queries, please contact IFB service centre.

⚠ WARNING REGARDING THE REFRIGERANT

- This appliance contains a small amount of isobutane refrigerant (R600a), which is flammable.
- In case of transportation or installation of the appliance, meticulous care is required to prevent any damage to the cooling system of the refrigerator. A gas leak is not hazardous to the environment, but it could cause eye injury or fire.
- In case of a gas leak, ventilate the room thoroughly, disconnect the appliance from the power mains, and call a service technician.
- To prevent the creation of flammable gas- air mixture from the leak in the refrigerating circuit, the appliance should be in a room of more than 1m³ per 8g of R600a refrigerant inside the appliance. The amount of refrigerant is shown on the backside of the appliance.
- Do not place heavy things, oven & stabilizer on top or in close vicinity of the refrigerator. Do not keep lit candle on top/ inside refrigerator. Do not place plastic/cloth refrigerator cover as it can cause fire due to short circuit.
- Do not plug or unplug the power cord with wet hands, as there is risk of electric shock.
- Unplug and clean the plug with dry cloth if found dirty: Dusty and dirty plug may cause fire.
- Clean behind your refrigerator regularly to keep lint and dust free.
- Never use any flammable aerosol spray or any flammable substances near the appliance.
- Make sure that the electric wires and sockets used in your house have no damage and loose connections, to avoid risk of electric shocks.
- Do not take power supply from poles using hooks instead use supply from proper distribution system.
- Do not use earthing wire for neutral, use earthing wire in socket.
- Do not use 2 live wires for power supply instead use 1 live wire and 1 neutral wire.



2. IMPORTANT INFORMATION ON THE USE OF APPLIANCE

D FOOD STORAGE & FOOD HANDLING GUIDELINES

- Correct use of the appliance, appropriate packaging, maintaining the right temperature, and observing the food hygiene standards have a decisive impact on the quality of food storage.
- Observe the expiry dates for the food, indicated on the packaging.
- Do not store inflammable, volatile, and explosive substances in the refrigerator as it is not designed for chemical or scientific laboratory usage purposes.
- Bottles with high alcohol content should be tightly sealed and stored in an upright position.
- Food stored in the refrigerator should be kept in closed containers or in appropriate packaging to prevent it from emitting or receiving odors and humidity.
- Do not put large utensils on the shelf that may block the proper door closing which leads to energy loss.
- If you are leaving home for a longer period of time, remove perishables from the refrigerator.
- When purchasing deep-frozen food, comply with the following: Check the expiry date & Use the deep-frozen food before the expiry date.
- Danger of frostbite: Do not touch or put frozen food immediately in the mouth, as it may cause

E ADVICE FOR SAVING POWER WITH REFRIGERATION APPLIANCES

- Install the appliance as specified in the instruction manual.
- Keep the right temperature setting to avoid excessive running of the compressor.
- Do not place appliance in direct sunlight and avoid placement near direct heat source.
- Do not open the door more often than necessary.
- Do not keep the door open for a longer duration to avoid ice formation in the freezer.
- keep sufficient space around the appliance.
- Back of the appliance or wire Condenser unit should be kept clean.
- Ensure proper door closed with right gasket sealing
- Before placing the food in the refrigerator, allow it to cool down to room temperature.
- Thaw any frozen food in the refrigerator, thereby allowing to cool other foods with this low temperature.

3. WARNING

- Connect the appliance to the main power source, with the cord anchorage facing downwards.
- Do not plug or unplug the power cord with wet hands, as there is risk of electric shock.
- If the socket is loose in gripping the plug, fix the issue first and then secure the plug firmly.
- Hold the plug grip firmly and pull the plug out from the outlet.
- Do not use the power cord to place or hang objects, and do not bend the cord as it can cause physical damage to the power cord.
- After the installation, the appliance mains plug should be accessible.
- Do not use single/multi adapters or extension cords
- The appliance must be connected to the main power source and grounded in compliance with the electrical standards and regulations.
- Do not pour water on the refrigerator/freezer directly.
- Never use any flammable aerosol spray or any flammable substances near the appliance.
- Contact the IFB Service centre in case of excessive dust built up at the back of the refrigerator or if there are situations where excessive water enters the refrigerator.
- Plug the appliance into a grounding socket: the appliance must be correctly connected to an approved earthing system.
- Check if there is any leakage current by the professional electrician for safety reasons.
- Never use gas pipes, telephone lines or other potential lightning attractors as an electrical ground.
- This appliance is intended solely for household purposes with the sole purpose of storing food and drinks at low temperature.
- Do not store inflammable, volatile, and explosive substances in the refrigerator as it is not designed for chemical or scientific laboratory usage purposes.
- Use external door handle / built in Pocket handle to open and close the refrigerator, it is not recommended to open the door holding door sides or accessible gaps provided, you can hurt your hand while following malpractices.
- This appliance is not intended to use by children without supervision and adequate knowledge.
- This appliance can be used by children aged 8+ years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instructions concerning use of the appliance in a safe way and understand the hazards involved.
- Keep the packaging material away from the children's reach as they can use the packaging as a play to cover themselves which could be fatal to life.
- To avoid the risk of children becoming trapped and suffocating, do not allow them to play or hide inside the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- WARNING: Improper use can cause physical damage and personal injury.
- Do not use excessive pressure on door handles, or hang any load on the door like shopping bags etc, there is danger of refrigerator door misalignment or unbalanced product might fall off.
- Avoid placing the refrigerator to direct sunlight, near to heat source such as gas stove etc. as it can weaken the refrigerator cooling performance.
- Do not contact unauthorized service providers to carry out services for the appliance. The company will not hold any responsibility if there is any irreversible issue arising out of such malpractices.
- Do not try to replace the cord or attempt service on your own.
- Do not place heavy things on top or in close vicinity of the refrigerator ie. Liquid storage bins, burning candles, plastic/cloth refrigerator cover as it can cause fire due to short circuit.
- Do not reach out your hands or legs under the Refrigerator (when cleaning under the refrigerator). You will get hurt by rough edges and parts under the refrigerator.
- Prevent overloading the door bin, as there is risk of bottles toppling off if they are not properly kept.
- Do not use a heater or hair dryer to blow hot air or any sharp edge equipment to defrost ice buildup inside the freezer.
- Do not place any odor removal lighted gadgets inside the refrigerator.
- Place the shelf in the correct position until the shelf stopper position, if the shelf is placed upside down there will be cooling inefficiency/danger of shelf slipping off causing injury.
- Do not place bottles one above another in the bottle storage space, place them in the row, upright position secured in the shelf.
- In case of gas leakage, ventilate the room instead of unplugging the refrigerator: Explosion or fire may occur.
- Check for any damage or irregularities on your appliance. If you find your appliance is damaged, notify the retailer from which you have purchased the appliance.
- This appliance contains a certain amount of Isobutane refrigerant (R600a), a natural gas with not only high environmental compatibility but also combustibility.
- In case of transportation or installation of the appliance, meticulous care is required for no parts of the refrigerating circuit to be damaged. Refrigerant squirting out of the pipes could ignite or cause eye injury.
- If a leak is detected, avoid any naked flames or potential sources of ignition and ventilate the area for several minutes.
- Please tie the extra length of the power cord at the back of the refrigerator and make sure you don't trap the mains cable beneath the fridge when putting it in position.
- C-Pentane is used as an insulation blowing gas. The flammable insulation blowing gasses require a special disposal procedure. Do not try to separate any components from the refrigerator.
- For detailed information on product disposal, please contact the relevant municipal body in charge of waste management, your waste disposal service, or the store where you bought the product.
- Do not allow children to play with the appliance kept for disposal, supervise the children so that they don't harm themselves by locking themselves in the refrigerator.
- After cleaning the shelves, ensure they are placed correctly into the grooves provided in the liner. The shelves should not touch the liner at the back. Ensure they are properly seated in the designated grooves. This will ensure proper refrigerator cooling in the lower section of the refrigerator & this will avoid condensation below the shelf.

4. INSTALLATION INFORMATION

F BEFORE USING THE APPLIANCE FOR THE FIRST TIME

- Before connecting the appliance to the main power source, please read carefully the instructions for use which describe the appliance and its correct and safe use.
- Check for any damage or irregularities on your appliance. If you find your appliance is damaged, notify the retailer from which you have purchased the appliance.
- Before connecting the appliance to the main power source, let the appliance rest in an upright position for a min. 4 hours. This will reduce the possibility of operation faults because of transportation on the cooling system.
- The appliance will operate correctly if the environment temperature is in the interval specified in the table.
- Note: The cooling performance and power consumption of the refrigerator may be affected by the ambient temperature, the door opening frequency, and the location of the refrigerator. We recommend the temperature settings as appropriate.
- After the installation, the appliance mains plug should be accessible.
- Do not place the refrigerator near other appliances or devices which radiate heat, such as a cooker, a stove, a room heater, water heater etc., and do not expose it to direct sunlight. The appliance should stand at least 3 cm away from an electric or gas cooker or at least 50 cm away from an oil or solid fuel stove. If the distance between such source of heat and the appliance is smaller, use an insulating panel.
- Connect the appliance to the main power source using the power cord. The wall outlet should be fitted with a ground contact (safety socket). Nominal voltage and frequency are indicated on the rating plate/label with basic information on the appliance.
- The appliance must be connected to the main power source and grounded in compliance with the electrical standards and regulations.

CLASS	AMBIENT TEMPERATURE RANGE (°C) IEC 62552 (ISO 15502)
SN (Subnormal)	From +10°C to +32°C
N (Normal)	From +16°C to +32°C
ST (Subtropical)	From +16°C to +38°C
T (Tropical)	From +16°C to +43°C


Table-1



4. INSTALLATION INFORMATION

G DESCRIPTION OF THE APPLIANCE


Interior Features of DC 187L / 197L / 206L

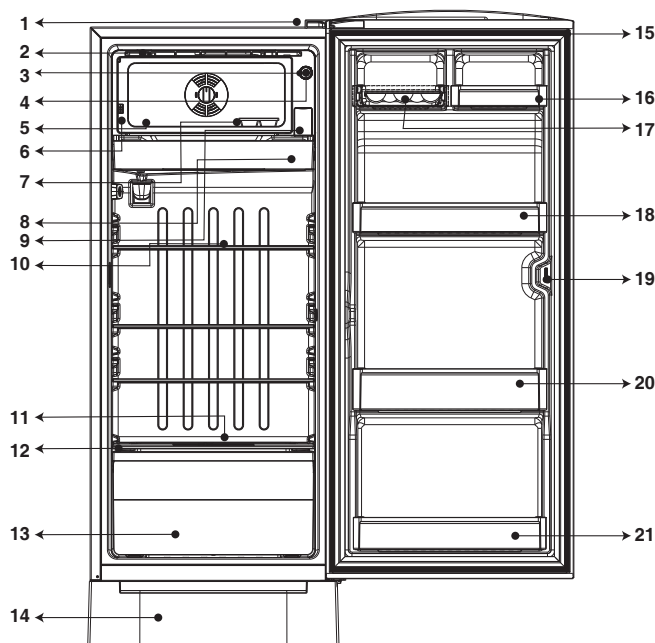

- This manual covers different models. The appliance purchased by you may have some or all of the above features.

- DOOR HINGE COVER
- FREEZER FRAME
- TEMPERATURE CONTROL KNOB
- DEFROST BUTTON
- FREEZER BACK PLATE
- FREEZER DOOR
- ICE TRAY
- CHILL TRAY
- LIGHT COVER
- TOUGHENED GLASS SHELF
- HUMIDITY CONTROL SLIDER
- HEALTHY FRESH CRISPER COVER
- HEALTHY FRESH CRISPER
- PEDESTAL
- GASKET
- MULTI USE HALF BIN
- EGG TRAY
- FULL BIN
- DOOR LOCK
- XL BOTTLE BIN
- BOTTOM BIN

Interior Features of DC 222L / DC 251L

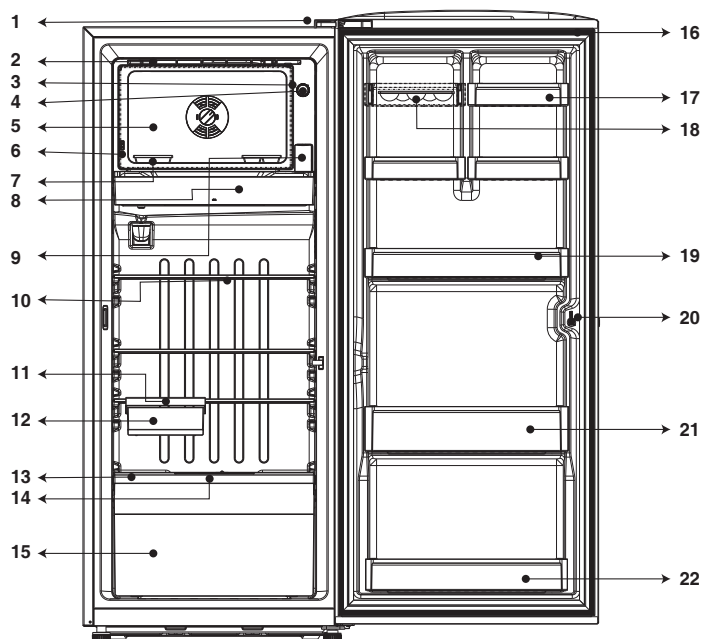

- This manual covers different models. The appliance purchased by you may have some or all of the above features.

- DOOR HINGE COVER
- FREEZER FRAME
- TEMPERATURE CONTROL KNOB
- DEFROST BUTTON
- FREEZER BACK PLATE
- FREEZER DOOR
- ICE TRAY
- CHILL TRAY
- LIGHT COVER
- TOUGHENED GLASS SHELF
- SLIDE BIN FRAME
- SLIDE BIN TRAY
- HEALTHY FRESH CRISPER COVER
- HUMIDITY CONTROL SLIDER
- HEALTHY FRESH CRISPER
- GASKET
- MULTI USE HALF BIN
- EGG TRAY
- FULL BIN
- DOOR LOCK
- XL BOTTLE BIN
- BOTTOM BIN

H INSTALLATION OF REFRIGERATOR

STEP 1: GUIDELINES FOR SELECTING REFRIGERATOR INSTALLATION SITE

- Install the appliance in a dry and well ventilated room.
- Solid and level floor**
- Uneveled floor will cause vibration and noise while operating the refrigerator.
 - The Refrigerator should not be installed on the floor covered with carpet.
 - Adjust the refrigerator leveling legs as per the floor to prevent issues like door misalignment, refrigerator malfunctioning.
- Shady and humid place**
- Avoid placing the refrigerator to direct sunlight, near to heat source such as gas stove etc. as it can weaken the refrigerator cooling performance.
 - Avoid placing the refrigerator close to a sink and near a water source that can cause rust and corrosion.
 - Avoid locations where moisture can cause electrical problems.

- Avoid placing the refrigerator just beneath the ceiling fan and in front of air cooler as it may cause increased frost accumulation inside the freezer and condensation /water droplets deposition inside the refrigerator.

The space required for installing the appliance is shown below. (unit: mm)

More than 100 mm from left, right, back sides and 250 mm from top is required for good ventilation. Insufficient space causes noise due to vibration, weakening of refrigerating cooling and waste of electricity.


- Remove all packing material from inside and outside of the refrigerator like carton/thermocool /tapes etc.
- Wait for 4 hours for product standing before Plug-In. This will ensure proper functioning of refrigerator as compressor oil will settle and compressor gas will get stabilized.

Refer Table 2 for dimensions

Model	A	B	C	D	E
DC 187L	1102	927	534	535	1224
DC 197L	1102	927	534	535	1274
DC 206L	1102	927	534	535	1329
DC 222L	1167	1018	554	580	1397
DC 251L	1167	1018	554	580	1537

Note : All the dimensions are in mm.

Table-2

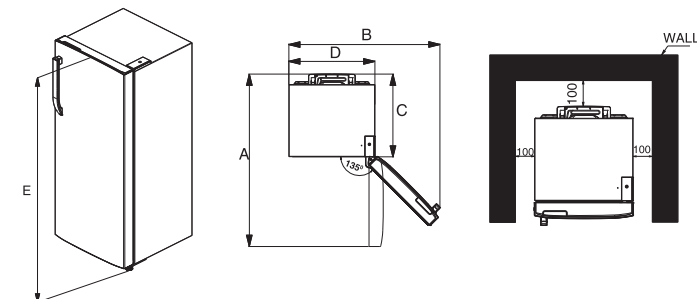


Caution: please tie the extra length of the power cord at the back of the refrigerator and make sure you don't trap the mains cable beneath the fridge when putting it in position.

STEP 2: PROTECT FLOORING WHILE INSTALLATION

- The surface to install the refrigerator must be strong enough to support a fully loaded refrigerator.
- To protect the floor, put a large piece of cardboard on each leg of the refrigerator along the movement path of the Refrigerator
- Once the refrigerator is in its final position remove cardboard, do not move refrigerator unless necessary to protect the floor.

STEP 3: ADJUST THE LEVELING FEET

- There are two levelling legs under each front corner of the refrigerator.
- Turn levelling feet clockwise to raise the refrigerator and turn it anti-clockwise to lower it.
- Use shims under the rear corners if necessary

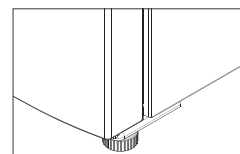



STEP 4: CONNECTING APPLIANCE TO POWER SOURCE

By completing the following steps, the refrigerator should be fully functioning.

- Plug the power cord into the wall socket to turn the refrigerator ON.
- Open the door to check the interior light is ON.
- For the first-time start, keep the knob position between 2 and 4. If any cooling adjustments are needed, adjust accordingly.
- Wait until the refrigerator reaches the set temperature. Now the refrigerator is ready for use.

HOME INVERTER

Home inverter Specifications.

For Standard Compressor - 2000VA Capacity along with 120Ah Capacity battery.



For Inverter Compressor - 1500VA Capacity along with 120Ah Capacity battery.

Notes:

1. Inverter should be in "ON" condition and battery shall be fully charged.
2. Ensure Refrigerator power supply socket is connected to the inverter supply.
3. While using home inverter, the refrigerator will work on basic cooling requirement.
4. Depending on the number of appliances connected to inverter, it may affect on the performance of the refrigerator.
5. For better performance of refrigerator, it is suggested to switch off other connected appliances.
6. It is suggested to check the quality of food before consumption.
7. Frozen food items may get soften like Ice cream, Green Peas etc when appliance is connected to home inverter, so it is suggested to change the temperature setting accordingly.
8. When starting the refrigerator for the first time run the refrigerator for 12 hours without any load/object inside the refrigerator (without food item, water bottle, ice tray etc).

I PEDESTAL INSTALLATION GUIDE

1. Pedestal Basket
2. Pedestal Bottom Base
3. Provision for Levelling leg insertion
4. Refrigerator
5. Levelling Leg
6. Pedestal installed refrigerator

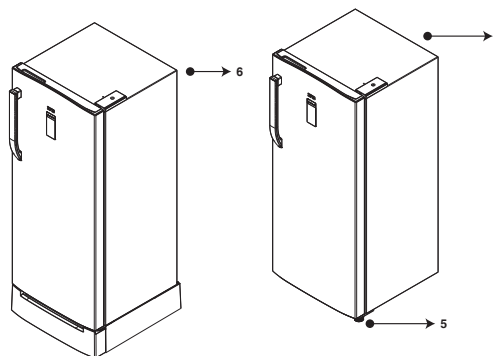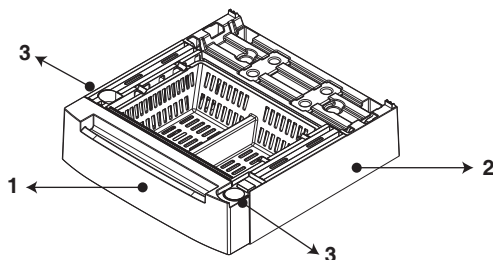

- Unpack the pedestal box and take out the pedestal.
- Choose an appropriate location for installing the refrigerator and place the pedestal there.
- Ensure that the pedestal is placed on a flat surface.
- Carefully lift the refrigerator and place the legs exactly on the space provided in the pedestal.
- After installation, ensure that the gaps on both sides of the refrigerator are even.
- Switch on the power supply.

- Avoid moving the refrigerator once the pedestal is installed as it can damage either the pedestal or unbalancing the Refrigerator leading it to fall.
- In case of the refrigerator being used without a pedestal, check whether both legs of the refrigerator are placed correctly and leveled properly with the ground.
- Caution: The Refrigerator must always be unplugged from any power source before & during the installation of pedestal

J INSTRUCTIONS FOR RELOCATING THE REFRIGERATOR

- Empty the Refrigerator before relocating.
- Defrost the fridge, and wipe the refrigerator with a clean dry cloth.
- Unplug the refrigerator. Remove the power cord cable and secure it with a tie belt.
- Protect the floor- refer to the instructions mentioned in installation of appliance: step 2 Floor protection instructions to be followed while moving the appliance.

- Reassemble and reconnect in the new house.
- Handover the appliance along with the manual to the new user.
- Relocation of the appliance in the same house or within 10 kms vicinity is permissible, if product is relocated in different state, then the manufacturer will not be responsible for the product malfunctioning, also the product warranty will be voided.

5. SERVICE INFORMATION

REPLACEMENT OF LED LAMP:

- In case of LED Lamp failure which is not user serviceable part, Contact an authorized IFB Service Centre which is near to your locality.

GASKET REMOVAL/DISCARDING METHOD:

- Gently hold one corner of the gasket and pull out the gasket from its grooves.

- To insert back, place the gasket along the groove first and then push it back in.

POWER CORD:

- Contact the service centre to replace Power Cord if you find damage, heating up ETC.
- Do not try to replace the cord or attempt service on your own.

6. SPECIAL FEATURES

CONVERTI-COOL WITH COPPER BOOST*

Customer can choose to control according to their requirement for;

- Fast Bottle cooling time & Energy Saving
- Fast Ice Making & More thermal retention

ALUMINIUM INFUSED ICE TRAY

Aluminium particles are infused into the Ice tray to facilitate faster ice making.

ANTIBACTERIAL GASKET

Antibacterial gaskets help in preventing the growth of bacteria and mold.

CABINET SLIDING BIN *

A convenient storage space designed to slide into any location on the refrigerator shelf as chosen by the customer.

MOISTURE BALANCED CRISPER

Honeycomb structure on crisper cover helps in maintaining moisture levels for fruits/vegetable freshness.

WHITE LED BULB*

The refrigerator compartment is illuminated by a bright white light that is visually pleasing to the eyes.

CHILLER WITH MOISTURE CONTROL

Chiller with honeycomb structure retains the moisture formed below the chiller.

TOUGHENED GLASS SHELVES

Toughened Glass shelves can sustain a load which is ideal for larger/heavier utensils.

PEDESTAL WITH DRAWER *

Easily accessible pedestal drawer that can store up to 5 kg of onions & potatoes.

LOCK

A push-and-rotate key mechanism is provided to secure the refrigerator, which is simple and easy to use.


* In select models only

7. TEMPERATURE CONTROL SETTINGS & ICE MAKING

OPERATIONS

1. TEMPERATURE SETTINGS

Temp Control

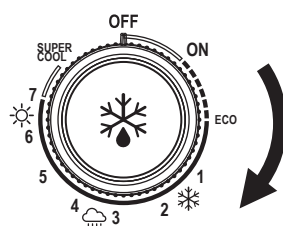

Winter 1-2 | Monsoon 2-4 | Summer 4-7



Press Defrost button in case of excess ice or every three days



Do not use sharp object to remove ice

When you require Fast ice or when large quantities of foods are to be stored inside, rotate the temperature control knob provided in the freezer to Summer (5-6) setting. When quantity of foods stored in refrigerator are low, rotate the temperature control knob provided in the freezer to Winter (1-2) setting. To account for the various factors that can influence the refrigerator temperature such as the position, ambient temperature, frequency of door openings, relative humidity, temperature at which food is stored etc, change the settings accordingly with temperature control knob. Setting the temperature lower than the requirement is not recommended as it increases energy consumed by the refrigerator

ECO MODE:

This mode saves power consumption and also called as Vacation Mode.

**Recommended not to use this mode in case of high usage condition or in Summer.

SUPER COOL:


This mode is used to cool the items faster in Refrigerator compartment, also you can say party Mode.

**Recommended not to use this mode for 6 hours max. in case of Refrigerator compartment has load.






7. TEMPERATURE CONTROL SETTINGS & ICE MAKING

2. DEFROSTING

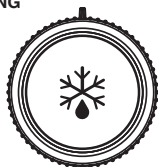

Frost formation happens inside the freezer due to the condensation of surrounding moist air on the cold surfaces of freezer. Accumulation of excess frost acts as an insulator thus reducing the cooling efficiency of refrigerator. Before defrosting, it is necessary to remove all the stored food items from the freezer as well as the chiller which is placed below the freezer area. Frost thickness should not exceed red color defrost indicator cap in freezer. Push the button given on the center of the temperature control knob to initiate defrosting. Once initiated the frost will melt and changes into water which will then flow through designed path and gets collected on the defrost water tray provided at the back of refrigerator. Refrigerator will automatically start after completing defrosting process. It is advisable to perform defrosting after every three days. During hot & humid conditions you may increase the frequency of defrosting to reduce the frost content in freezer. Over accumulation of frost can lead to spillage of water from defrost water tray to ground/floor after defrosting. Strictly avoid the usage of any form of sharp edged tools such as knife, screw driver etc to scrape of frost present in the freezer as it can damage the evaporator circuit and hence the cooling process.

3. ICE MAKING

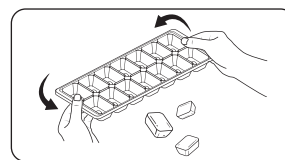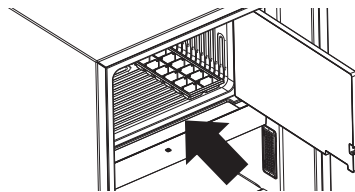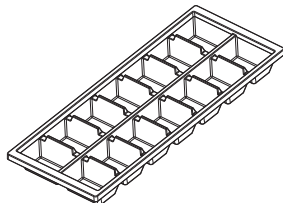


Gently fill the cubes to the top level in the given Ice tray with water. Open the Freezer door and place the Ice tray inside the freezer


8. FEATURE USAGE INFORMATION

CONVERTI COOL WITH COPPER BOOST


- Freezer back plate with damper mechanism is given for varying air flow from freezer to the refrigerator and providing freezer temperature control knob for customer flexibility.
- Improve Ice making & bowl cooling time in freezer compartment with Freeze Max position
- Improved bottle cooling speed & saving energy consumption in refrigerator compartment with Cool Max position.

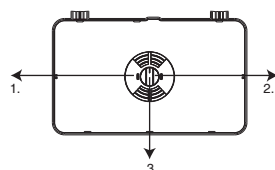

- Cool Max position
- Freeze Max position
- Knob

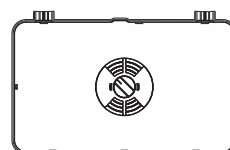


- Rotate the knob given in the Freezer backplate to Cool Max position to get the designed normal freezer temperature and sufficient cold air goes refrigerator compartment to improve bottle cooling speed and energy consumption.

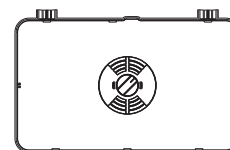

- Rotate the knob given in the Freezer backplate to Freeze Max position to get the freezer temperature much more colder temperature to improve freezing time inside Freezer

9. USER INTERFACE CONTROLS

The User Interface (UI) is used to select the cooling control (Bars shown on the Left Side of the UI), select different Modes (Modes shown on the Right Side of the UI) and special Modes (shown at the bottom of the UI).

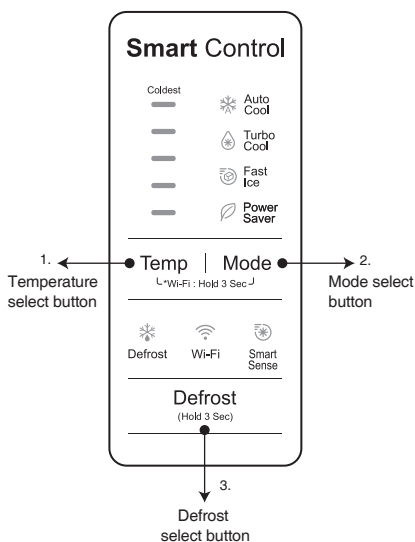

COOLING CONTROL SETTING

Press the Temp button to control the cooling control shown on the top left side of the display UI.

Coldest Setting - When all the bars glow it means the Coldest Setting i.e. for Summer.

Mid Setting - When three bar glows it means Mid setting i.e. for Monsoon.

Warmest Setting - When Single bar glows it means Warmest setting i.e. for Winter.



MODE SETTING

Press the Mode button, the current cooling mode will be changed. The setting mode switches in the order of "Flexi (Temp)

Auto Cool- Turbo Cool-Fast Ice-Power Saver-Smart Sense

For Wi-Fi Mode Selection:

Press & hold Temp & Mode for 3 seconds.



Auto Cool

Auto Cool - When Auto Cool mode is selected by Mode button, Auto Cool mode is activated. In auto mode, set temp will change automatically based on ambient temp/door opening pattern/internal load and product will maintain ideal storage refrigerator temp.



Turbo Cool

Turbo Cool - When Turbo Cool mode is selected by Mode button, Turbo Cool mode is activated. It is use for making refrigerator colder side in high usage condition. The Refrigerator set point temp adjust to coldest setting to get the high-cooling in Refrigerator compartment (Freezer back plate Knob Position : Min).



Fast Ice

Fast Ice - When select Fast Ice mode by Mode button, Fast Ice mode is activated. It is use for making ice faster, Refrigerator set point temp adjust to coldest setting to get the high-cooling in freezer compartment (Freezer back plate Knob Position : Max).



Power Saver

Power Saver Mode - When select Power Saver mode by using Mode button, Power Saver mode is activated. In this mode refrigerator will run at least cold condition like in case of very less usage which will make Refrigerator consume less electricity.



Smart Sense

SMART SENSE

Smart Sense will be activated automatically according to the Refrigerator Cooling requirement. When this mode is activated, the Smart Sense icon will turn ON. If the temp of refrigerator become high after door open/load increase or after power failure or door open, fast cool indicator turn on to indicate unit is working for pulldown the temp faster.

DEFROST

When the system needs defrost, the E-Defrost indicator LED lights up, press and hold the Defrost button for 3s to activate defrost. Once the defrost is activated, the E-Defrost indicator LED will turn off.

Defrost
(Hold 3 Sec)

WIFI FUNCTION

Press and hold the Temp and Mode buttons simultaneously for 3s to enable Wi-Fi function. After the Wi-Fi function is triggered, the Wi-Fi module starts to configure the network, and the Wi-Fi indicator LED turns off, flashes or lights up according to the network configuration state. In this mode, Customer can control remotely refrigerator through mobile/tablet via IFB app.

Temp | Mode
Wi-Fi: Hold 3 Sec



10. ERROR CODE DISPLAY

- When there is an error in the system, the display board will periodically display all errors and the current status (referring to the display of set temperature and mode) according to the table below.

Error Description	Error Code LED flashes	Error Indicating Area
Communication error	No Led Flashes	All Flashes
Freezer evaporator sensor error	LED1-LED5 Flashes	All Flashes
Ambient sensor error	LED1-LED6 Flashes	All Flashes
Main board power supply voltage lower than 90V	LED1-LED7 Flashes	All Flashes
Main board power supply voltage higher than 310V	LED1-LED8 Flashes	All Flashes
Any Compressor running error	LED1-LED9 Flashes	All Flashes

Table-3

When multiple errors occur, the display board alternately displays the normal interface and all error codes at intervals of 2s, like "normal interface"-"Error1"-"Error2"-"normal interface".

11. TROUBLESHOOTING GUIDE

Before calling for service, check for the following observations and their potential reasons And suggestions to try out:

Symptoms	Solution
Refrigerator does not work properly/does not get cold enough	<ul style="list-style-type: none">Check the refrigerator is plugged and switched ON power supply also check loose connections in the socket.Check that the refrigerator is placed in such a way that there are proper clearances on the side and top surfaces as mentioned above.Check if the refrigerator is exposed to direct sunlight or is in close proximity to Gas range / Stove/ OTG or any heat source.Check whether the temperature setting is at "Winter" condition, if it is then change setting back to "Monsoon / Summer" condition depending on your requirement.Check the air gaps behind the glass shelves are blocked due to excess storage inside the refrigerator.Check if the refrigerator loaded with hot food.Check if the door is kept opened.
Food freezes in the refrigerator compartment	<ul style="list-style-type: none">Check whether the temperature setting is at "Summer" condition, if it is then change settings back to "Winter / Monsoon" based on weather condition and your requirement.Check the placement of high liquid containing food (curries) near coldest area of the compartment.
Moisture formation outside the refrigerator	<ul style="list-style-type: none">Ensure that the refrigerator is not placed directly beneath ceiling fan.Moisture can be formed during the rainy season or through continuous hot and humid days. Wipe out the surface with a dry cloth.
Moisture formation inside the refrigerator (chill tray and freezer door)	<ul style="list-style-type: none">Water deposition on Freezer door/Chiller tray bottom side is due to frequent opening of the door/humid environment which is a normal phenomenon. It should be cleaned with a soft and dry cloth.Make sure that doors are not left open for long time if possible, reduce the frequency of back to back door openings which will increase the chances of moisture entry inside the refrigerator.Avoid placing moist food inside the refrigerator without lid.
Refrigerator sounds noisy	<ul style="list-style-type: none">Ensure adequate spacing behind refrigerator with the walls of room in which it is placed.Make sure that the floor is firm and refrigerator is levelled properly on it.
Sounds like water flowing in the refrigerator/ freezer section	<ul style="list-style-type: none">This sound is due to the Refrigerant R600a gas flow and it happens when compressor starts and stops which is part of normal operation of Refrigerator
Doors do not open easily	<ul style="list-style-type: none">Such case happens when you open the door right after closing it. Do not try to force the doors to open; wait for some time before trying again.
Side of the Refrigerator feels warm	<ul style="list-style-type: none">Side part of the appliance may feel warm because of the skin condenser provided to prevent moisture formation which is not a product failure.
Bad odor coming from inside the refrigerator	<ul style="list-style-type: none">Ensure that foods with strong odor are kept wrapped.Check if the food placed inside the refrigerator is spoiled/ near to spoil.Practice regular cleaning inside of the refrigerator to avoid bad odor.
Compressor noise	<ul style="list-style-type: none">You will hear a "drrr" sound when the compressor starts or stops working. This is normal.
Drip sound in the refrigerator.	<ul style="list-style-type: none">Drip sound is heard during defrost that is when the ice is melting and the water drops fall on the chill tray or drain tray. This is a normal process.

12. CLEANING & MAINTENANCE

CLEANING

- Cleaning and user maintenance shall not be done by children.
- Before cleaning, unplug the appliance from the power mains – switch off the appliance and unplug the power cord from the wall outlet.
- Remove all the food items stored before cleaning the refrigerator.
- Use a soft cloth to clean all surfaces. Cleaners that contain abrasive substances, acids, or solvents are not suitable for cleaning as they may damage the surface.
- Clean the appliance exterior with water or a mild appliance cleaner.
- Powder Coated and Aluminium surfaces may be cleaned with lukewarm water to which you have added a mild detergent.
- Use of cleaners with low alcohol content is allowed (e.g. window cleaners).
- Do not use cleaners containing alcohol for cleaning plastic materials. Spills of cooking oil, butter, etc. can cause plastic parts to crack.
- Appliance interior can be cleaned with lukewarm water to which you can add some vinegar. To keep the inside of the appliance clean without odor or dirt, regular cleaning is required at least once a month.
- Do not wash the parts of appliance interior equipment in a dishwasher as they may be damaged.
- A drainage system and a water collecting basin for discharging the water from thawed frost deposits are located underneath the cooling panel that cools the refrigerator interior.
- The water drain system and the opening may be clogged.
- Inspect them often and clean if necessary (e.g. with a plastic straw).
- Do not pour water on the refrigerator/freezer directly.
- Frost or ice build-up, 3–5 mm thick, will increase power consumption. Therefore, it should be regularly removed. Do not use any sharp objects, solvents, or sprays.


- The condenser unit mounted on the (exterior) back wall should always be kept clean, free of dust or deposits resulting from kitchen smoke or fumes. Occasionally clean the dust using a soft non-metal brush or a vacuum cleaner.
- Caution: Condenser unit will be hot to touch so do not touch it with bare hands.
- After cleaning, switch the appliance back on and insert the food.
- Wipe off the water from the floor, if there is any spillage while cleaning the refrigerator or during the defrost cycle.
- Caution needs to be taken during cleaning to prevent the entry of water into the electrical components such as light bulb, switch etc. Usage of acids, solvents or abrasive powders needs to be strictly avoided as it can tarnish the refrigerator surfaces.
- Ensure that the gasket is rightly placed and the door properly closed to prevent the entry of cockroaches & other insects that can be harmful to your stored food items.

Precautions to be followed while handling the refrigerator:

- Use door handles to open and close the refrigerator, it is not recommended to open the door holding door sides or
- Accessible gaps provided on the use, you can hurt your hand while following malpractices.
- Do not use excessive pressure on door handles, or hang any load on door like shopping bags etc, there is danger of refrigerator door misalignment or unbalanced products might fall off.
- Foods should not protrude from the shelves. They can fall and hurt your feet or not close the door properly affecting the performance of the refrigerator.
- Prevent overloading the door bin, as there is risk of bottles toppling off if they are not properly kept.
- Do not reach out your hands or legs under the Refrigerator (when cleaning under the refrigerator). You can be hurt by rough edges and parts under the refrigerator.


ACCESSORIES HANDLING & CARE

CHILLER

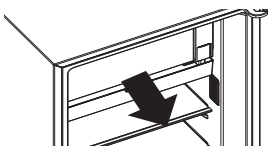


Gently hold the chiller provided in Refrigerator compartment from the front side. Tilt it slightly from the front side to down and take out the chiller slowly.

GLASS SHELVES

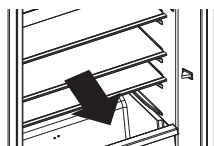


Gently hold the shelf provided in Refrigerator compartment from the front side properly. Tilt it slightly from the front side to down and take out the shelf slowly.

VEGETABLE CRISPER

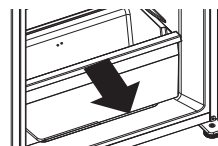

Gently hold the Vegetable crisper provision at the top of front wall. Now pull the vegetable crisper forward to fill vegetables or take out completely based on your requirement.

DOOR BINS

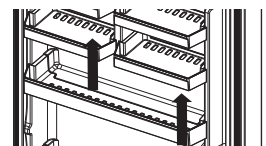

Gently hold the Door Bins provided in Refrigerator compartment from the side walls. Now lift the Door bin towards upward direction until it is out of its holding area.



13. HELPFUL HINTS

Suggestion for storing foods

- Always clean fruits and vegetables prior to refrigeration. They should be washed and wiped dry before storing.
- Packed foods should be wiped clean before storing as to avoid adjacent foods from spoiling.
- Do not refreeze food items once they have been thawed. This can cause loss of taste and nutrition.

In case of power failure


- Do not open and shut the door as long as you can. There is no problem storing the food inside for about 2-3 hours even in midsummer.
- In case of predicted power failure, do not store any more food and make as much ice as you can to put it on the upper shelf of the fresh food compartment. The inside would be kept cold.

When not using for a long time

- Clean the inside and leave the doors open for 2-3 days in order to prevent mold development or odor saturation.

- To get more space, you can remove drawers since it does not affect the thermal and mechanical characteristics.
- Your device is equipped with a maintenance free LED light. Any repair work on the lighting must only be carried out by a qualified electrician.
- Allow hot food to cool before storing in the refrigerator as it can spoil other food items and lead to higher energy consumption.
- Do not block Drain Funnel with food. Obstruction can cause uneven cooling within the refrigerator.
- Do not open the door frequently / Do not keep the door open for a long time as it can cause rise in temperature of the refrigerator/freezer compartment and also leads to higher energy consumption.
- For retaining freshness of vegetables (other than leafy vegetables) for longer durations, it is advisable to store them in food grade poly-bags.

14. DISPOSAL OF OLD APPLIANCE

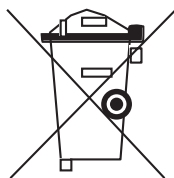

Packaging is made of environmentally friendly materials that can be recycled, disposed of, or destroyed without any hazard to the environment. The symbol on the product or its packaging indicates that the product should not be treated as normal household waste. The product should be taken to an authorized collection centre for waste electric and electronic equipment processing. Correct disposal of the product will help prevent any negative effects on the environment and health of people which could occur in case of incorrect product removal. For detailed information on removal and processing of the product, please contact the relevant municipal body in charge of waste management, your waste disposal service, or the store where you bought the product. For more detailed information about recycling

contact IFB Care. This way, the appliance recycling organized by IFB Care will be done according to E-waste Rules published by the Government of India.

Instructions for removing an obsolete appliance:

- 1) Disconnect the appliance from the power mains.
- 2) Do not damage the refrigerant circuit to prevent pollution.
- 3) C-Pentane is used as an insulation blowing gas. The flammable insulation blowing disposal procedure. Do not try to separate any components from the refrigerator.
- 4) Do not allow children to play with the appliance.

This product is environmentally sound and sustainable free from Pb, Cd, Cr+6, Hg, PBBs and PBDEs
Restricted in accordance with the Directive.

15. WARRANTY CARD

IFB REFRIGERATORS, TERMS AND CONDITIONS

For safety and as a standard operating practice, it is important to install the Refrigerator with an MCB provided supply, with proper provision of electrical earthing done. Always ensure that the MCB is in ON condition and not in a bypass condition.

ONE YEAR STANDARD WARRANTY*

IFB Refrigeration Ltd (IFB) (the Company) warrants to the original domestic purchaser of this Refrigerator (appliance) that it is free from defects in workmanship and materials. During 12 months, starting from the date of purchase of the Refrigerator, all the parts of the Refrigerator which prove to be defective as a result of workmanship and/or materials, shall be replaced or repaired free of charge (except for the parts described in this warranty as beyond the scope of the above) on intimation to the Company/Company's authorized service centre nearest to the place where the appliance is installed. Plastic and rubber parts, sheet metal/paint affected by environment led rusting on exposure are not covered under the warranty.

ADDITIONAL WARRANTY PARTS

Compressor after Expiry of Standard Warranty of 1 year, an additional warranty of 9 years will be provided on the compressor. During this additional warranty period, IFB will repair/replace the compressor. This is subject to an inspection by IFB of the compressor and proof that the Refrigerator has been serviced only by IFB's authorized service franchisee. The repair/replacement shall be valid for manufacturing defects only, gas charging and labour costs will be chargeable.

FOUR YEARS SUPER WARRANTY ON PRODUCT*

Super Warranty of 4 years may be purchased by the customer by paying additional amount as Prevalent at the time of installation/purchase (as per the Company's prevalent scheme) or by calling IFB customer care. This will be valid only within 90 days of the product purchased. During this super warranty period, functional parts other than sheet metal and plastic parts shall be covered for replacement/repairs. Any additional expenses or visit charges shall be extra and is not covered under the scope of super warranty. This will be subject to inspection by IFB and proof that the Refrigerator has been serviced only by the authorized service franchisee of IFB. Plastic and rubber parts, sheet metal/paint affected by environment led rusting on exposure are not covered under the scope of super warranty. Super warranty shall be applicable on models as decided by IFB.

Note: IFB shall not honour any warranty/super warranty related claims for the Refrigerator installed and/or serviced/repairs or parts modified by unauthorized service providers.

TERMS AND CONDITIONS

The one-year warranty and additional four years Super Warranty are subject to the following

1. This warranty is not valid in case of the following events:
 - a) The warranty card is not fully filled in and signed at the time of purchase/ Company's authorized franchisee/dealer/service engineer.
 - b) If the completed warranty card is not presented to the authorized personnel at the time of service/repair. Customers may be asked to furnish proof of ownership and date of purchase by showing the sales receipt/purchase invoice. The warranty claims as accepted will be only for the original purchaser.
 - c) The warranty is non-transferable to anyone who subsequently purchases, leases or otherwise obtains the product from the original purchaser. If the appliance is not used in accordance with the manufacturer's instructions given in the user manual.
 - d) If the Refrigerator has been installed, serviced, repaired, opened or tampered with by unauthorized personnel.
 - e) If defects arise/are caused by accidents, alteration, misuse, neglect, abuse, substitution of original components with spurious/non genuine components, use of/application of harmful chemicals on machine, attack by household pest/rodents, fire, flood, earthquake, lightning, and/or any other acts of God/natural calamities.
 - f) If defects arise with optional accessories like stabilizer, covers, extended power cables, external refrigerator stands, control knobs, electrical plugs, other detachable parts etc.
 - g) If damages occur owing to improper electrical circuits outside the Refrigerator or by any external electrical supply thereof. This includes failures due to erratic power supply, fluctuations beyond rated voltage + 10% voltage and frequency of 50 Hz + 3%, AC power supply systems.
- h) If the Refrigerator is run frequently on power back-up or solar power.
- i) If the Refrigerator serial number on the appliance is defaced, missing or altered.
- j) If the appliance is taken out of the territory of the Republic of India.
- k) This warranty will automatically terminate on the expiry of the warranty period of 12 months or extended warranty (optional) as per the scheme, even if the Refrigerator has not been in use for any time during the warranty period or extended warranty period for any reason.
2. This Warranty does not cover normal wear and tear, any type of corrosion, rust, stains, scratches, peeling paint, dents on the body. Also, the company is not liable for any incidental or consequential damages.
3. Parts replaced or repaired under Standard and Extended warranties are warranty throughout the remaining of the original warranty period.
4. The company is not liable for any delay in servicing owing to reasons beyond the control of the company or any of its authorised service centres.
5. The warranty is not applicable if the Refrigerator is used for commercial / semi commercial purposes.
6. For any service under warranty beyond city/town/municipal limits from the Company/authorised service centres, a fixed charge as per the Company's norm will be collected from the customer. In addition to the actual to and from charges by the shortest route. Alternatively, the customer may bring the appliance to the nearest service centre for carrying out the necessary repairs, at customers own cost.
7. The warranty does not cover regular maintenance.

CUSTOMER DETAILS CUM WARRANTY CARD

Mobile No. _____ Customer copy (to be retained by customer)

Product Serial No. _____ Date of Purchase _____

Name _____

Address in Full _____

Telephone No. _____ Model No. _____

Dealer Name & Address _____

Customer's Signature & Date
(I accept the Terms & Conditions of warranty)

- www.ifbappliances.com
- customerservice@ifbglobal.com



RD221PRUSM001

Dealer's Signature with rubber Stamp



For any assistance, reach us at **IFB CARE** 080 695 45678 | 080 458 45678 or WhatsApp @91 9231004321